




PARTS INFORMATION

NB-411

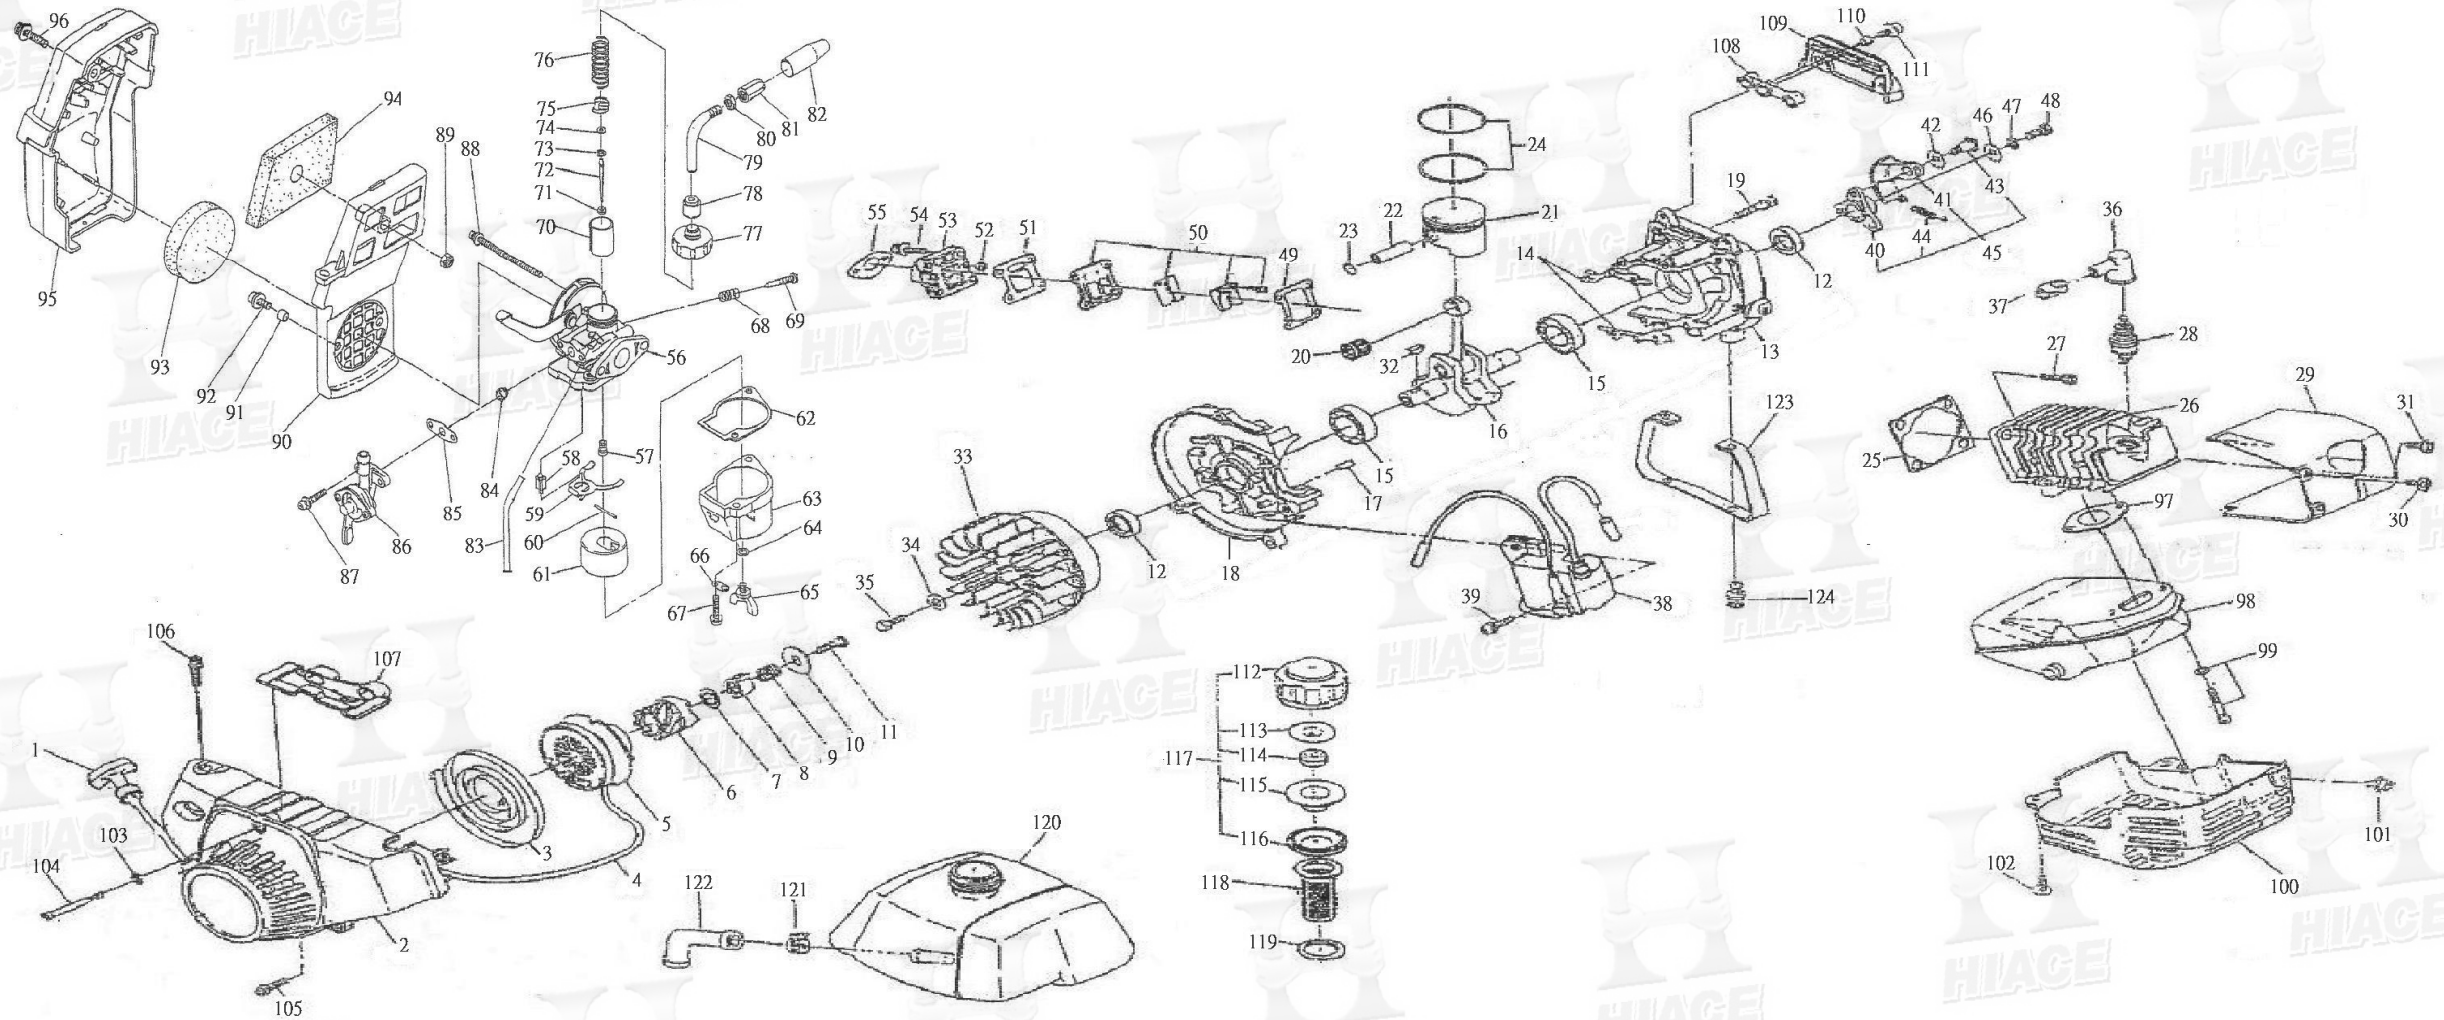

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.				
1	NB-411-001	Starter Handle	1	22	NB-411-022	Piston Ass'y	1	43	NB-411-043	Clutch Step Bolt	3	64	NB-411-064	O-Ring	1	85	NB-411-085	Fuel Cock Gasket	1	106	NB-411-106	Screw	1
2	NB-411-002	Recoil Starter Body	1	23	NB-411-023	Piston Ass'y	2	44	NB-411-044	Clutch Spring	3	65	NB-411-065	Wing Screw	1	86	NB-411-086	Fuel Cock Ass'y	1	107	NB-411-107	Damper	1
3	NB-411-003	Recoil Spring	1	24	NB-411-024	Piston Ring	2	45	NB-411-045	Clutch Ass'y	1	66	NB-411-066	Plate	1	87	NB-411-087	Screw	2	108	NB-411-108	Damper	1
4	NB-411-004	Starter Rope	1	25	NB-411-025	Cylinder Gasket	1	46	NB-411-046	Washer	1	67	NB-411-067	Screw	2	88	NB-411-088	Screw	2	109	NB-411-109	Fuel Tank Bracket	1
5	NB-411-005	Starter Rope Reel	1	26	NB-411-026	Cylinder	1	47	NB-411-047	Spring Washer	1	68	NB-411-068	Spring	1	89	NB-411-089	Nut	1	110	NB-411-110	Spacer	2
6	NB-411-006	Ratchet	1	27	NB-411-027	Screw	4	48	NB-411-048	Screw	1	69	NB-411-069	Adjust Screw	1	90	NB-411-090	Air Cleaner Case	1	111	NB-411-111	Screw	2
7	NB-411-007	Washer	1	28	NB-411-028	Spark Plug	1	49	NB-411-049	Lead Valve Gasket	1	70	NB-411-070	Piston Valve	1	91	NB-411-091	Spacer	2	112	NB-411-112	Fuel Tank Cap	1
8	NB-411-008	Ratchet Guide	1	29	NB-411-029	Engine Cover	1	50	NB-411-050	Lead Valve Ass'y	1	71	NB-411-071	Packing	1	92	NB-411-092	Screw	2	113	NB-411-113	Cap Inner Plate	1
9	NB-411-009	Friction Spring	1	30	NB-411-030	Screw	1	51	NB-411-051	Insulator Gasket	1	72	NB-411-072	Jet Needle	1	93	NB-411-093	Circle Sponge	1	114	NB-411-114	Cap Sponge	1
10	NB-411-010	Washer	1	31	NB-411-031	Screw	1	52	NB-411-052	Nut	2	73	NB-411-073	E-Ring	1	94	NB-411-094	Trapezoid Sponge	1	115	NB-411-115	Cap Inner	1
11	NB-411-011	Bind Screw	1	32	NB-411-032	Wood-Ruff Key	1	53	NB-411-053	Insulator	1	74	NB-411-074	Packing	1	95	NB-411-095	Air Cleaner Cover	1	116	NB-411-116	Cap Inner Packing	1
12	NB-411-012	Oil Seal	2	33	NB-411-033	Magneto Rotor	1	54	NB-411-054	Screw	2	75	NB-411-075	Spring Plate	1	96	NB-411-096	Screw	1	117	NB-411-117	Fuel Tank Cap Ass'y	1
13	NB-411-013	Crank Case (A)	1	34	NB-411-034	Washer	1	55	NB-411-055	Carburetor Gasket	1	76	NB-411-076	Throttle Valve Spring	1	97	NB-411-097	Muffler Gasket	1	118	NB-411-118	Fuel Filter	1
14	NB-411-014	Crank Case Gasket	1	35	NB-411-035	Screw	1	56	NB-411-056	Carburetor Body	1	77	NB-411-077	Mixing Cap	1	98	NB-411-098	Muffler	1	119	NB-411-119	Fuel Fileter Gasket	1
15	NB-411-015	6202 C3 Ball Bearing	2	36	NB-411-036	Spark Plug Cap	1	57	NB-411-057	Main Jet	1	78	NB-411-078	Cap	1	99	NB-411-099	Screw	2	120	NB-411-120	Fuel Tank	1
16	NB-411-016	Crank Shaft	1	37	NB-411-037	Spark Plug Cap Spring	1	58	NB-411-058	Needle Ass'y	1	79	NB-411-079	Cable Guide	1	100	NB-411-100	Muffler Cover	1	121	NB-411-121	Hose Clamp	1
17	NB-411-017	Pin	2	38	NB-411-038	Ignition Coil	1	59	NB-411-059	Float Arm	1	80	NB-411-080	Nut	1	101	NB-411-101	Screw	1	122	NB-411-122	Tube Fuel	1
18	NB-411-018	Crank Case (B)	1	39	NB-411-039	Screw	2	60	NB-411-060	Straight Pin	1	81	NB-411-081	Cable Adjuster	1	102	NB-411-102	Screw	1	123	NB-411-123	Stand	1
19	NB-411-019	Screw	4	40	NB-411-040	Clutch Seat	1	61	NB-411-061	Float	1	82	NB-411-082	Cap	1	103	NB-411-103	Washer	1	124	NB-411-124	Screw	2
20	NB-411-020	Needle Bearing	1	41	NB-411-041	Clutch Shoe	3	62	NB-411-062	Float Body Gasket	1	83	NB-411-083	Hose	1	104	NB-411-104	Screw	1	125			
21	NB-411-021	Piston Ass'y	1	42	NB-411-042	Bow Washer	3	63	NB-411-063	Float Body	1	84	NB-411-084	Filter	1	105	NB-411-105	Screw	1	126			