




PARTS INFORMATION

TL-33L

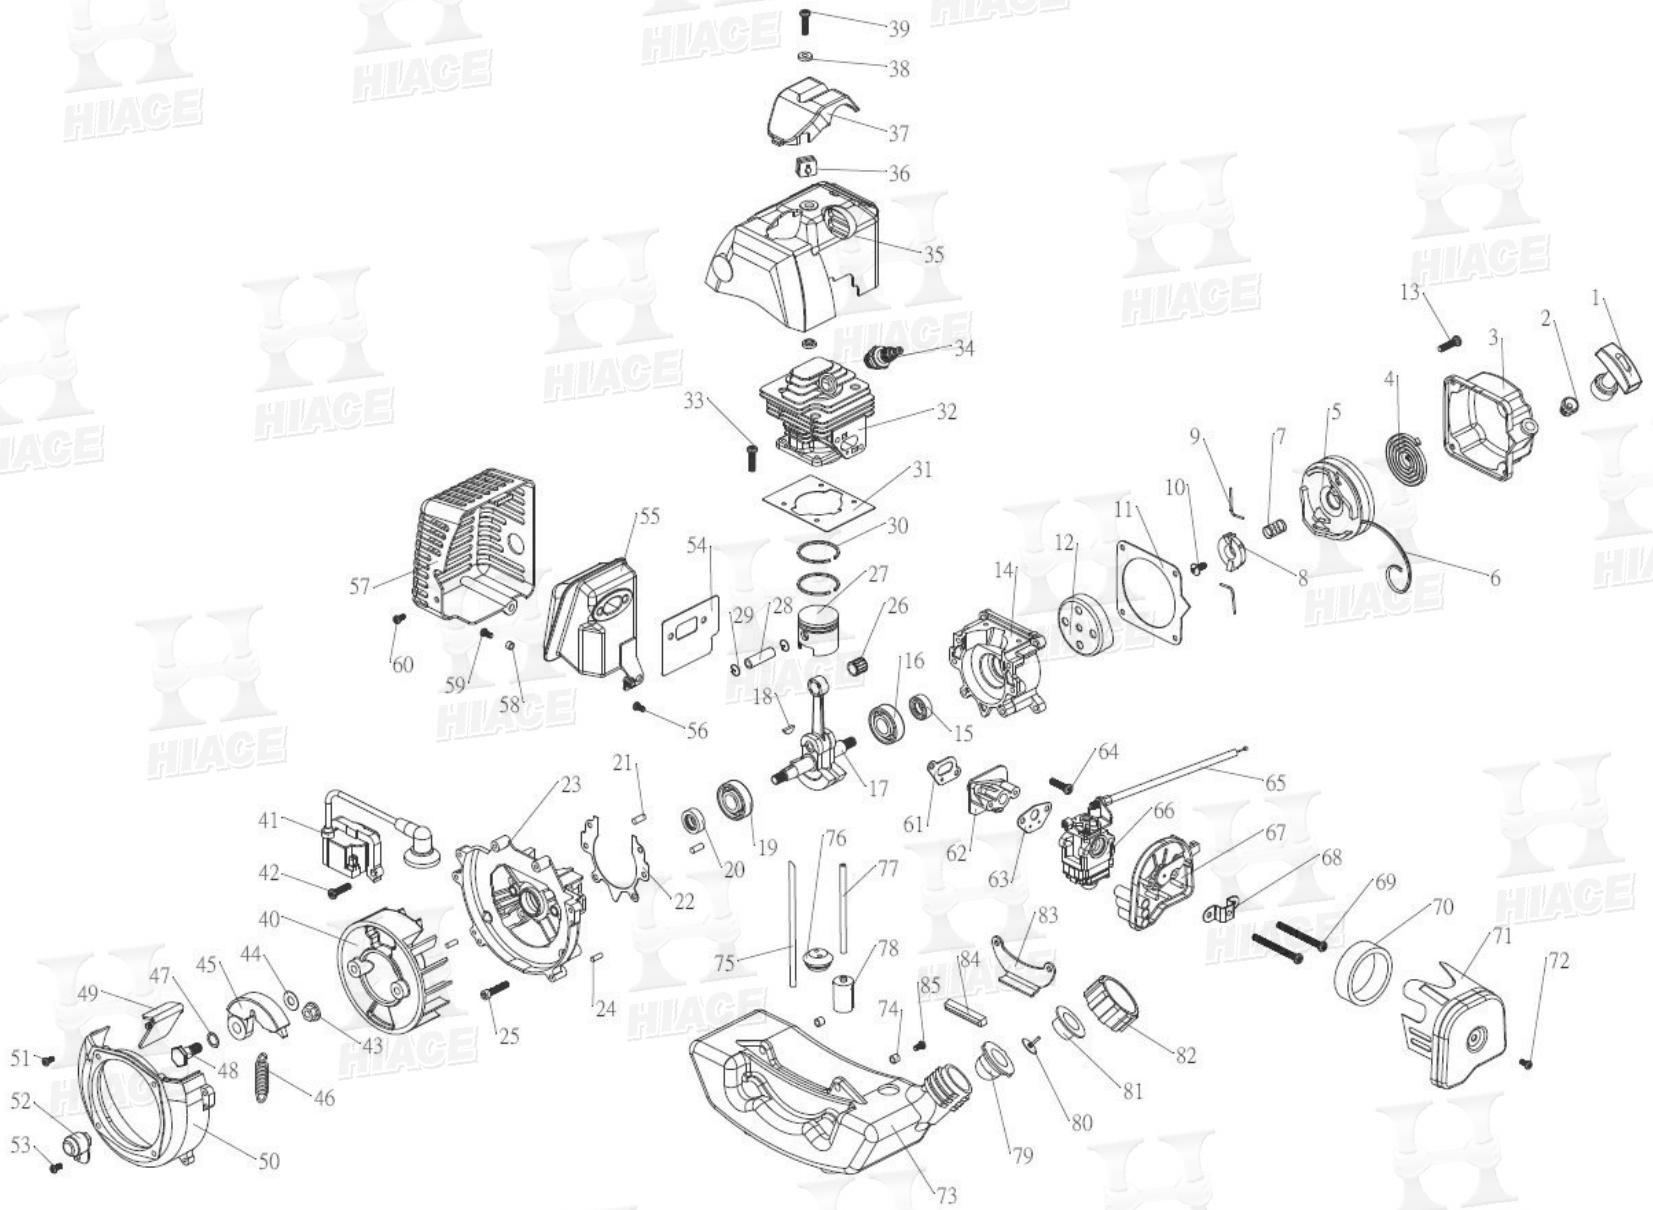


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	TL-33L-001	Starter Handle	1	31	TL-33L-031	Cylinder Gasket	1	61	TL-33L-061	Inlet Mainifold Gasket	1
2	TL-33L-002	Insulator	1	32	TL-33L-032	Cylinder	1	62	TL-33L-062	Inlet Mainifold	1
3	TL-33L-003	Recoil Starter Body	1	33	TL-33L-033	Screw	4	63	TL-33L-063	Diaphragm Carburetor Gasket	1
4	TL-33L-004	Recoil Spring	1	34	TL-33L-034	Spark Plug	1	64	TL-33L-064	Screw	2
5	TL-33L-005	Starter Rope Reel	1	35	TL-33L-035	Cylinder Protector	1	65	TL-33L-065	Throttle Wire	1
6	TL-33L-006	Starter Rope	1	36	TL-33L-036	Clamp, Coil	1	66	TL-33L-066	Diaphragm Carburetor	1
7	TL-33L-007	Starter Pawl	1	37	TL-33L-037	Cylinder Protector Cap	1	67	TL-33L-067	Air Cleaner Body	1
8	TL-33L-008	Pawl Holder	1	38	TL-33L-038	Space, Cylinder Protector Cap	2	68	TL-33L-068	Air Cleaner Holder	1
9	TL-33L-009	Clip	2	39	TL-33L-039	Screw	1	69	TL-33L-069	Screw	2
10	TL-33L-010	Starter Screw	1	40	TL-33L-040	Magneto Rotor	1	70	TL-33L-070	Air Cleaner Sponge	1
11	TL-33L-011	Starter Gasket	1	41	TL-33L-041	Ignition Coil	1	71	TL-33L-071	Air Cleaner Cap	1
12	TL-33L-012	Starter Pulley	1	42	TL-33L-042	Screw	2	72	TL-33L-072	Screw	1
13	TL-33L-013	Screw	4	43	TL-33L-043	Nut	2	73	TL-33L-073	Fuel Tank	1
14	TL-33L-014	Crank Case (B)	1	44	TL-33L-044	Washer	2	74	TL-33L-074	Collar	2
15	TL-33L-015	Oil Seal 12 22 7	1	45	TL-33L-045	Clutch Arm Comp.	2	75	TL-33L-075	Oil Pipe	1
16	TL-33L-016	Ball Bearing 6201 C3	1	46	TL-33L-046	Clutch Spring	1	76	TL-33L-076	Hose Seat	1
17	TL-33L-017	Crank Shaft	1	47	TL-33L-047	10MM Wavy Washer	2	77	TL-33L-077	Oil Pipe	1
18	TL-33L-018	Wood-Ruff Key	1	48	TL-33L-048	Clutch Step Bolt	2	78	TL-33L-078	Oil Cleaner	1
19	TL-33L-019	Ball Bearing 6201 C3	1	49	TL-33L-049	Flash Pan	1	79	TL-33L-079	Tank Inner Compressor	1
20	TL-33L-020	Oil Seal 12 22 7	1	50	TL-33L-050	Fan Case	1	80	TL-33L-080	Tank Cap Sponge	1
21	TL-33L-021	4*11.8 Pin	2	51	TL-33L-051	Screw	2	81	TL-33L-081	Tank Inner Cap	1
22	TL-33L-022	Crank Case Gasket	1	52	TL-33L-052	Stop Switch (S)	1	82	TL-33L-082	Tank Cap	1
23	TL-33L-023	Crank Case (A)	1	53	TL-33L-053	Screw	2	83	TL-33L-083	Fuel Tank Holder	1
24	TL-33L-024	4*11.8 Pin	2	54	TL-33L-054	Muffler Gasket	1	84	TL-33L-084		
25	TL-33L-025	Screw	4	55	TL-33L-055	Muffler	1	85	TL-33L-085	Screw	2
26	TL-33L-026	Needle Bearing	1	56	TL-33L-056	Screw	1				
27	TL-33L-027			57	TL-33L-057	Muffler Protector	1				
28	TL-33L-028	Piston	1	58	TL-33L-058	Collar	1				
29	TL-33L-029			59	TL-33L-059	Screw	1				
30	TL-33L-030	Piston Ring	2	60	TL-33L-060	Screw	1				



PARTS INFORMATION

TL-43L

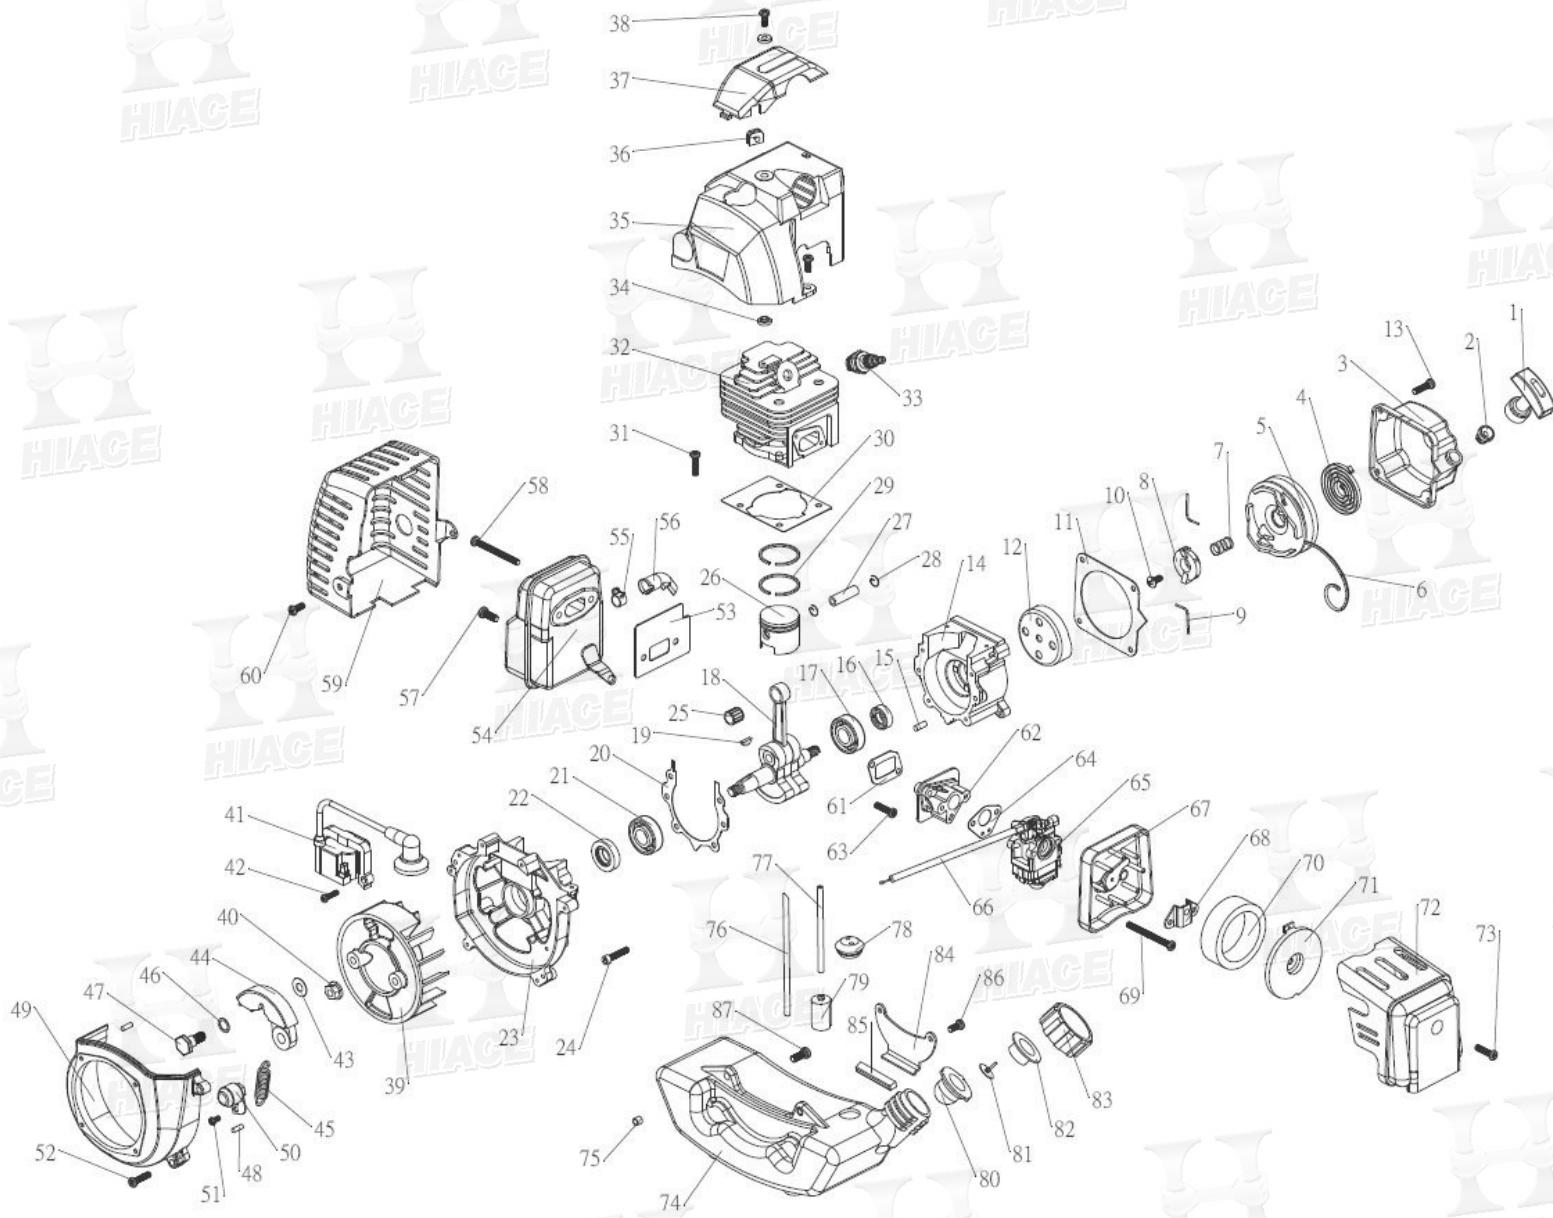


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	TL-43L-001	Starter Handle	1	31	TL-43L-031	Screw	4	61	TL-43L-061	Inlet Mainifold Gasket	1
2	TL-43L-002	Insulator	1	32	TL-43L-032	Cylinder	1	62	TL-43L-062	Inlet Mainifold	1
3	TL-43L-003	Recoil Starter Body	1	33	TL-43L-033	Spark Plug	1	63	TL-43L-063	Screw	1
4	TL-43L-004	Recoil Spring	1	34	TL-43L-034	Space, Cylinder Protector Cap	2	64	TL-43L-064	Diaphragm Carburetor Gasket	1
5	TL-43L-005	Starter Rope Reel	1	35	TL-43L-035	Cylinder Protector	1	65	TL-43L-065	Diaphragm Carburetor	1
6	TL-43L-006	Starter Rope	1	36	TL-43L-036	Clamp, Coil	1	66	TL-43L-066	Throttle Wire	1
7	TL-43L-007	Starter Pawl	1	37	TL-43L-037	Cylinder Protector Cap	1	67	TL-43L-067	Air Cleaner Body	1
8	TL-43L-008	Pawl Holder	1	38	TL-43L-038	Screw	1	68	TL-43L-068	Air Cleaner Holder	1
9	TL-43L-009	Clip	2	39	TL-43L-039	Magneto Rotor	1	69	TL-43L-069	Screw	2
10	TL-43L-010	Starter Screw	1	40	TL-43L-040	Nut	1	70	TL-43L-070	Air Cleaner Sponge	1
11	TL-43L-011	Starter Gasket	1	41	TL-43L-041	Ignition Coil	1	71	TL-43L-071	Air Cleaner Middle Cap	1
12	TL-43L-012	Starter Pulley	1	42	TL-43L-042	Screw	2	72	TL-43L-072	Air Cleaner Cap	1
13	TL-43L-013	Screw	4	43	TL-43L-043	Washer	2	73	TL-43L-073	Screw	1
14	TL-43L-014	Crank Case (B)	1	44	TL-43L-044	Clutch Arm Comp.	2	74	TL-43L-074	Fuel Tank	1
15	TL-43L-015	Pin	2	45	TL-43L-045	Clutch Spring	1	75	TL-43L-075	Collar	2
16	TL-43L-016	12 22 7 Oil Seal	1	46	TL-43L-046	10MM Wavy Washer	2	76	TL-43L-076	Oil Pipe	1
17	TL-43L-017	Ball Bearing 6202 C3	1	47	TL-43L-047	Clutch Step Bolt	2	77	TL-43L-077	Oil Pipe	1
18	TL-43L-018	Crank Shaft	1	48	TL-43L-048	Pin	2	78	TL-43L-078	Hose Seat	1
19	TL-43L-019	Wood-Ruff Key	1	49	TL-43L-049	Fan Case	1	79	TL-43L-079	Oil Cleaner	1
20	TL-43L-020	Crank Case Gasket	1	50	TL-43L-050	Stop Switch	1	80	TL-43L-080	Tank Inner Compressor	1
21	TL-43L-021	Ball Bearing 6202 C3	1	51	TL-43L-051	Screw	1	81	TL-43L-081	Tank Cap Sponge	1
22	TL-43L-022	Oil Seal 15 30 7	1	52	TL-43L-052	Screw	3	82	TL-43L-082	Tank Inner Cap	1
23	TL-43L-023	Crank Case (A)	1	53	TL-43L-053	Muffler Gasket	1	83	TL-43L-083	Tank Cap	1
24	TL-43L-024	Screw	4	54	TL-43L-054			84	TL-43L-084	Fuel Tank Holder	1
25	TL-43L-025	Needle Bearing	1	55	TL-43L-055	Muffler	1	85	TL-43L-085		
26	TL-43L-026			56	TL-43L-056			86	TL-43L-086	Screw	2
27	TL-43L-027	Piston	1	57	TL-43L-057	Screw	1				
28	TL-43L-028			58	TL-43L-058	Screw	2				
29	TL-43L-029	Piston Ring	2	59	TL-43L-059	Muffler Protector	1				
30	TL-43L-030	Cylinder Gasket	1	60	TL-43L-060	Screw	1				



PARTS INFORMATION

RBC-5800-28C-R4

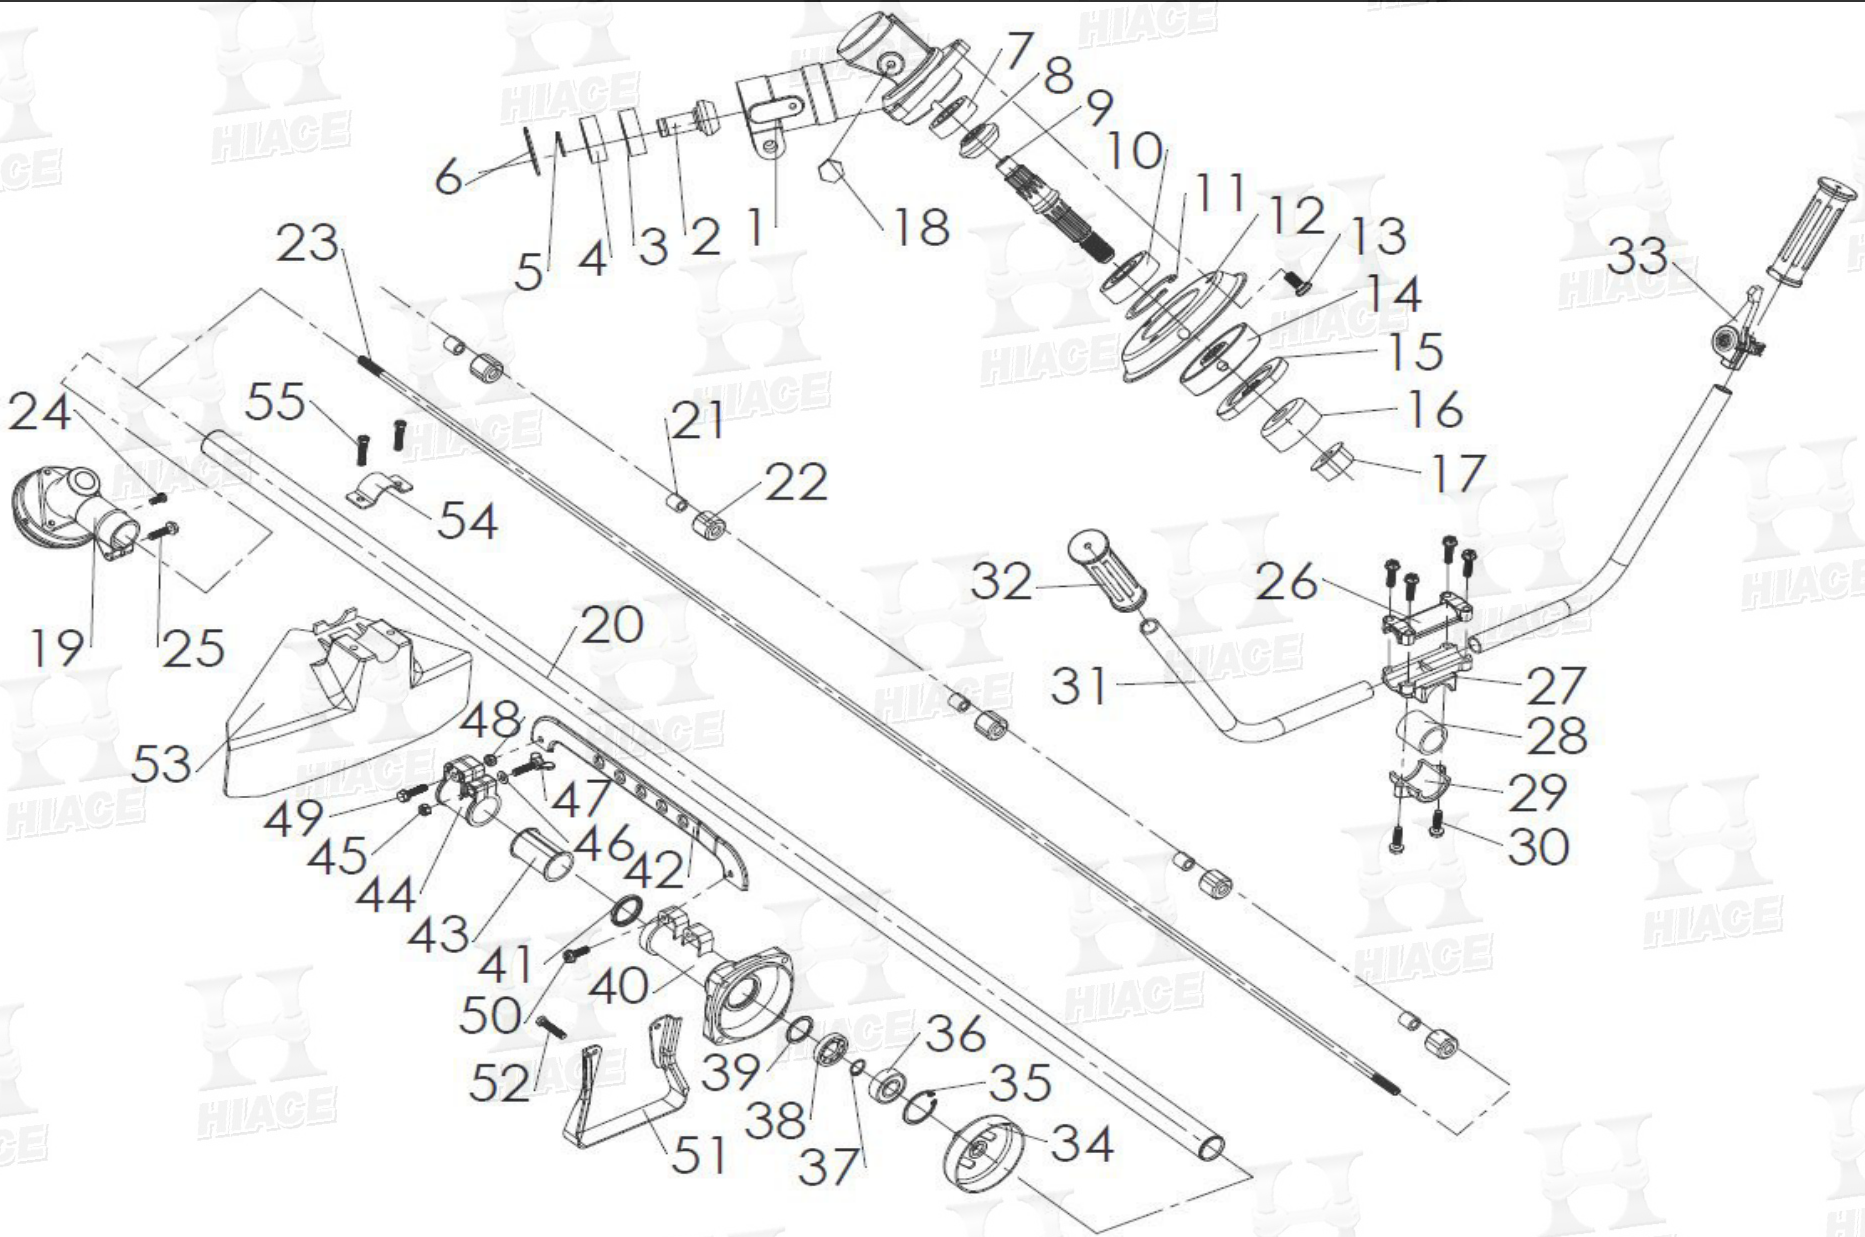

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	RBC-5800-CR4-01	28MM Gear Case	1	31	RBC-5800-CR4-31	18*2.0*375MM L Handle Tube	2
2	RBC-5800-CR4-02	9T*15T Gear Pinion	1	32	RBC-5800-CR4-32	Handle Rubber Cover	2
3	RBC-5800-CR4-03	6001 ZZ Bearing	1	33	RBC-5800-CR4-33	R4 Throttle Lever	1
4	RBC-5800-CR4-04	6001 Bearing	1	34	RBC-5800-CR4-34	9T Clutch Drum	1
5	RBC-5800-CR4-05	S-12 Stop Ring	1	35	RBC-5800-CR4-35	R-35 Stop Ring	1
6	RBC-5800-CR4-06	R-28 Stop Ring	1	36	RBC-5800-CR4-36	6202 ZZ Bearing	1
7	RBC-5800-CR4-07	6001 Bearing	1	37	RBC-5800-CR4-37	S-15 Stop Ring	1
8	RBC-5800-CR4-08	13T*20T Gear Pinion	1	38	RBC-5800-CR4-38	6202 Cushion Rubber	1
9	RBC-5800-CR4-09	13T Gear Shaft	1	39	RBC-5800-CR4-39	28MM Stop Ring	1
10	RBC-5800-CR4-10	6202 2V Bearing	1	40	RBC-5800-CR4-40	28MM Clutch Case	1
11	RBC-5800-CR4-11	R-35 Stop Ring	1	41	RBC-5800-CR4-41	28MM Oil Seal	1
12	RBC-5800-CR4-12	Gear Case Cap	1	42	RBC-5800-CR4-42	5 Holes Hanger	1
13	RBC-5800-CR4-13	5x10 S/W Screw	3	43	RBC-5800-CR4-43	28MM Fixer Pipe	1
14	RBC-5800-CR4-14	13T Cutter Holder	1	44	RBC-5800-CR4-44	Fixer Body	1
15	RBC-5800-CR4-15	13T Cutter Holder Cap	1	45	RBC-5800-CR4-45	6MM Nut	1
16	RBC-5800-CR4-16	Nut Holder Cap	1	46	RBC-5800-CR4-46	6x13x1 Washer	1
17	RBC-5800-CR4-17	10MM Nut (L.)	1	47	RBC-5800-CR4-47	6x45 Wing Screw	1
18	RBC-5800-CR4-18	10x12 Screw	1	48	RBC-5800-CR4-48	6MM Nut	1
19	RBC-5800-CR4-19	28mm 13T Gear Case Assy	1	49	RBC-5800-CR4-49	6x20 Screw	1
20	RBC-5800-CR4-20	28*2.0*1500MM Tube	1	50	RBC-5800-CR4-50	6x20 S/W Screw	1
21	RBC-5800-CR4-21	8*14*14MM Bushing Assy	5	51	RBC-5800-CR4-51	Stander	1
22	RBC-5800-CR4-22	24MM Cushion Rubber	5	52	RBC-5800-CR4-52	6x30 S/W Screw	4
23	RBC-5800-CR4-23	8MM*9T*1545MM Driving Shaft	1	53	RBC-5800-CR4-53	Safety Guard	1
24	RBC-5800-CR4-24	5x12 S/W Screw	1	54	RBC-5800-CR4-54	Cover Bracket	1
25	RBC-5800-CR4-25	6x25 S/W Screw	1	55	RBC-5800-CR4-55	6x30 S/W Screw	2
26	RBC-5800-CR4-26	Handle Holder (A)	1				
27	RBC-5800-CR4-27	Handle Holder (B)	1				
28	RBC-5800-CR4-28	28MM Rubber Cover	1				
29	RBC-5800-CR4-29	Handle Holder (C)	1				
30	RBC-5800-CR4-30	6x25 S/W Screw	6				