




# PARTS INFORMATION

## HT-321

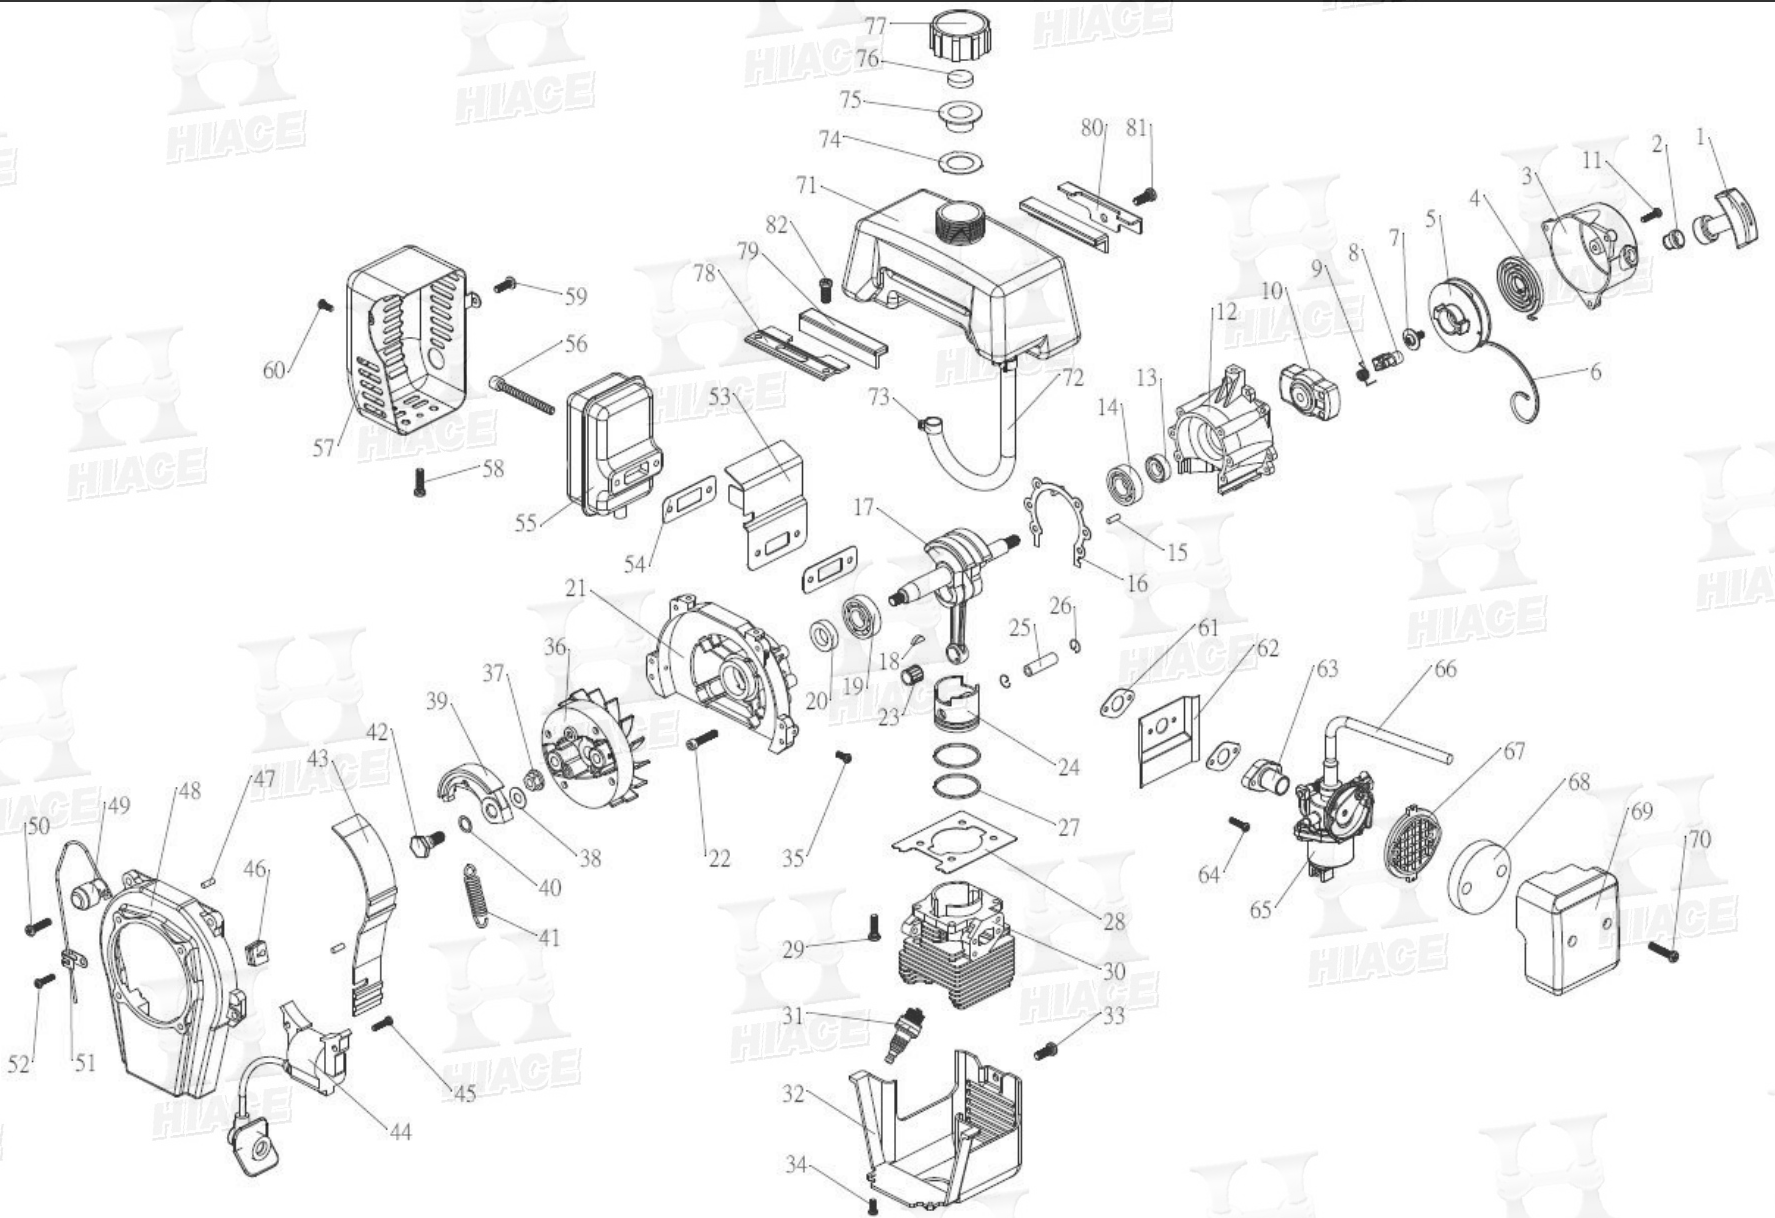


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	HT-321-001	Starter Handle	1	31	HT-321-031	Spark Plug	1	61	HT-321-061	Inlet Manifold Gasket	2
2	HT-321-002	Insulator	1	32	HT-321-032	Cylinder Protector	1	62	HT-321-062	Inlet Manifold Aluminum Gasket	1
3	HT-321-003	Recoil Starter Body	1	33	HT-321-033	Screw		63	HT-321-063	Inlet Manifold	1
4	HT-321-004	Recoil Spring	1	34	HT-321-034	Screw		64	HT-321-064	Screw	
5	HT-321-005	Starter Rope Reel	1	35	HT-321-035	Screw		65	HT-321-065	Carburetor	1
6	HT-321-006	Starter Rope	1	36	HT-321-036	Magneto Rotor	1	66	HT-321-066	Throttle Wire	1
7	HT-321-007	Starter Screw	1	37	HT-321-037	M8 Nut	1	67	HT-321-067	Cleaner Body	1
8	HT-321-008	Starter Pawl	1	38	HT-321-038	M8 Washer	1	68	HT-321-068	Cleaner Sponge	1
9	HT-321-009	Starter Pawl Spring	1	39	HT-321-039	Clutch Arm Comp.	2	69	HT-321-069	Cleaner Cap	1
10	HT-321-010	Starter Pulley	1	40	HT-321-040	Washer	2	70	HT-321-070	Screw	
11	HT-321-011	Screw	3	41	HT-321-041	Clutch Spring	1	71	HT-321-071	Fuel Tank	1
12	HT-321-012	Crank Case ( B )	1	42	HT-321-042	Clutch Step Bolt	2	72	HT-321-072	Oil Hose	1
13	HT-321-013	12 22 7 Oil Seal	1	43	HT-321-043	Flash Pan	1	73	HT-321-073	Clip for Oil Hose	2
14	HT-321-014	Ball Bearing 6002 C3	1	44	HT-321-044	Ignition Coil	1	74	HT-321-074	Tank Cap Compressor	1
15	HT-321-015	Pin	2	45	HT-321-045	Screw		75	HT-321-075	Tank Inner Cap	1
16	HT-321-016	Crank Case Gasket	1	46	HT-321-046	Clamp, Coil	1	76	HT-321-076	Tank Cap Sponge	1
17	HT-321-017	Crank Shaft	1	47	HT-321-047	Pin	2	77	HT-321-077	Tank Cap	1
18	HT-321-018	Wood-Ruff Key	1	48	HT-321-048	Fan Case	1	78	HT-321-078	Fuel Tank Holder - A	1
19	HT-321-019	Ball Bearing 6202 C3	1	49	HT-321-049	Stop Switch	1	79	HT-321-079	Rubber for Fuel Tank Holder	2
20	HT-321-020	15 25 7 Oil Seal	1	50	HT-321-050	Screw		80	HT-321-080	Fuel Tank Holder - B	1
21	HT-321-021	Crank Case ( A )	1	51	HT-321-051	Clip	1	81	HT-321-081	Screw	
22	HT-321-022	Screw		52	HT-321-052	Screw					
23	HT-321-023	Needle Bearing	1	53	HT-321-053	Aluminum Plate	1				
24	HT-321-024			54	HT-321-054	Muffler Gasket	1				
25	HT-321-025	Piston	1	55	HT-321-055	Muffler	1				
26	HT-321-026			56	HT-321-056	Muffler Screw	2				
27	HT-321-027	Piston Ring	2	57	HT-321-057	Muffler Protector	1				
28	HT-321-028	Cylinder Gasket	1	58	HT-321-058	Screw					
29	HT-321-029	Screw		59	HT-321-059	Screw					
30	HT-321-030	Cylinder	1	60	HT-321-060	Screw					



# PARTS INFORMATION

RBC-5600-26C-R4

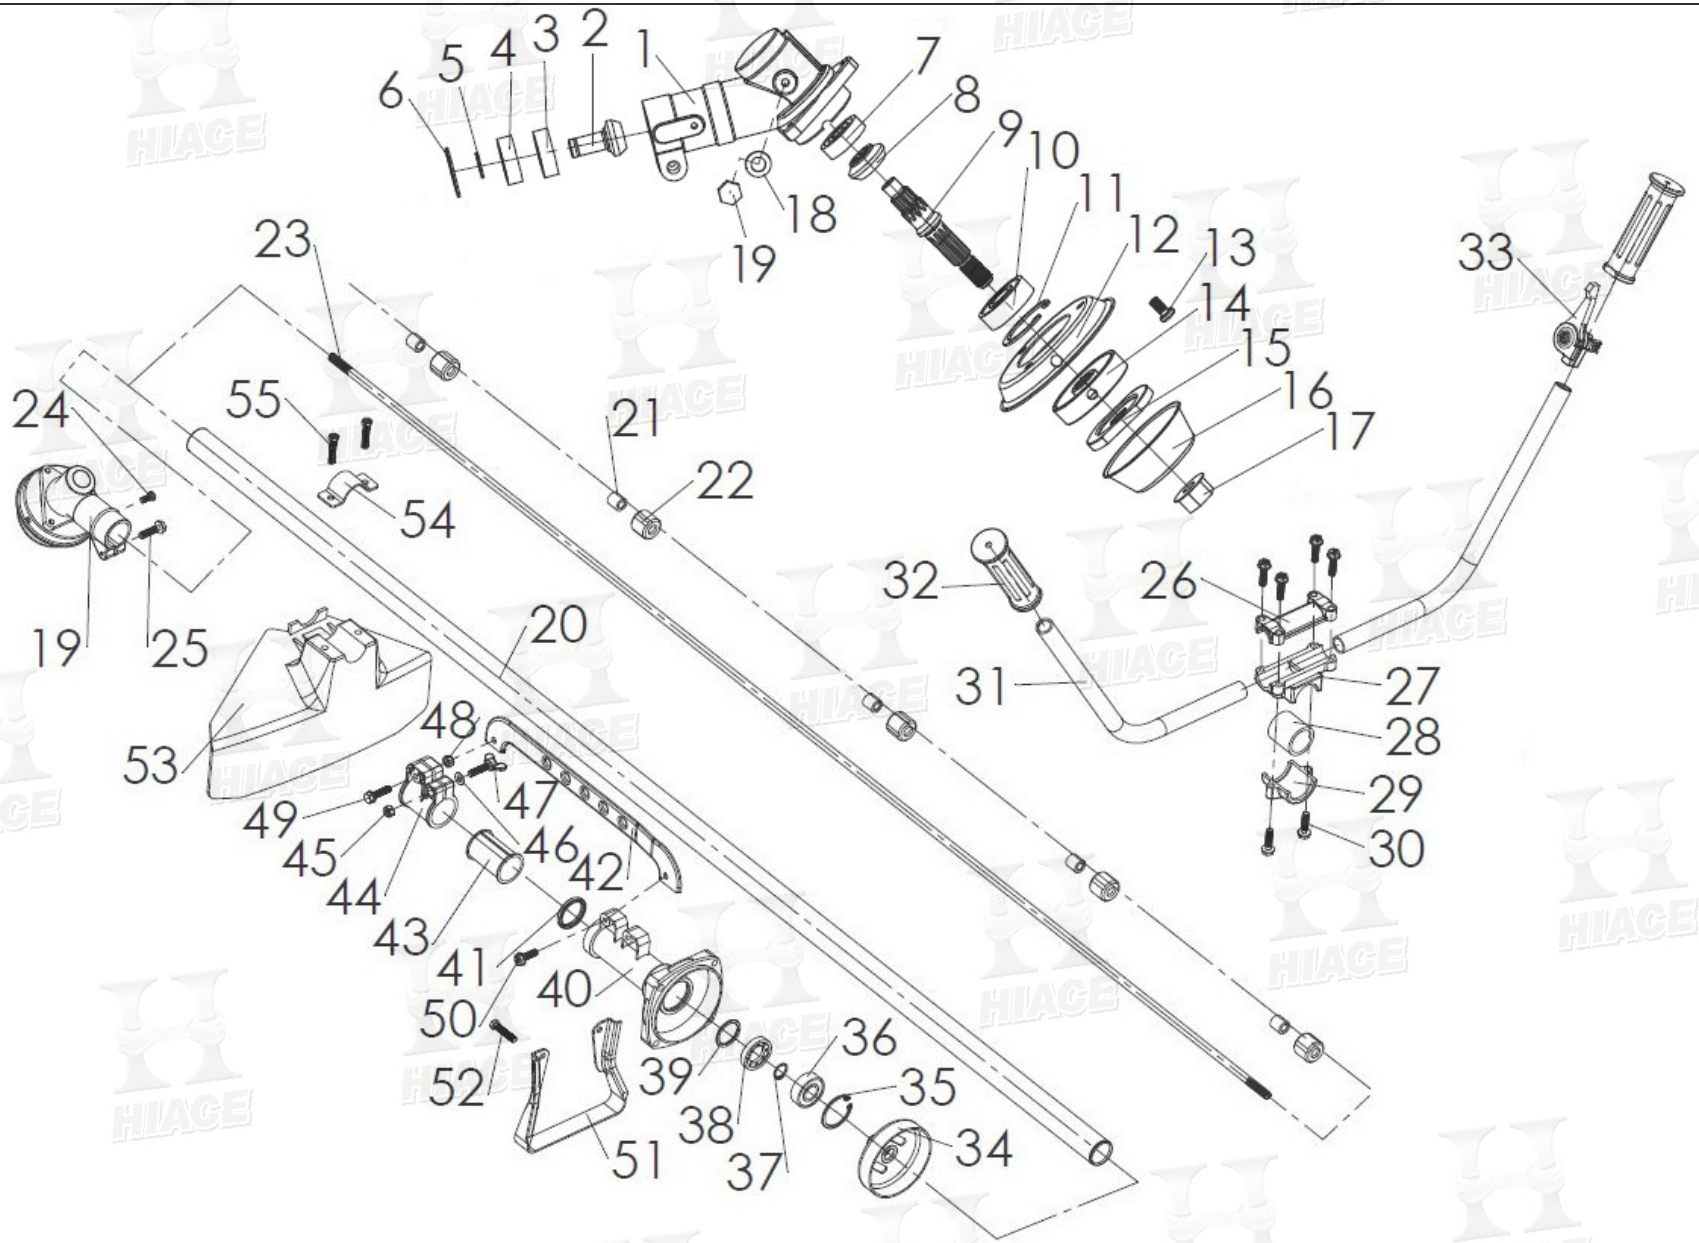

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	RBC-5600-CR4-01	26MM Gear Case	1	31	RBC-5600-CR4-31	18*2.0*375MM L Handle Tube	2
2	RBC-5600-CR4-02	7*16T Gear Pinion	1	32	RBC-5600-CR4-32	Handle Rubber Cover	2
3	RBC-5600-CR4-03	6000 ZZ Bearing	1	33	RBC-5600-CR4-33	R4 Throttle Lever	1
4	RBC-5600-CR4-04	6000 Bearing	1	34	RBC-5600-CR4-34	7T Clutch Drum	1
5	RBC-5600-CR4-05	Stop Ring	1	35	RBC-5600-CR4-35	R-35 Stop Ring	1
6	RBC-5600-CR4-06	Stop Ring	1	36	RBC-5600-CR4-36	6202 ZZ Bearing	1
7	RBC-5600-CR4-07	629 Bearing	1	37	RBC-5600-CR4-37	S-15 Stop Ring	1
8	RBC-5600-CR4-08	10*20T Gear Pinion	1	38	RBC-5600-CR4-38	6202 Cushion Rubber	1
9	RBC-5600-CR4-09	Gear Shaft	1	39	RBC-5600-CR4-39	Washer	1
10	RBC-5600-CR4-10	6201-2RS Bearing	1	40	RBC-5600-CR4-40	26MM Clutch Case	1
11	RBC-5600-CR4-11	Stop Ring	1	41	RBC-5600-CR4-41	26MM Oil Seal	1
12	RBC-5600-CR4-12	Gear Case Cover	1	42	RBC-5600-CR4-42	5 Holes Hanger	1
13	RBC-5600-CR4-13	Screw	3	43	RBC-5600-CR4-43	26MM Fixer Pipe	1
14	RBC-5600-CR4-14	Cutter Holder	1	44	RBC-5600-CR4-44	Fixer Body	1
15	RBC-5600-CR4-15	Cutter Holder Cap	1	45	RBC-5600-CR4-45	6MM Nut	1
16	RBC-5600-CR4-16	Nut Holder Cap	1	46	RBC-5600-CR4-46	6x13x1 Washer	1
17	RBC-5600-CR4-17	10MM Nut (L.)	1	47	RBC-5600-CR4-47	Wing Screw	1
18	RBC-5600-CR4-18	Washer	1	48	RBC-5600-CR4-48	6MM Nut	1
19	RBC-5600-CR4-19	Screw	1	49	RBC-5600-CR4-49	Screw	1
20	RBC-5600-CR4-20	26*1.75*1500MM Tube	1	50	RBC-5600-CR4-50	Screw	1
21	RBC-5600-CR4-21	7*14*14 Bushing Ass'y	5	51	RBC-5600-CR4-51	Stander	1
22	RBC-5600-CR4-22	23MM Cushion Rubber	5	52	RBC-5600-CR4-52	Screw	4
23	RBC-5600-CR4-23	7MM*7T*1545MM Driving Shaft	1	53	RBC-5600-CR4-53	Safety Guard	1
24	RBC-5600-CR4-24	Screw	1	54	RBC-5600-CR4-54	Cover Bracket	1
25	RBC-5600-CR4-25	Screw	1	55	RBC-5600-CR4-55	Screw	2
26	RBC-5600-CR4-26	Handle Holder (A)	1		1~19	26mm 26C Gear Case Ass'y	
27	RBC-5600-CR4-27	Handle Holder (B)	1				
28	RBC-5600-CR4-28	26MM Rubber Cover	1				
29	RBC-5600-CR4-29	Handle Holder (C)	1				
30	RBC-5600-CR4-30	Screw	6				