




PARTS INFORMATION

HT-328L

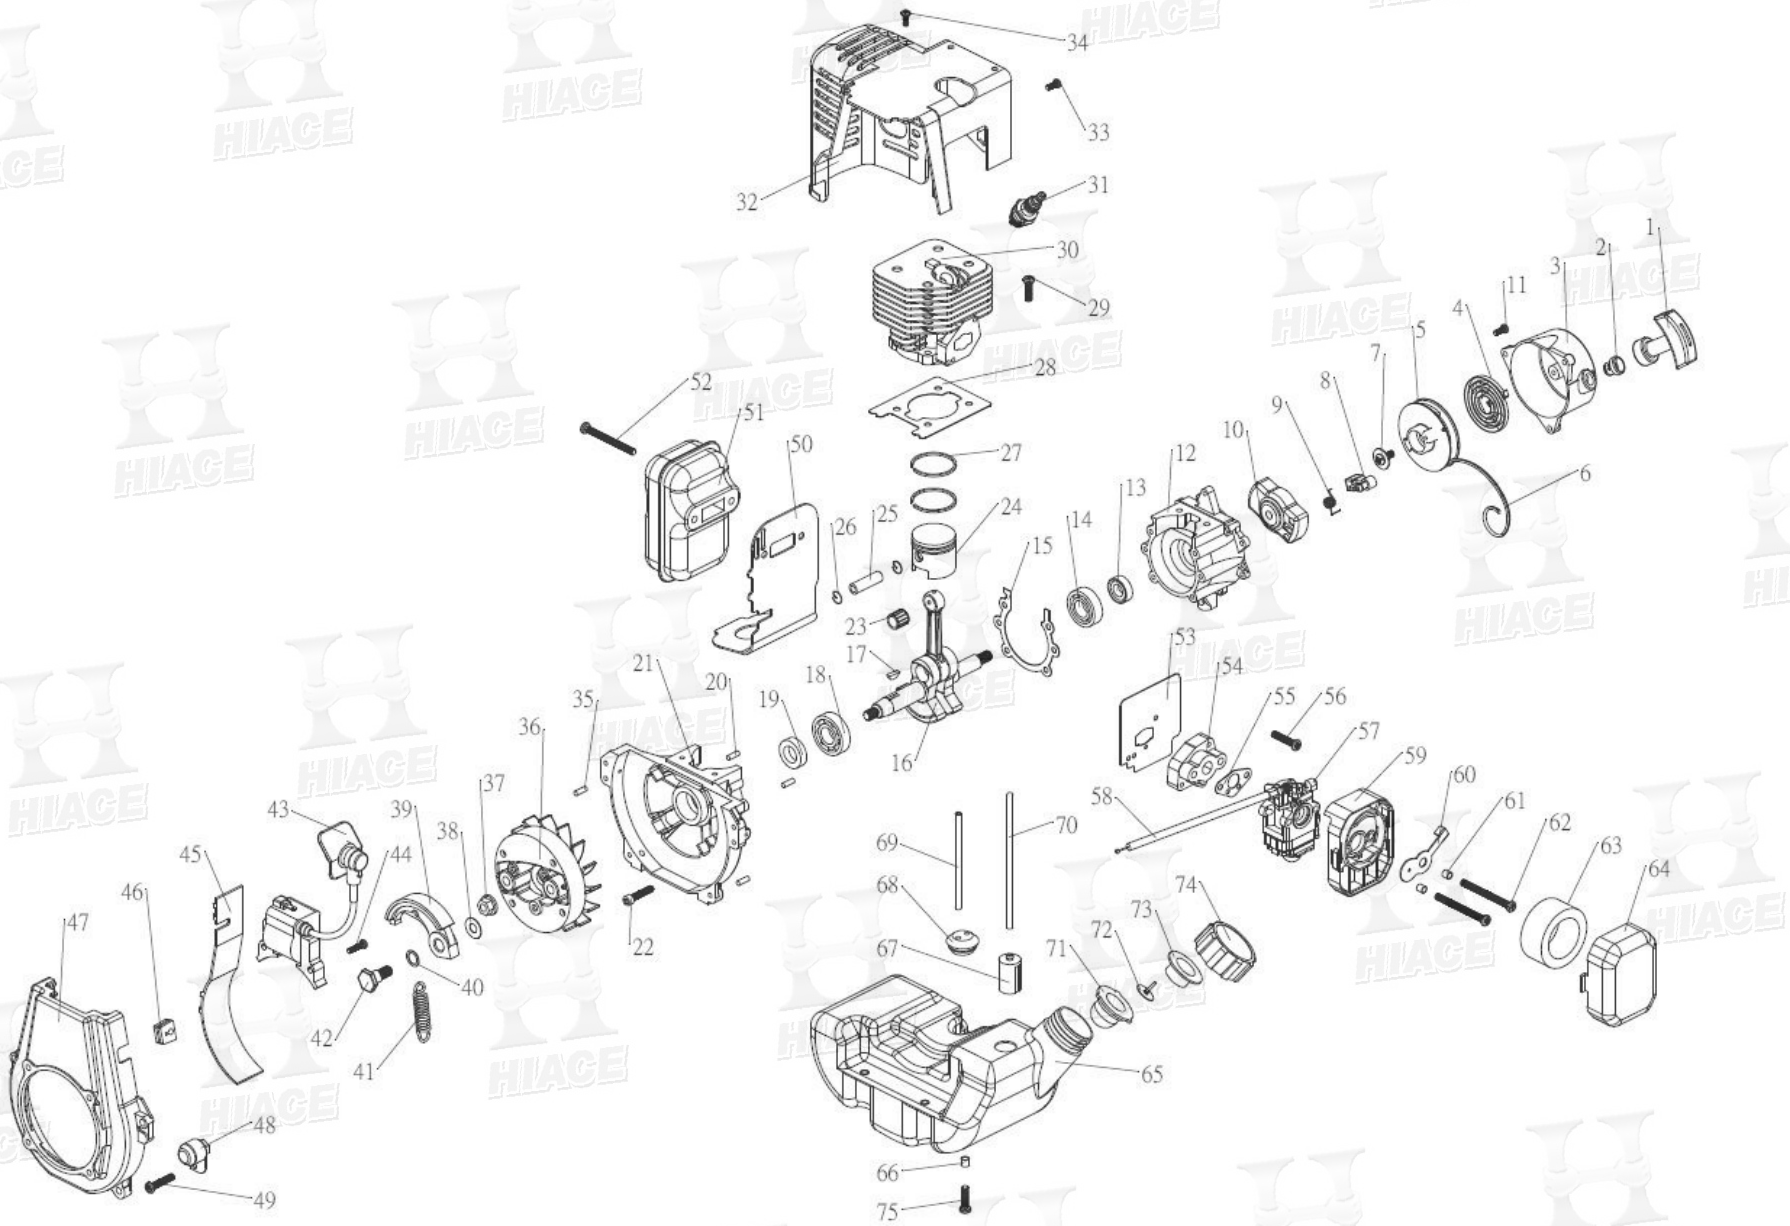

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	HT-328L-001	Starter Handle	1	31	HT-328L-031	Spark Plug	1	61	HT-328L-061	Collar	2
2	HT-328L-002	Insulator	1	32	HT-328L-032	Cylinder Protector	1	62	HT-328L-062	Screw	
3	HT-328L-003	Recoil Starter Body	1	33	HT-328L-033	Screw		63	HT-328L-063	Cleaner Sponge	1
4	HT-328L-004	Recoil Spring	1	34	HT-328L-034	Screw		64	HT-328L-064	Air Cleaner Cap	1
5	HT-328L-005	Starter Rope Reel	1	35	HT-328L-035	4*11.8 Pin	2	65	HT-328L-065	Fuel Tank	1
6	HT-328L-006	Starter Rope	1	36	HT-328L-036	Magneto Rotor	1	66	HT-328L-066	Collar	3
7	HT-328L-007	Starter Screw	1	37	HT-328L-037	M8 Nut	1	67	HT-328L-067	Gasoline Cleaner	1
8	HT-328L-008	Starter Pawl	1	38	HT-328L-038	M8 Washer	1	68	HT-328L-068	Hose Seat	1
9	HT-328L-009	Starter Pawl Spring	1	39	HT-328L-039	Clutch Arm Comp.	2	69	HT-328L-069	Oil Pipe	1
10	HT-328L-010	Starter Pulley	1	40	HT-328L-040	Wave Washer	2	70	HT-328L-070	Oil Pipe	1
11	HT-328L-011	Screw	3	41	HT-328L-041	Clutch Spring	1	71	HT-328L-071	Tank Inner Compressor	1
12	HT-328L-012	Crank Case (B)	1	42	HT-328L-042	Clutch Step Bolt	2	72	HT-328L-072	Tank Cap Sponge	1
13	HT-328L-013	12 22 7 Oil Seal	1	43	HT-328L-043	Ignition Coil	1	73	HT-328L-073	Tank Inner Cap	1
14	HT-328L-014	Ball Bearing 6002 C3	1	44	HT-328L-044	Screw		74	HT-328L-074	Tank Cap	1
15	HT-328L-015	Crank Case Gasket	1	45	HT-328L-045	Flash Pan	1	75	HT-328L-075	Screw	
16	HT-328L-016	Crank Shaft	1	46	HT-328L-046	Clamp. Coil	1				
17	HT-328L-017	Wood-Ruff Key	1	47	HT-328L-047	Fan Case	1				
18	HT-328L-018	Ball Bearing 6202 C3	1	48	HT-328L-048	Stop Switch	1				
19	HT-328L-019	15 25 7 Oil Seal	1	49	HT-328L-049	Screw					
20	HT-328L-020	4*11.8 Pin	2	50	HT-328L-050	Muffler Gasket	1				
21	HT-328L-021	Crank Case (A)	1	51	HT-328L-051	Muffler	1				
22	HT-328L-022	Screw		52	HT-328L-052	Muffler Screw	2				
23	HT-328L-023	Needle Bearing	1	53	HT-328L-053	Space Gasket	1				
24	HT-328L-024	Piston	1	54	HT-328L-054	Space	1				
25	HT-328L-025			55	HT-328L-055	Carburetor Gasket	1				
26	HT-328L-026			56	HT-328L-056	Screw					
27	HT-328L-027	Piston Ring	2	57	HT-328L-057	Diaphragm Carburetor	1				
28	HT-328L-028	Cylinder Gasket	1	58	HT-328L-058	Throttle Wire	1				
29	HT-328L-029	Screw		59	HT-328L-059	Air Cleaner Body	1				
30	HT-328L-030	Cylinder	1	60	HT-328L-060	Choke Lever	1				