




PARTS INFORMATION

TL-43

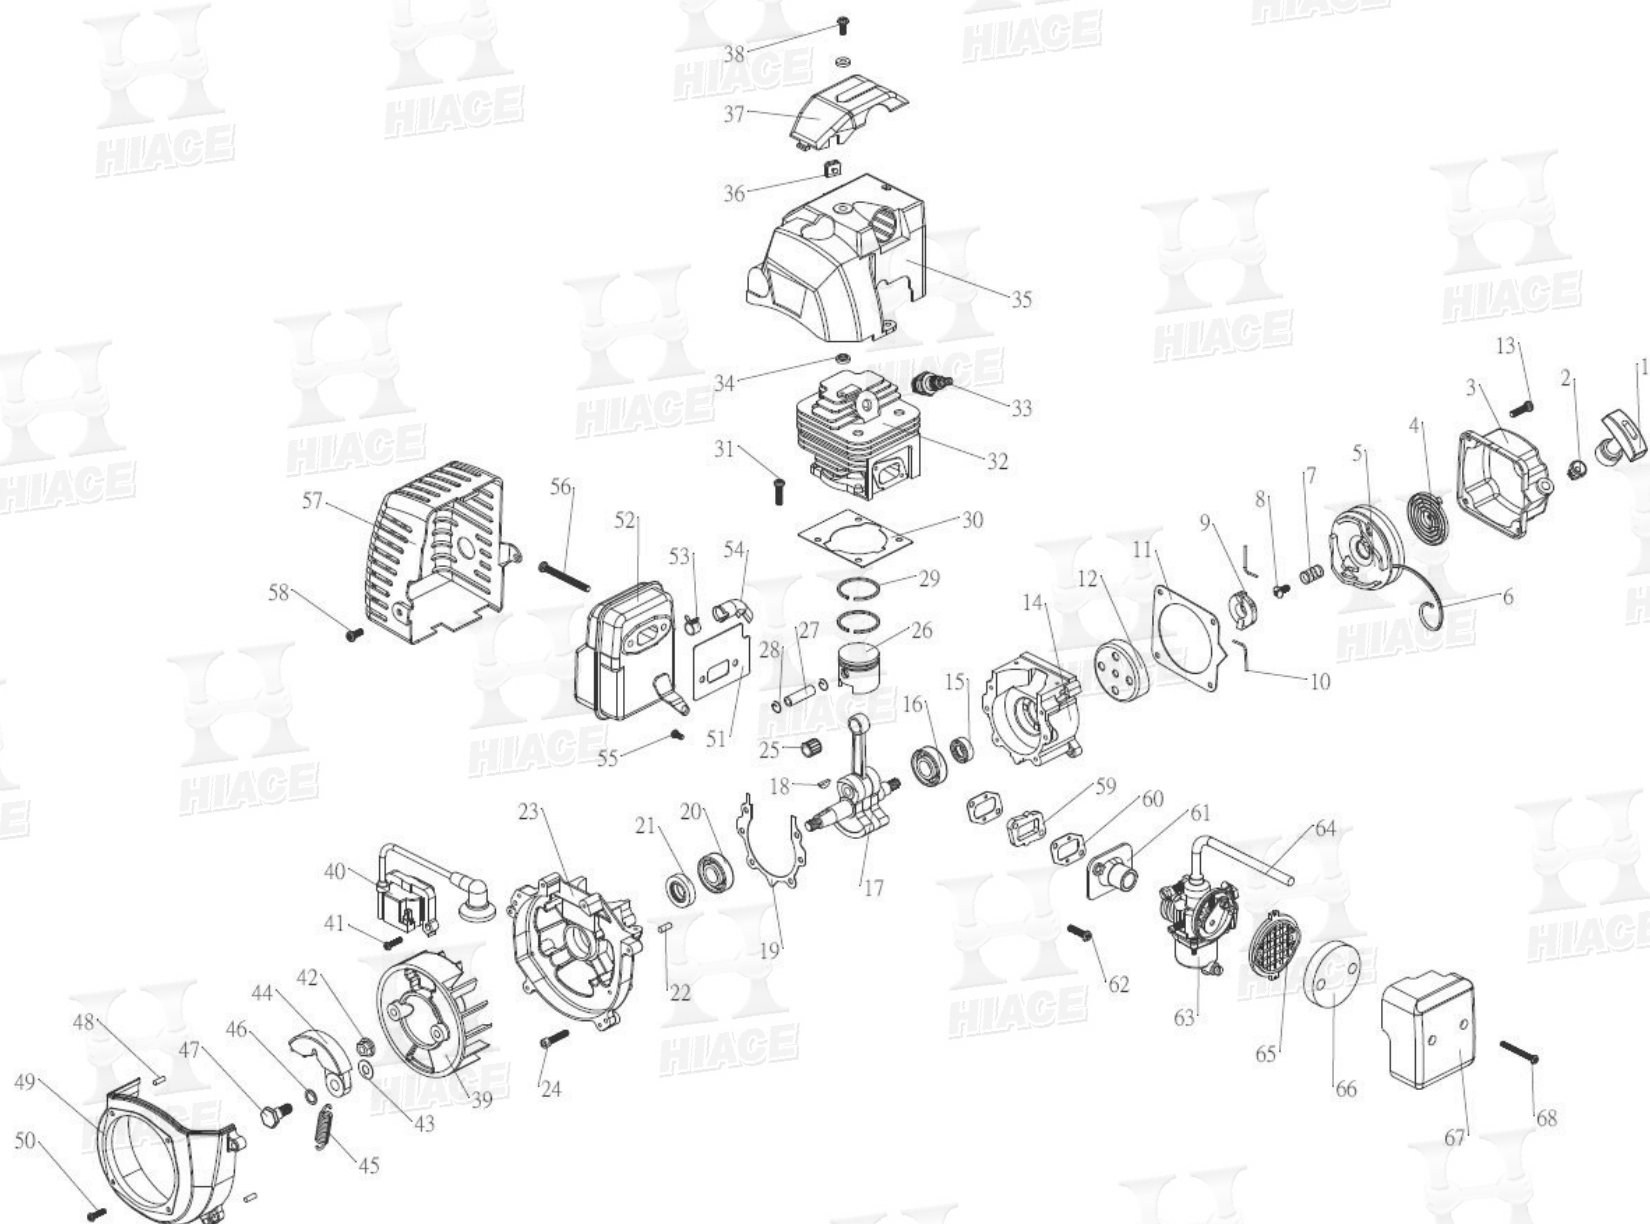


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	TL-43-001	Starter Handle	1	31	TL-43-031	Screw	4	61	TL-43-061	Inlet Manifold	1
2	TL-43-002	Insulator	1	32	TL-43-032	Cylinder	1	62	TL-43-062	Screw	2
3	TL-43-003	Recoil Starter Body	1	33	TL-43-033	Spark Plug	1	63	TL-43-063	Carburetor	1
4	TL-43-004	Recoil Spring	1	34	TL-43-034	Space	2	64	TL-43-064	Throttle Wire	1
5	TL-43-005	Starter Rope Reel	1	35	TL-43-035	Cylinder Protector	1	65	TL-44-065	Cleaner Body	1
6	TL-43-006	Starter Rope	1	36	TL-43-036	Clamp, Coil	1	66	TL-43-066	Sponge	1
7	TL-43-007	Starter Pawl	1	37	TL-43-037	Cylinder Protector Cap	1	67	TL-43-067	Cleaner Cap	1
8	TL-43-008	Starter Screw	1	38	TL-43-038	Screw	1	68	TL-43-068	Screw	2
9	TL-43-009	Pawl Holder	1	39	TL-43-039	Magneto Rotor	1				
10	TL-43-010	Clip	2	40	TL-43-040	Ignition Coil	1				
11	TL-43-011	Starter Gasket	1	41	TL-43-041	Screw	2				
12	TL-43-012	Starter Pulley	1	42	TL-43-042	Nut	1				
13	TL-43-013	Screw	4	43	TL-43-043	Washer	2				
14	TL-43-014	Crank Case (B)	1	44	TL-43-044	Clutch Arm Comp.	2				
15	TL-43-015	12 22 7 Oil Seal	1	45	TL-43-045	Clutch Spring	1				
16	TL-43-016	Bearing 6202 C3	1	46	TL-43-046	10MM Wavy Washer	2				
17	TL-43-017	Crank Shaft	1	47	TL-43-047	Clutch Step Bolt	2				
18	TL-43-018	Wood-Ruff Key	1	48	TL-43-048	Pin	2				
19	TL-43-019	Crank Case Gasket	1	49	TL-43-049	Fan Case	1				
20	TL-43-020	Ball Bearing 6202 C3	1	50	TL-43-050	Screw	3				
21	TL-43-021	Oil Seal 15 30 7	1	51	TL-43-051	Muffler Gasket	1				
22	TL-43-022	Pin	2	52	TL-43-052	Muffler	1				
23	TL-43-023	Crank Case (A)	1	53	TL-43-053						
24	TL-43-024	Screw	4	54	TL-43-054						
25	TL-43-025	Needle Bearing	1	55	TL-43-055	Screw	1				
26	TL-43-026	Piston	1	56	TL-43-056	Screw	2				
27	TL-43-027			57	TL-43-057	Muffler Protector	1				
28	TL-43-028			58	TL-43-058	Screw	1				
29	TL-43-029	Piston Ring	2	59	TL-43-059	Space	1				
30	TL-43-030	Cylinder Gasket	1	60	TL-43-060	Inlet Manifold Gasket	2				



PARTS INFORMATION

KBC-2600

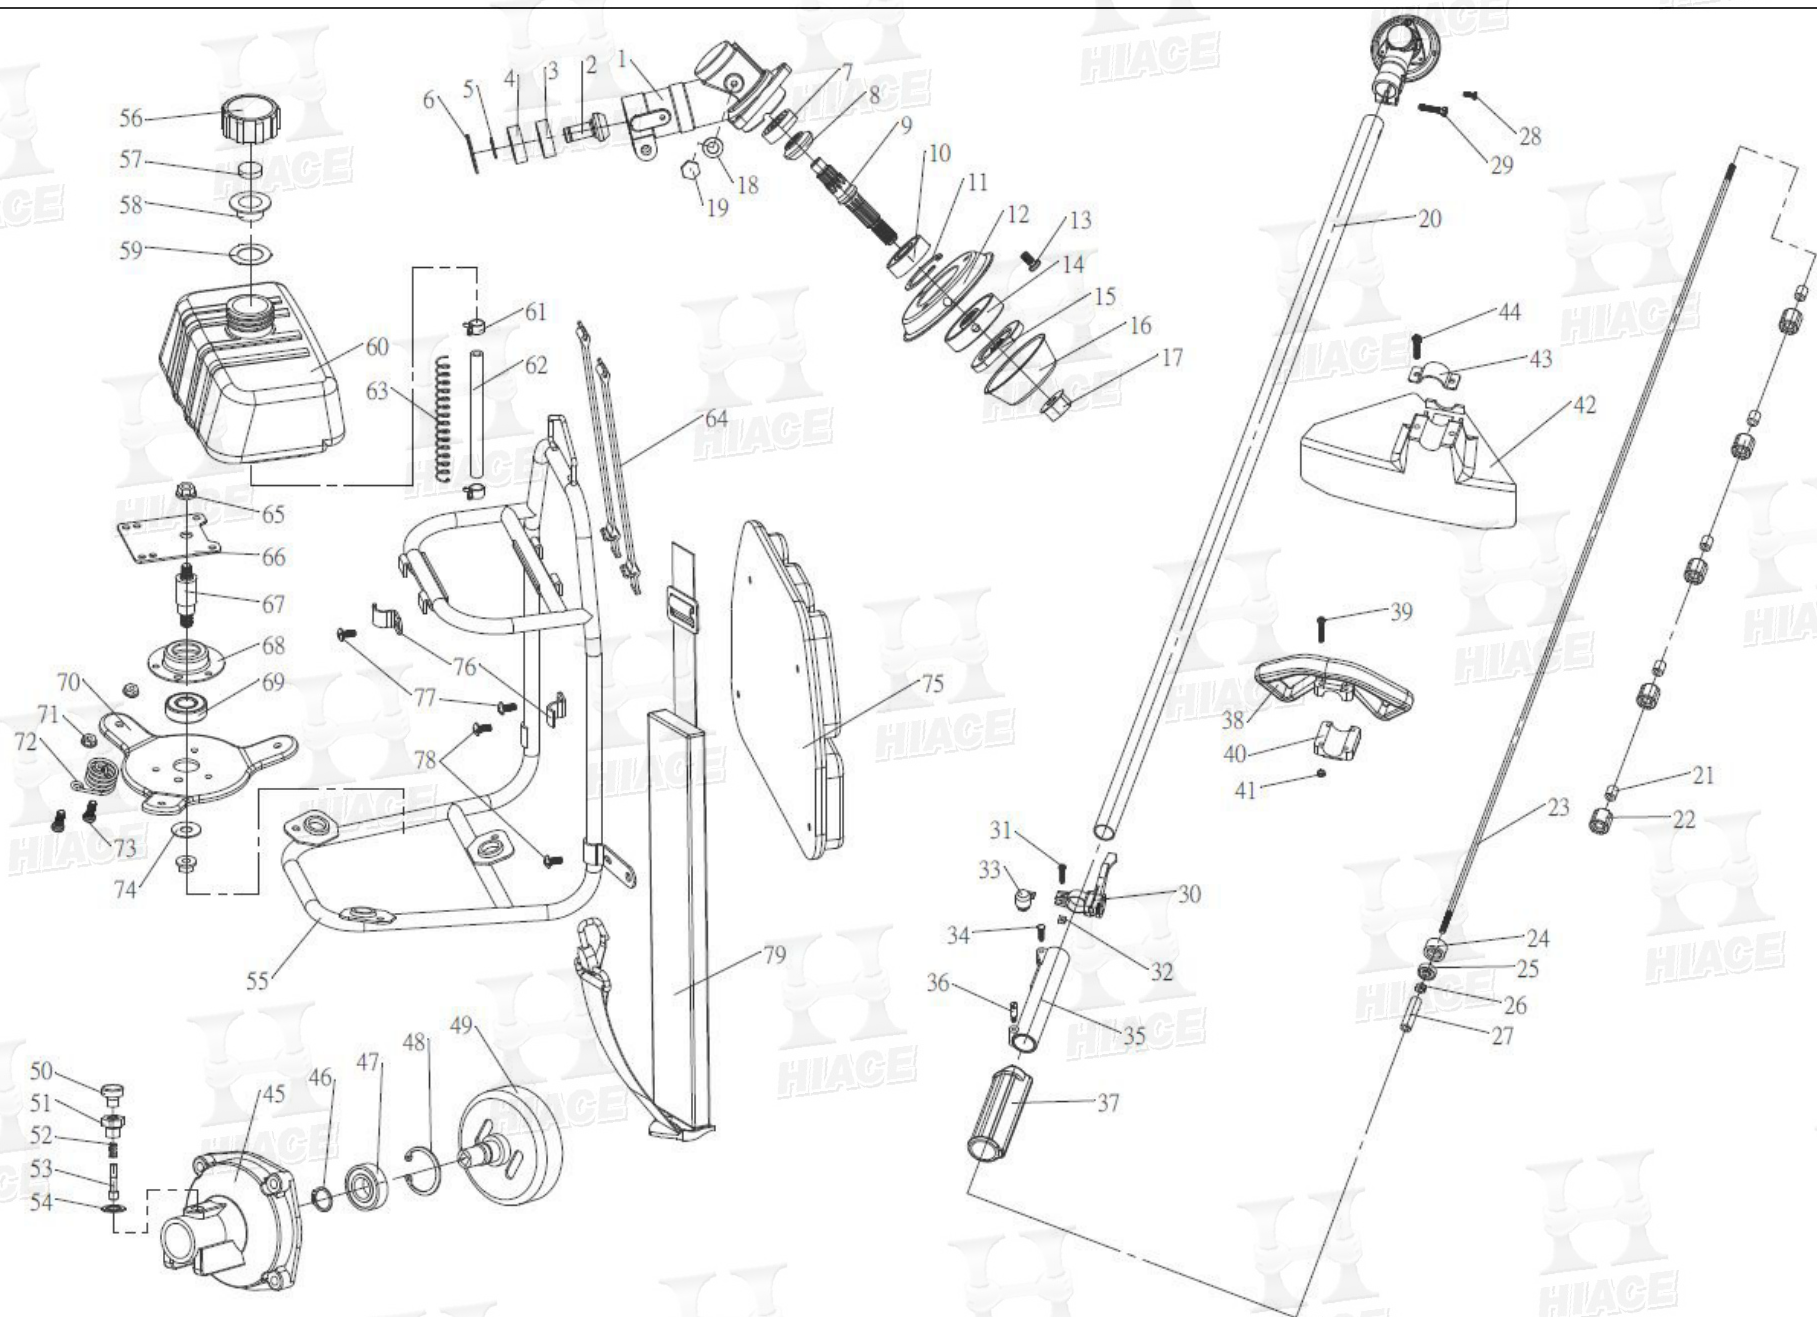

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	KBC-2600-A3-001	26MM Gear Case	1	31	KBC-2600-A3-031	Screw	1	61	KBC-2600-A3-061	Clip	2
2	KBC-2600-A3-002	7*16T Gear Pinion	1	32	KBC-2600-A3-032	Nut	1	62	KBC-2600-A3-062	6*10 Fuel Pipe	2
3	KBC-2600-A3-003	6000 ZZ Bearing	1	33	KBC-2600-A3-033	Stop Switch	1	63	KBC-2600-A3-063	Fuel Pipe Protective Coil	1
4	KBC-2600-A3-004	6000 Bearing	1	34	KBC-2600-A3-034	Screw	1	64	KBC-2600-A3-064	A3 Fuel Tank Band	2
5	KBC-2600-A3-005	Stop Ring	1	35	KBC-2600-A3-035	Joint Pipe	1	65	KBC-2600-A3-065	Nut	1
6	KBC-2600-A3-006	Stop Ring	1	36	KBC-2600-A3-036	Screw	1	66	KBC-2600-A3-066	Engine Base Comp	1
7	KBC-2600-A3-007	629 Bearing	1	37	KBC-2600-A3-037	Shaft Grip	1	67	KBC-2600-A3-067	Shaft for Engine Base Comp	1
8	KBC-2600-A3-008	10*20T Gear Pinion	1	38	KBC-2600-A3-038	26MM Handle	1	68	KBC-2600-A3-068	Cap for Bearing	1
9	KBC-2600-A3-009	Gear Shaft	1	39	KBC-2600-A3-039	Screw	2	69	KBC-2600-A3-069	6202 Bearing	1
10	KBC-2600-A3-010	6201-2RS Bearing	1	40	KBC-2600-A3-040	26MM Handle Bracket A	1	70	KBC-2600-A3-070	Holder	1
11	KBC-2600-A3-011	Stop Ring	1	41	KBC-2600-A3-041	Nut	2	71	KBC-2600-A3-071	Nut	6
12	KBC-2600-A3-012	Gear Case Cover		42	KBC-2600-A3-042	Safety Guard Comp.	1	72	KBC-2600-A3-072	Spring	3
13	KBC-2600-A3-013	Screw	3	43	KBC-2600-A3-043	Safety Guard Set Plate	1	73	KBC-2600-A3-073	Screw	6
14	KBC-2600-A3-014	Cutter Holder	1	44	KBC-2600-A3-044	Screw	2	74	KBC-2600-A3-074	Washer	1
15	KBC-2600-A3-015	Cutter Holder Cap	1	45	KBC-2600-A3-045	Clutch Case	1	75	KBC-2600-A3-075	A3 Shoulder Plate Comp.	1
16	KBC-2600-A3-016	Nut Holder Cap		46	KBC-2600-A3-046	Stop Ring	1	76	KBC-2600-A3-076	Clip for Shoulder Frame Comp.	2
17	KBC-2600-A3-017	10MM Nut (L.)	1	47	KBC-2600-A3-047	6002 Bearing	1	77	KBC-2600-A3-077	Screw	2
18	KBC-2600-A3-018	Washer	1	48	KBC-2600-A3-048	Stop Ring	1	78	KBC-2600-A3-078	Screw	2
19	KBC-2600-A3-019	Screw	1	49	KBC-2600-A3-049	Clutch Drum Comp.	1	79	KBC-2600-A3-079	A3 Shoulder Belt	2
20	KBC-2600-A3-020	26*1.75*1290MM Tube	1	50	KBC-2600-A3-050						
21	KBC-2600-A3-021	7*14*14 Bushing Ass'y	5	51	KBC-2600-A3-051						
22	KBC-2600-A3-022	23MM Cushion Rubber	5	52	KBC-2600-A3-052	Snap Pin	1				
23	KBC-2600-A3-023	7T*1365 Driving Shaft	1	53	KBC-2600-A3-053						
24	KBC-2600-A3-024	Oil Seal	1	54	KBC-2600-A3-054						
25	KBC-2600-A3-025	627 ZZ Bearing	1	55	KBC-2600-A3-055	A3 Shoulder Frame Comp.	1				
26	KBC-2600-A3-026	Nut	1	56	KBC-2600-A3-056	Tank Cap	1				
27	KBC-2600-A3-027	7MM Adaptor	1	57	KBC-2600-A3-057	Tank Cap Sponge	1				
28	KBC-2600-A3-028	Screw	1	58	KBC-2600-A3-058	Tank Inner Cap	1				
29	KBC-2600-A3-029	Screw	1	59	KBC-2600-A3-059	Tank Cap Compressor	1				
30	KBC-2600-A3-030	R6 Throttle Lever	1	60	KBC-2600-A3-060	#7 Tank	1				