




# PARTS INFORMATION

# TD-40

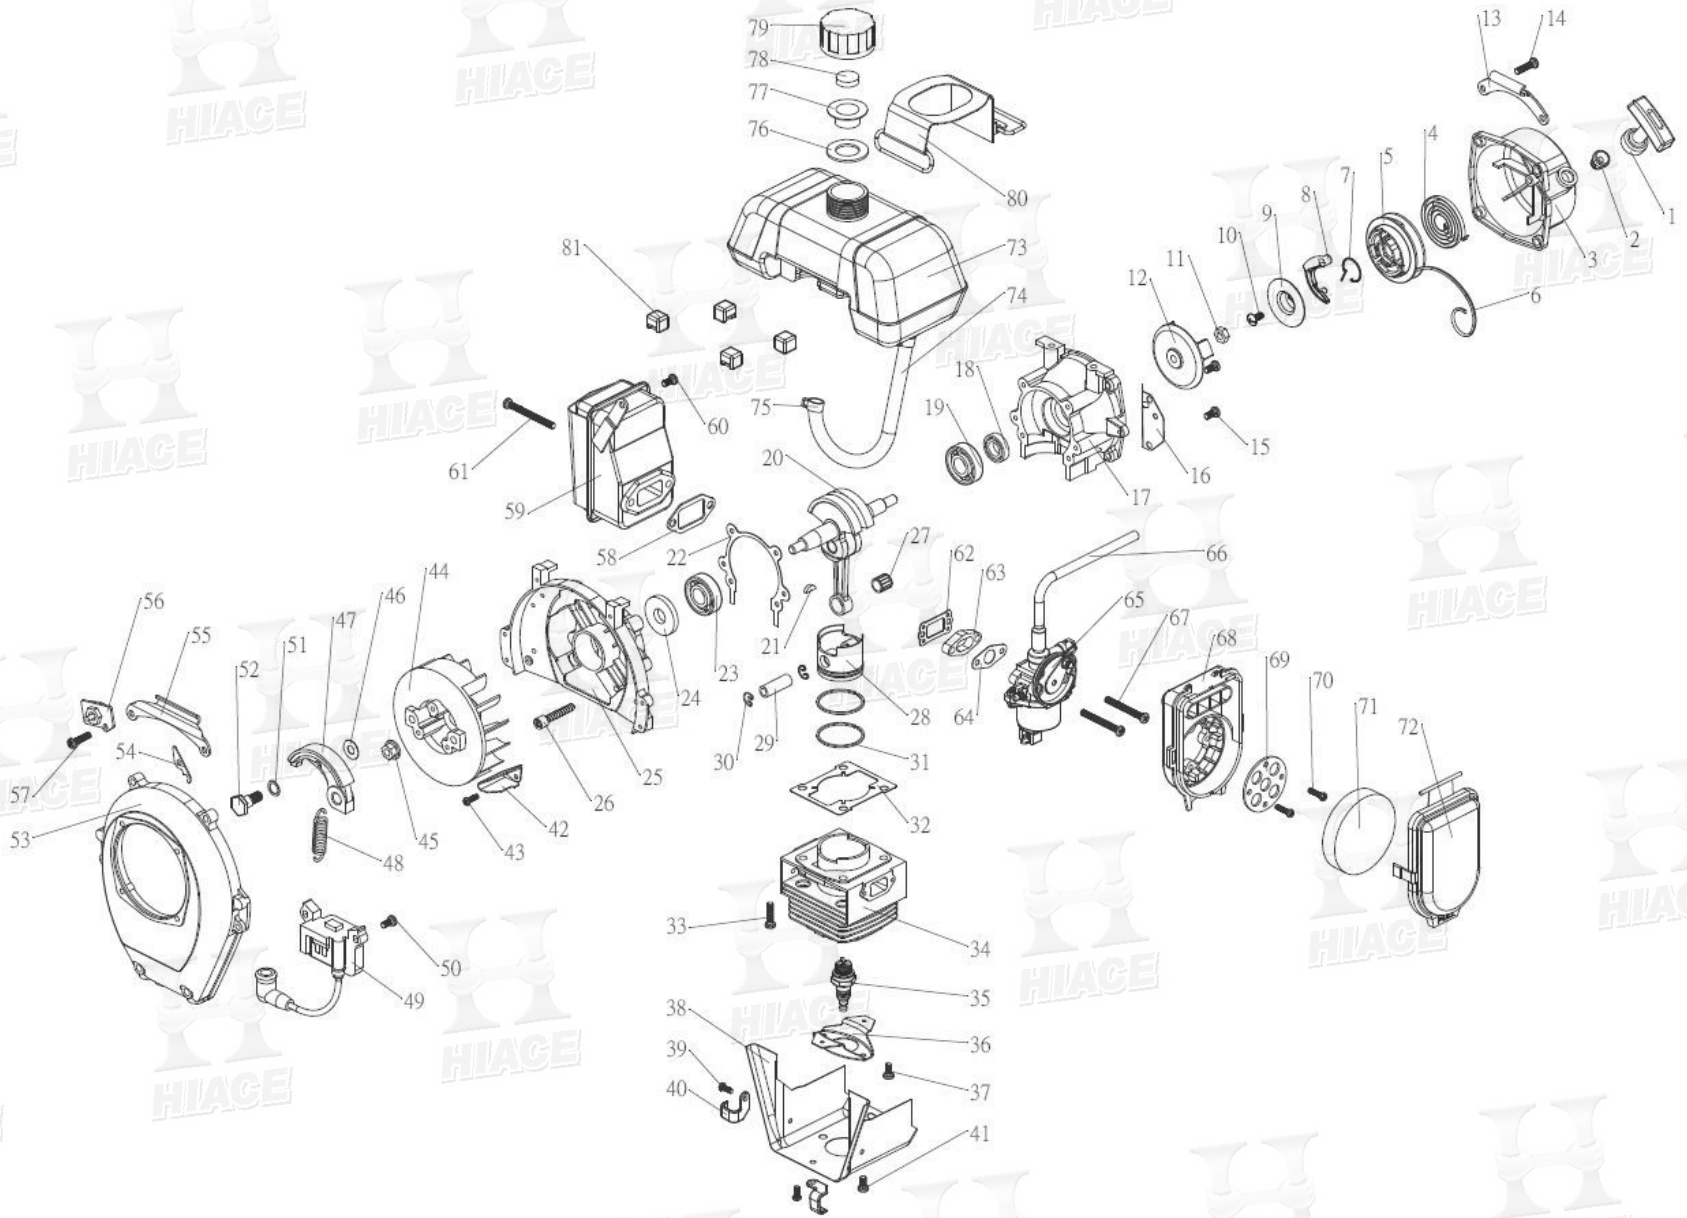

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	TD-40-001	Starter Handle	1	31	TD-40-031	Piston Ring	2	61	TD-40-061	6*65 Screw	2
2	TD-40-002	Handle Insulator	1	32	TD-40-032	Cylinder Gasket	1	62	TD-40-062	Gasket	1
3	TD-40-003	Recoil Starter Case.	1	33	TD-40-033	6*20/S Screw	4	63	TD-40-063	Space	1
4	TD-40-004	Recoil Spring	1	34	TD-40-034	Cylinder	1	64	TD-40-064	Gasket	1
5	TD-40-005	Starter Rope Reel	1	35	TD-40-035	Spark Plug	1	65	TD-40-065	Carburetor	1
6	TD-40-006	Starter Rope	1	36	TD-40-036	Bracket	1	66	TD-40-066	Throttle Wire	1
7	TD-40-007	Clip	1	37	TD-40-037	5*10/SW Screw	2	67	TD-40-067	5*45/SW Screw	2
8	TD-40-008	Starter Pawl	1	38	TD-40-038	Engine Shroud	1	68	TD-40-068	Cleaner Body	1
9	TD-40-009	Starter Retainer	1	39	TD-40-039	4*12/SW Screw	1	69	TD-40-069	Air Cleaner Plate	1
10	TD-40-010	5*12 Screw		40	TD-40-040	Clamp	1	70	TD-40-070	Screw	
11	TD-40-011	M8 Nut		41	TD-40-041	5*10/SW Screw	2	71	TD-40-071	Sponge	1
12	TD-40-012	Starter Pulley	1	42	TD-40-042	Plate	1	72	TD-40-072	Cleaner Cap	1
13	TD-40-013	Fuel Tank Holder - B	1	43	TD-40-043	5*10/SW Screw	1	73	TD-40-073	Fuel Tank	1
14	TD-40-014	6*20/SW Screw	4	44	TD-40-044	Magneto Rotor	1	74	TD-40-074	Oil Hose	1
15	TD-40-015	Clip for Crank Case	1	45	TD-40-045	M10 Nut	1	75	TD-40-075	Clip for Oil Hose	2
16	TD-40-016	5*10/SW Screw	1	46	TD-40-046	M10 Washer	1	76	TD-40-076	Tank Cap Compressor	1
17	TD-40-017	Crank Case Assy' 1	1	47	TD-40-047	Clutch Arm Comp.	2	77	TD-40-077	Tank Inner Cap	1
18	TD-40-018	Oil Seal 15 25 6	1	48	TD-40-048	Clutch Spring	1	78	TD-40-078	Tank Cap Sponge	1
19	TD-40-019	Ball Bearing 6202 C3	1	49	TD-40-049	Ignition Coil	1	79	TD-40-079	Tank Cap	1
20	TD-40-020	Crank Shaft	1	50	TD-40-050	5*20/SW Screw	2	80	TD-40-080	Fuel Tank Band	1
21	TD-40-021	Semicircle Key	1	51	TD-40-051	Washer	2	81	TD-40-081	Fuel Tank Rubber	4
22	TD-40-022	Crank Case Gasket	1	52	TD-40-052	Clutch Step Bolt	2				
23	TD-40-023	Ball Bearing 6202 C3	1	53	TD-40-053	Fan Case	1				
24	TD-40-024	Oil Seal 15 35 5	1	54	TD-40-054	Clip for throttle Wire	1				
25	TD-40-025	Crank Case Assy' 2	1	55	TD-40-055	Fuel Tank Holder - A	1				
26	TD-40-026	5*30/S Screw	4	56	TD-40-056	Stop Switch	1				
27	TD-40-027	Needle Bearing	1	57	TD-40-057	5*25/SW Screw	4				
28	TD-40-028	Piston	1	58	TD-40-058	Heat Shield	1				
29	TD-40-029		59	TD-40-059	Muffler Comp.	1					
30	TD-40-030		60	TD-40-060	5*10/SW Screw	1					