




PARTS INFORMATION

G-45

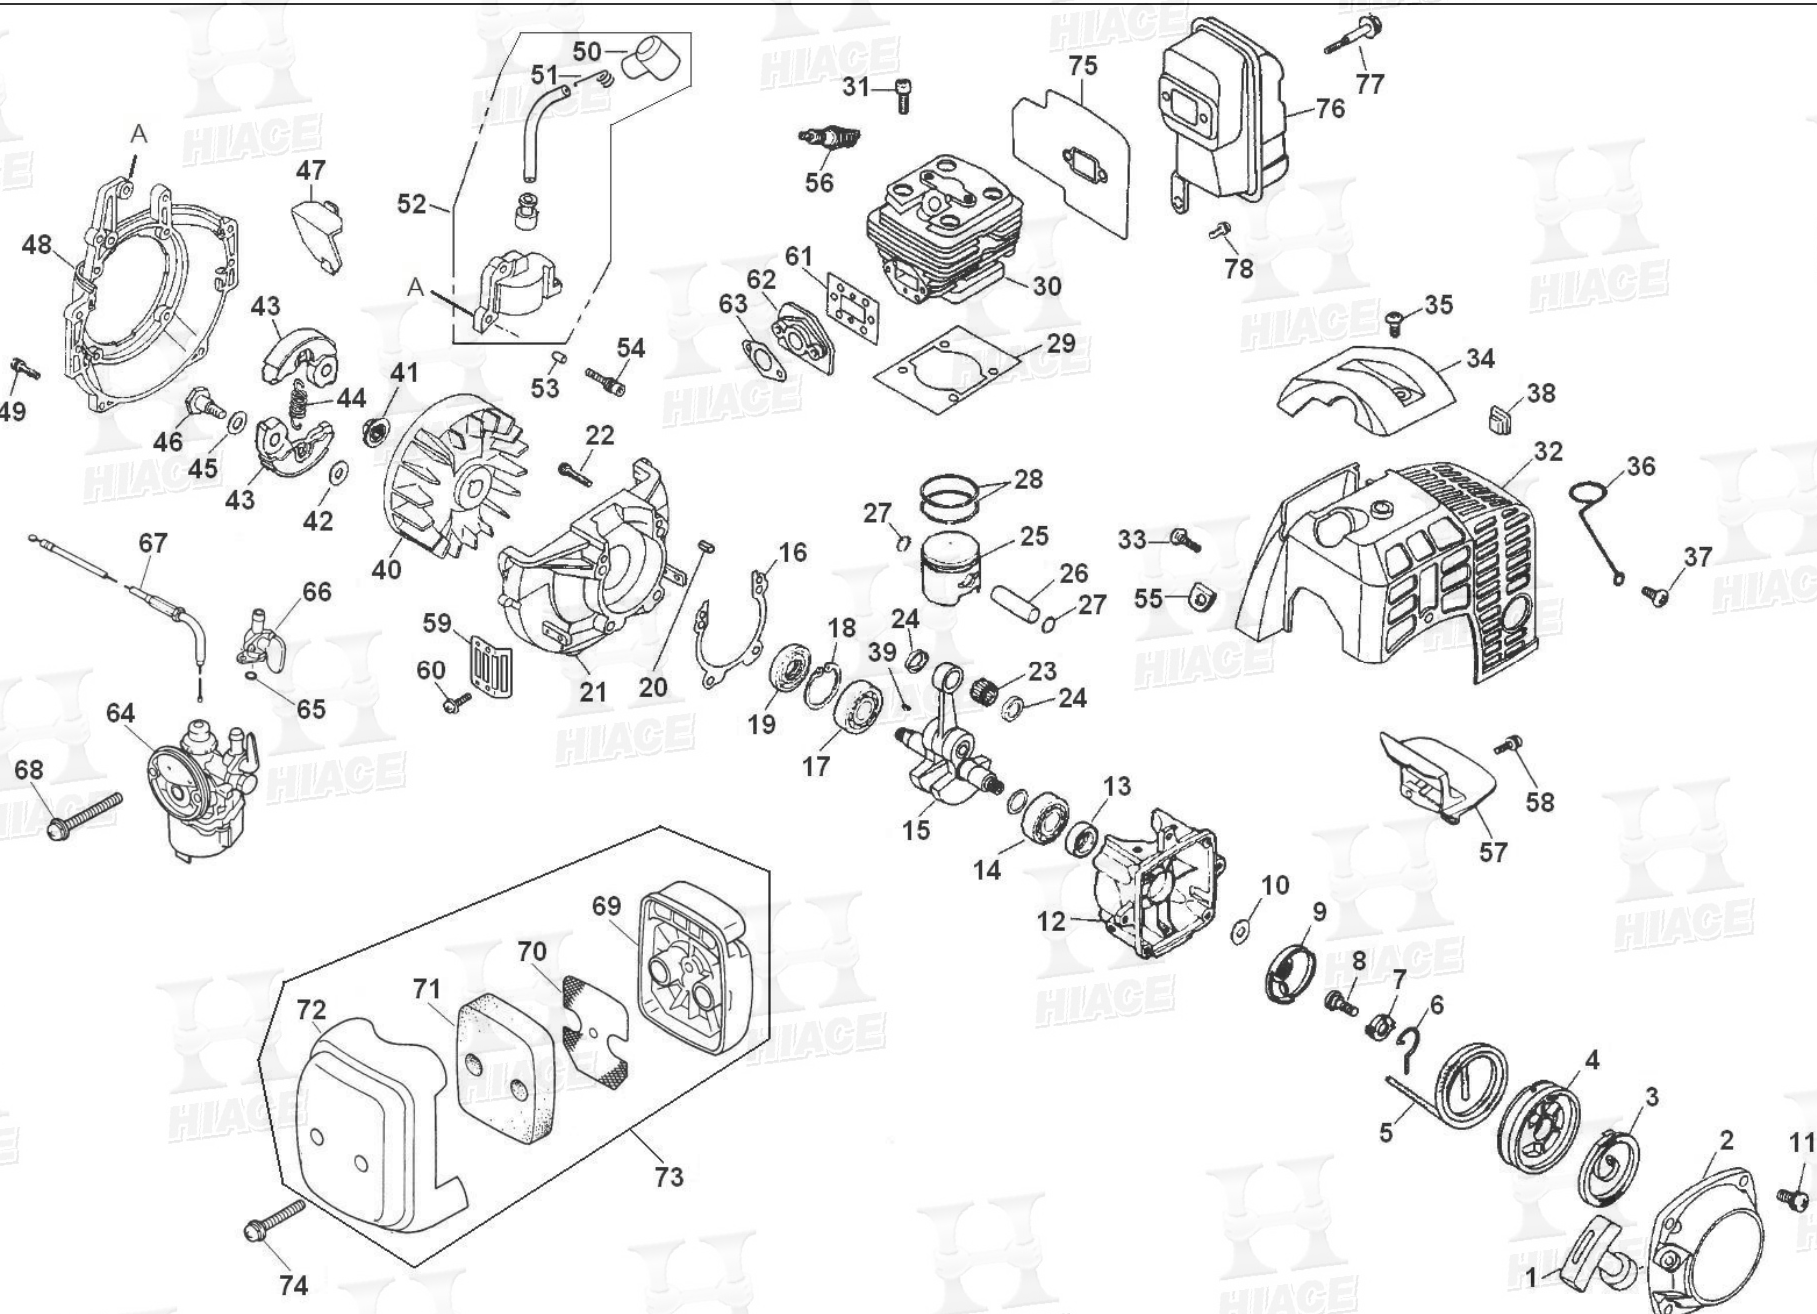


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	G-45-001	Starter Handle	1	30	G-45-030	Cylinder	1	59	G-45-059	Clip for Crank Case	1
2	G-45-002	Recoil Starter Body	1	31	G-45-031	Screw	4	60	G-45-060	Screw	1
3	G-45-003	Recoil Spring	1	32	G-45-032	Engine Cover	1	61	G-45-061	Insulator Gasket	1
4	G-45-004	Starter Rope Reel	1	33	G-45-033	Screw	2	62	G-45-062	Insulator	1
5	G-45-005	Starter Rope	1	34	G-45-034	Cylinder Protector Cap	1	63	G-45-063	Carburetor Gasket	1
6	G-45-006	Swing Arm	1	35	G-45-035	Screw	1	64	G-45-064	Carburetor	1
7	G-45-007	Collar	1	36	G-45-036	Fuel Pipe Holder	1	65	G-45-065	O-Ring	1
8	G-45-008	Starter Screw	1	37	G-45-037	Screw	1	66	G-45-066	Fuel Cock Ass'y	1
9	G-45-009	Starter Pulley	1	38	G-45-038	Stopper	1	67	G-45-067	Cable Line	1
10	G-45-010	Collar	1	39	G-45-039	Wood-Ruff Key	1	68	G-45-068	Screw	2
11	G-45-011	Screw	4	40	G-45-040	Magneto Rotor	1	69	G-45-069	Air Cleaner Body	1
12	G-45-012	Crank Case (B)	1	41	G-45-041	Nut M8	1	70	G-45-070	Filter Net	1
13	G-45-013	Oil Seal	1	42	G-45-042	Washer	2	71	G-45-071	Air Cleaner Sponge	1
14	G-45-014	6201 C3 Ball Bearing	1	43	G-45-043	Clutch Shoe	2	72	G-45-072	Air Cleaner Cover	1
15	G-45-015	Crank Shaft	1	44	G-45-044	Clutch Spring	1	73	G-45-073	Air Cleaner Ass'y	1
16	G-45-016	Crank Case Gasket	1	45	G-45-045	Wavy Washer	2	74	G-45-074	Screw	2
17	G-45-017	6201 C3 Ball Bearing	1	46	G-45-046	Clutch Step Bolt	2	75	G-45-075	Muffler Gasket	1
18	G-45-018	Snap Ring	1	47	G-45-047	Plate	1	76	G-45-076	Muffler	1
19	G-45-019	Oil Seal	1	48	G-45-048	Fan Case	1	77	G-45-077	Screw	2
20	G-45-020	Pin	2	49	G-45-049	Screw	4	78	G-45-078	Screw	1
21	G-45-021	Crank Case (A)	1	50	G-45-050	Spark Plug Cap	1				
22	G-45-022	Screw	4	51	G-45-051	Spark Plug Spring	1				
23	G-45-023	Needle Bearing	1	52	G-45-052	Ignition Coil	1				
24	G-45-024	Washer	2	53	G-45-053	Pin	2				
25	G-45-025		1	54	G-45-054	Screw	2				
26	G-45-026	Piston Ass'y	1	55	G-45-055	Clamp, Ignition Coil	1				
27	G-45-027		2	56	G-45-056	Spark Plug	1				
28	G-45-028	Piston Ring (Set)	2	57	G-45-057	Muffler Protector	1				
29	G-45-029	Cylinder Gasket	1	58	G-45-058	Screw	1				



PARTS INFORMATION

G-45

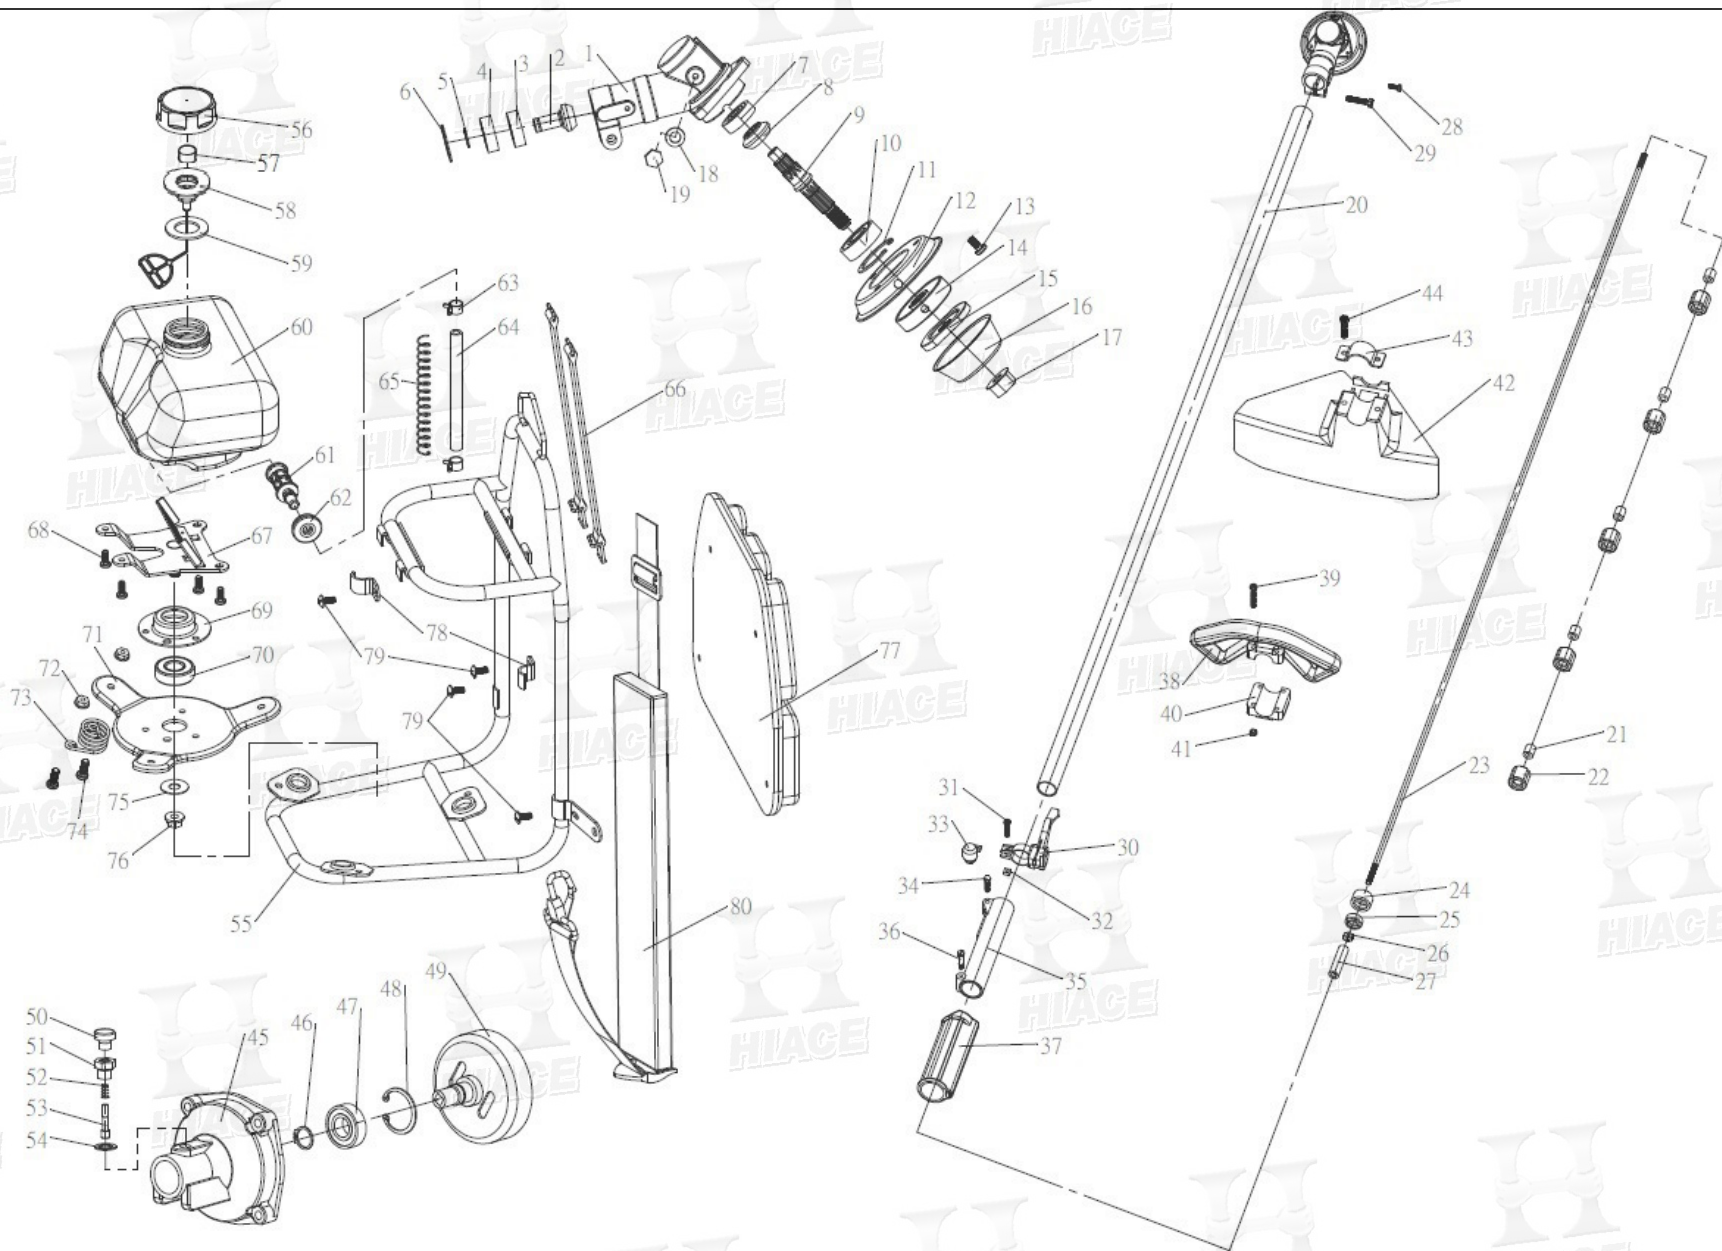

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	HT-BK-001	26MM Gear Case	1	31	HT-BK-031	Screw	1	61	HT-BK-061	Fuel Filter	1
2	HT-BK-002	7T*16T Gear Pinion	1	32	HT-BK-032	Nut	1	62	HT-BK-062	Hose Seat	2
3	HT-BK-003	6000 ZZ Bearing	1	33	HT-BK-033	Stop Switch (L)	1	63	HT-BK-063	Clip	2
4	HT-BK-004	6000 Bearing	1	34	HT-BK-034	Screw	1	64	HT-BK-064	Fuel Tube	1
5	HT-BK-005	S-10 Stop Ring	1	35	HT-BK-035	Joint Pipe	1	65	HT-BK-065	Fuel Pipe Protective Coil	1
6	HT-BK-006	R-26 Stop Ring	1	36	HT-BK-036	Screw	1	66	HT-BK-066	A3 Fuel Tank Band	2
7	HT-BK-007	629 Bearing	1	37	HT-BK-037	Shaft Grip	1	67	HT-BK-067	Engine Bracket	1
8	HT-BK-008	10T*20T Gear Pinion	1	38	HT-BK-038	26MM Loop Handle	1	68	HT-BK-068	Screw	4
9	HT-BK-009	10T*10T Gear Shaft	1	39	HT-BK-039	Screw	2	69	HT-BK-069	Cap for Bearing	1
10	HT-BK-010	6201-2V Bearing	1	40	HT-BK-040	26MM Loop Handle Bracket A	1	70	HT-BK-070	6202 ZZ Bearing	1
11	HT-BK-011	R-32 Stop Ring	1	41	HT-BK-041	Nut	2	71	HT-BK-071	Holder	1
12	HT-BK-012	Cap	1	42	HT-BK-042	Safety Guard	1	72	HT-BK-072	Nut	6
13	HT-BK-013	Screw	3	43	HT-BK-043	Cover Bracket	1	73	HT-BK-073	Spring	3
14	HT-BK-014	10T Cutter Holder	1	44	HT-BK-044	Screw	2	74	HT-BK-074	Screw	3
15	HT-BK-015	10T Cutter Holder Cap	1	45	HT-BK-045	Clutch Case	1	75	HT-BK-075	Washer	1
16	HT-BK-016	Nut Holder Cap	1	46	HT-BK-046	Stop Ring	1	76	HT-BK-076	Nut	1
17	HT-BK-017	10MM Nut (L.)	1	47	HT-BK-047	6202 ZZ Bearing	1	77	HT-BK-077	A3 Shoulder Plate Comp.	1
18	HT-BK-018	Washer	1	48	HT-BK-048	Stop Ring	1	78	HT-BK-078	Clip for Shoulder Frame Comp.	2
19	HT-BK-019	Screw	1	49	HT-BK-049	7T Clutch Drum	1	79	HT-BK-079	Screw	4
20	HT-BK-020	26*1.75*1290MM Pipe	1	50	HT-BK-050	Snap Pin	1	80	HT-BK-080	A3 Shoulder Belt	2
21	HT-BK-021	7*14*14MM Bushing	5	51	HT-BK-051		1				
22	HT-BK-022	23MM Cushion Rubber	5	52	HT-BK-052		1				
23	HT-BK-023	7MM*7T*1365MM Driving Shaft	1	53	HT-BK-053		1				
24	HT-BK-024	Cap for Bearing	1	54	HT-BK-054		1				
25	HT-BK-025	627 ZZ Bearing	1	55	HT-BK-055	A3 Shoulder Frame Comp.	1				
26	HT-BK-026	Nut	1	56	HT-BK-056	Fuel Tank Cap	1				
27	HT-BK-027	7MM Adaptor	1	57	HT-BK-057	Cap Sponge	1				
28	HT-BK-028	Screw	1	58	HT-BK-058	Fuel Tank Inner Cap	1				
29	HT-BK-029	Screw	1	59	HT-BK-059	Fuel Tank Cap Compressor	1				
30	HT-BK-030	R6 Throttle Lever	1	60	HT-BK-060	Fuel Tank	1				