




PARTS INFORMATION

HT-328

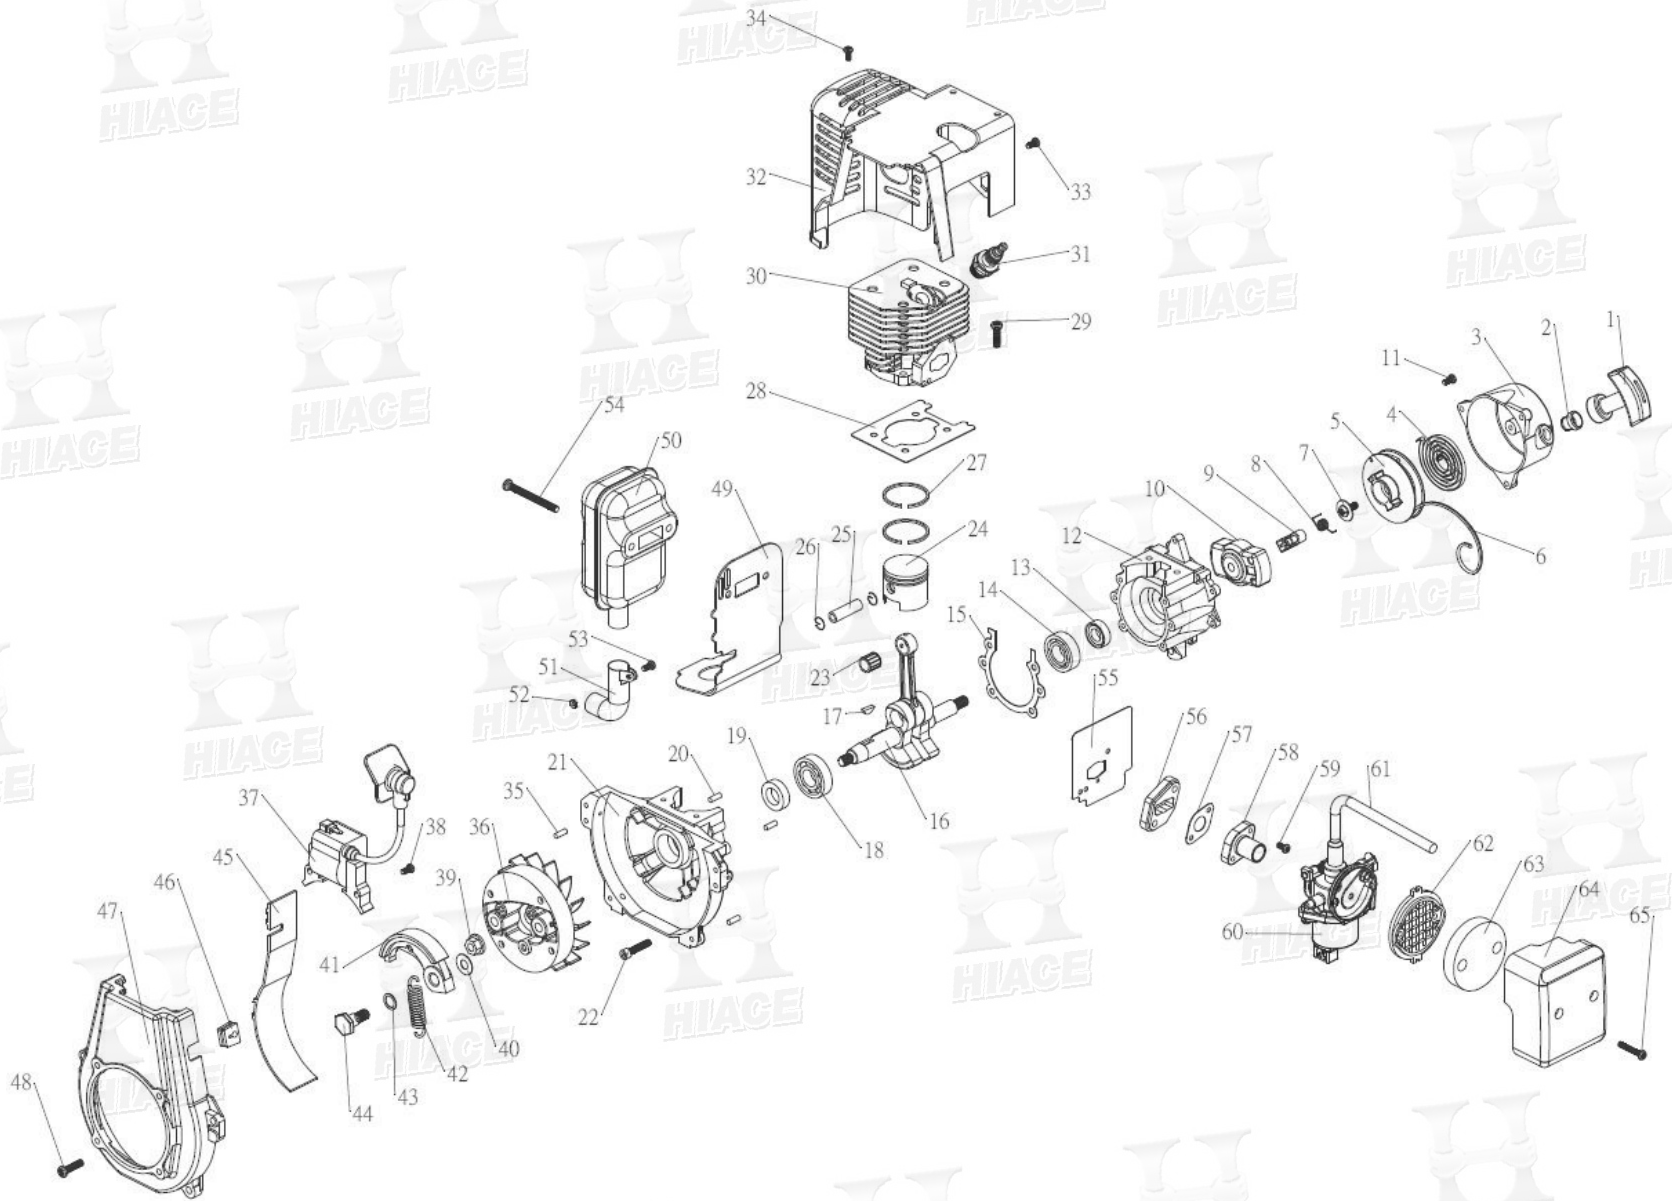


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	HT-328-001	Starter Handle	1	31	HT-328-031	Spark Plug	1	61	HT-328-061	Throttle Wire	1
2	HT-328-002	Insulator	1	32	HT-328-032	Cylinder Protector	1	62	HT-328-062	Cleaner Body	1
3	HT-328-003	Recoil Starter Body	1	33	HT-328-033	Screw		63	HT-328-063	Cleaner Sponge	1
4	HT-328-004	Recoil Spring	1	34	HT-328-034	Screw		64	HT-328-064	Cleaner Cap	1
5	HT-328-005	Starter Rope Reel	1	35	HT-328-035	4*11.8 Pin	2	65	HT-328-065	Screw	
6	HT-328-006	Starter Rope	1	36	HT-328-036	Magneto Rotor	1				
7	HT-328-007	Starter Screw	1	37	HT-328-037	Ignition Coil	1				
8	HT-328-008	Starter Pawl Spring	1	38	HT-328-038	Screw					
9	HT-328-009	Starter Pawl	1	39	HT-328-039	M8 Nut	1				
10	HT-328-010	Starter Pully	1	40	HT-328-040	M8 Washer	1				
11	HT-328-011	Screw	3	41	HT-328-041	Clutch Arm Comp.	2				
12	HT-328-012	Crank Case (B)	1	42	HT-328-042	Clutch Spring	1				
13	HT-328-013	12 22 7 Oil Seal	1	43	HT-328-043	Washer	2				
14	HT-328-014	Ball Bearing 6002 C3	1	44	HT-328-044	Clutch Step Bolt	2				
15	HT-328-015	Crank Case Gasket	1	45	HT-328-045	Flash Pan	1				
16	HT-328-016	Crank Shaft	1	46	HT-328-046	Clamp, Coil	1				
17	HT-328-017	Wood-Ruff Key	1	47	HT-328-047	Fan Case	1				
18	HT-328-018	Ball Bearing 6202 C3	1	48	HT-328-048	Screw					
19	HT-328-019	15 25 7 Oil Seal	1	49	HT-328-049	Muffler Gasket	1				
20	HT-328-020	4*11.8 Pin	2	50	HT-328-050	Muffler	1				
21	HT-328-021	Crank Case (A)	1	51	HT-328-051						
22	HT-328-022	Screw		52	HT-328-052						
23	HT-328-023	Needle Bearing	1	53	HT-328-053						
24	HT-328-024	Piston	1	54	HT-328-054			Muffler Screw	2		
25	HT-328-025			55	HT-328-055	Space Gasket	1				
26	HT-328-026			56	HT-328-056	Space	1				
27	HT-328-027	Piston Ring	2	57	HT-328-057	Inlet Manifold Gasket	1				
28	HT-328-028	Cylinder Gasket	1	58	HT-328-058	Inlet Manifold	1				
29	HT-328-029	Screw		59	HT-328-059	Screw					
30	HT-328-030	Cylinder	1	60	HT-328-060	Carburetor	1				



PARTS INFORMATION

KBC-2600-A2

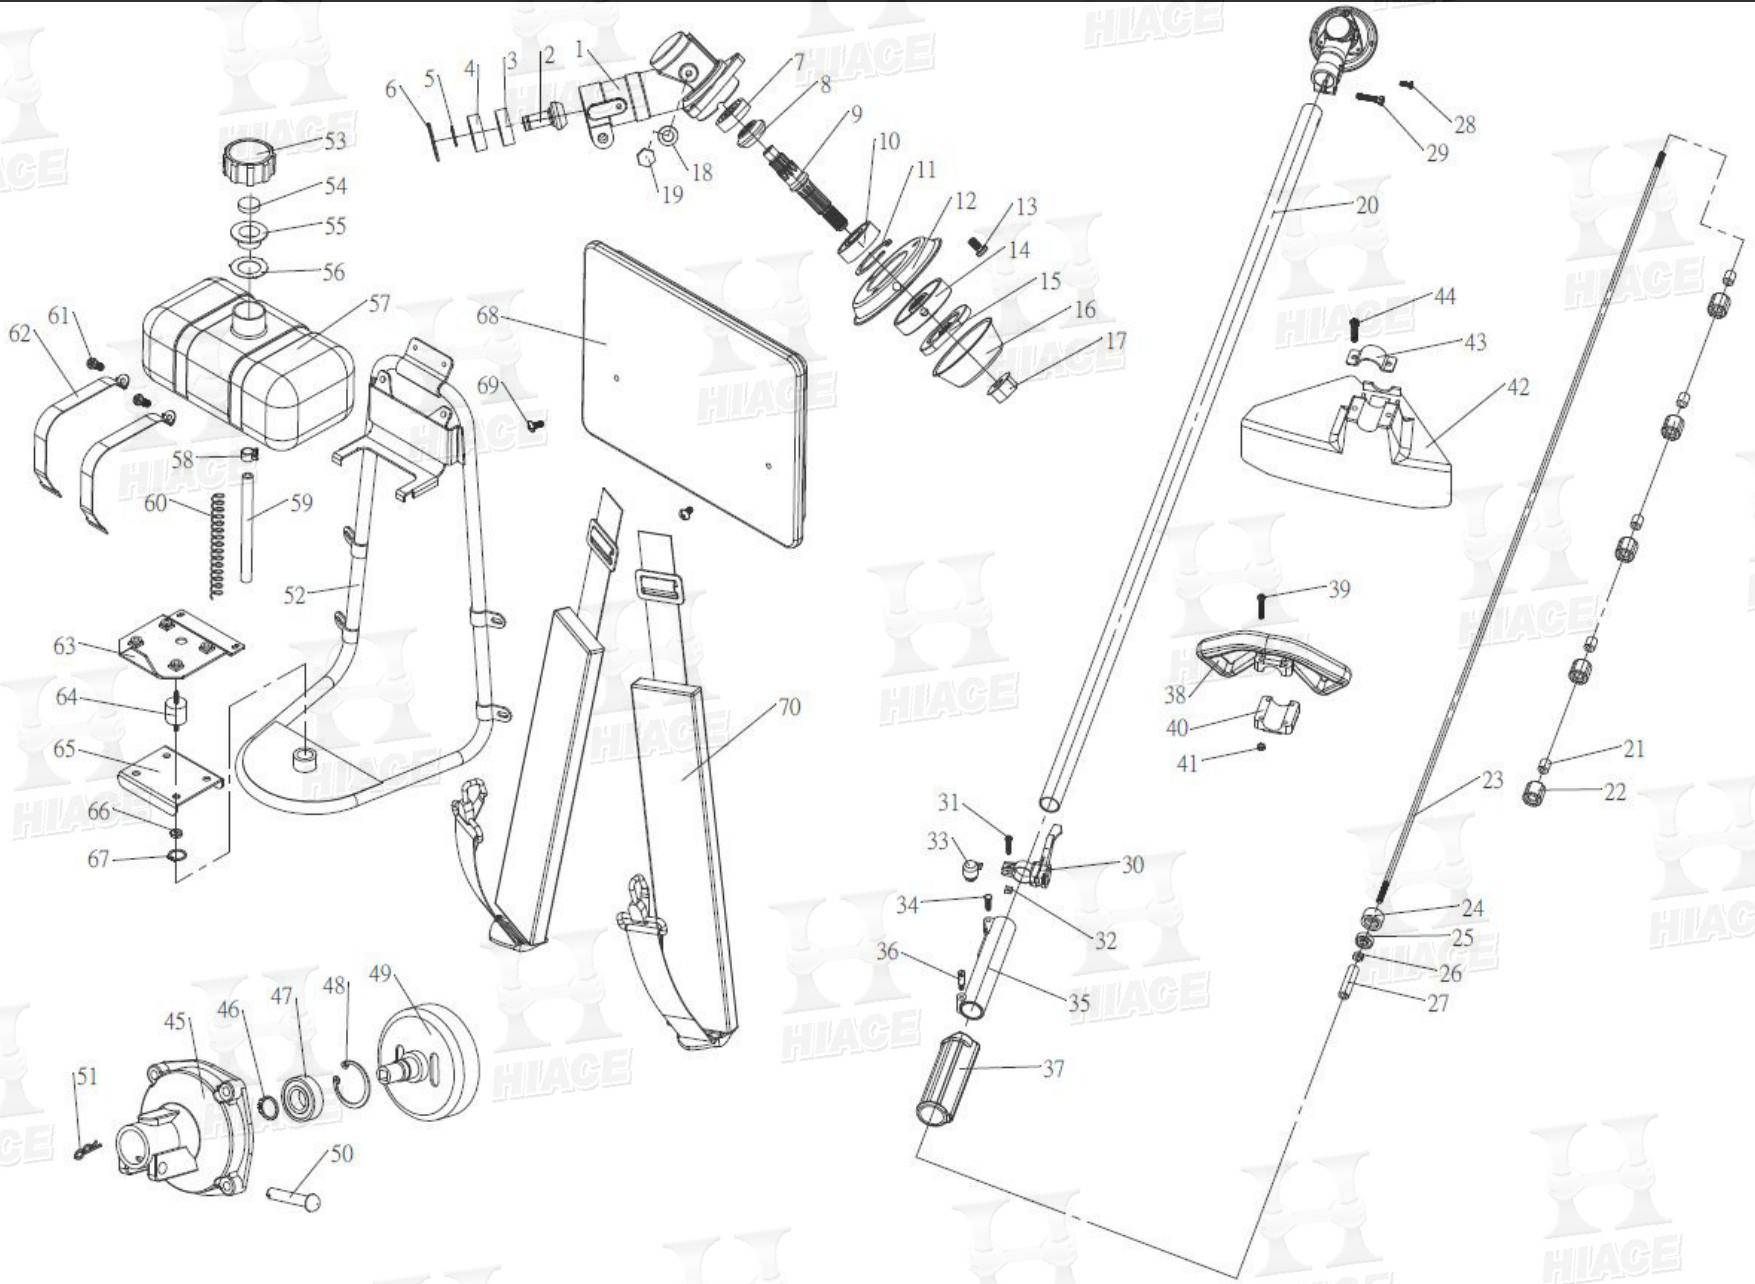

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	KBC-2600-A2-001	26MM Gear Case	1	31	KBC-2600-A2-031	Screw	1	61	KBC-2600-A2-061	Screw	2
2	KBC-2600-A2-002	7*16T Gear Pinion	1	32	KBC-2600-A2-032	Nut	1	62	KBC-2600-A2-062	A2 Fuel Tank Band	2
3	KBC-2600-A2-003	6000 ZZ Bearing	1	33	KBC-2600-A2-033	Stop Switch	1	63	KBC-2600-A2-063	Engine Base Comp.	1
4	KBC-2600-A2-004	6000 Bearing	1	34	KBC-2600-A2-034	Screw	1	64	KBC-2600-A2-064	6mm Cushion Rubber Comp.	4
5	KBC-2600-A2-005	Stop Ring	1	35	KBC-2600-A2-035	Joint Pipe	1	65	KBC-2600-A2-065	Engine Base B Comp.	1
6	KBC-2600-A2-006	Stop Ring	1	36	KBC-2600-A2-036	Screw	1	66	KBC-2600-A2-066		
7	KBC-2600-A2-007	629 Bearing	1	37	KBC-2600-A2-037	Shaft Grip	1	67	KBC-2600-A2-067		
8	KBC-2600-A2-008	10*20T Gear Pinion	1	38	KBC-2600-A2-038	26mm Handle	1	68	KBC-2600-A2-068	A2 Shoulder Plate	1
9	KBC-2600-A2-009	Gear Shaft	1	39	KBC-2600-A2-039	Screw	2	69	KBC-2600-A2-069	Screw	2
10	KBC-2600-A2-010	6201-2RS Bearing	1	40	KBC-2600-A2-040	26mm handle Bracket A	1	70	KBC-2600-A2-070	A2 Shoulder Belt	2
11	KBC-2600-A2-011	Stop Ring	1	41	KBC-2600-A2-041	Nut	2				
12	KBC-2600-A2-012	Gear Case Cover	1	42	KBC-2600-A2-042	Safety Guard Comp.	1				
13	KBC-2600-A2-013	Screw	3	43	KBC-2600-A2-043	Safety Guard Set Plate	1				
14	KBC-2600-A2-014	Cutter Holder	1	44	KBC-2600-A2-044	Screw	2				
15	KBC-2600-A2-015	Cutter Holder Cap	1	45	KBC-2600-A2-045	Clutch Case	1				
16	KBC-2600-A2-016	Nut Holder Cap	1	46	KBC-2600-A2-046	Stop Ring	1				
17	KBC-2600-A2-017	10MM Nut (L.)	1	47	KBC-2600-A2-047	6202ZZ Bearing	1				
18	KBC-2600-A2-018	Washer	1	48	KBC-2600-A2-048	Stop Ring	1				
19	KBC-2600-A2-019	Screw	1	49	KBC-2600-A2-049	Clutch Drum Comp.	1				
20	KBC-2600-A2-020	26*1.75*1290mm Tube	1	50	KBC-2600-A2-050	Pin	1				
21	KBC-2600-A2-021	7*14*14 Bushing Ass'y	5	51	KBC-2600-A2-051	Snap Pin	1				
22	KBC-2600-A2-022	23mm Cushion Rubber.	5	52	KBC-2600-A2-052	A2 Shoulder Frame	1				
23	KBC-2600-A2-023	7T*1365 Drive Shaft.	1	53	KBC-2600-A2-053	Tank Cap	1				
24	KBC-2600-A2-024	627 Oil Seal	1	54	KBC-2600-A2-054	Tank Cap Sponge	1				
25	KBC-2600-A2-025	627ZZ Bearing	1	55	KBC-2600-A2-055	Tank Inner Cap	1				
26	KBC-2600-A2-026	Nut	1	56	KBC-2600-A2-056	Tank Cap Compressor	1				
27	KBC-2600-A2-027	7mm Adaptor	1	57	KBC-2600-A2-057	A2 Fuel Tank	1				
28	KBC-2600-A2-028	Screw	1	58	KBC-2600-A2-058	Clip	2				
29	KBC-2600-A2-029	Screw	1	59	KBC-2600-A2-059	6*10 Fuel Pipe	1				
30	KBC-2600-A2-030	R6 Throttle Lever	1	60	KBC-2600-A2-060	Fuel Pipe Protective Coil	1				