


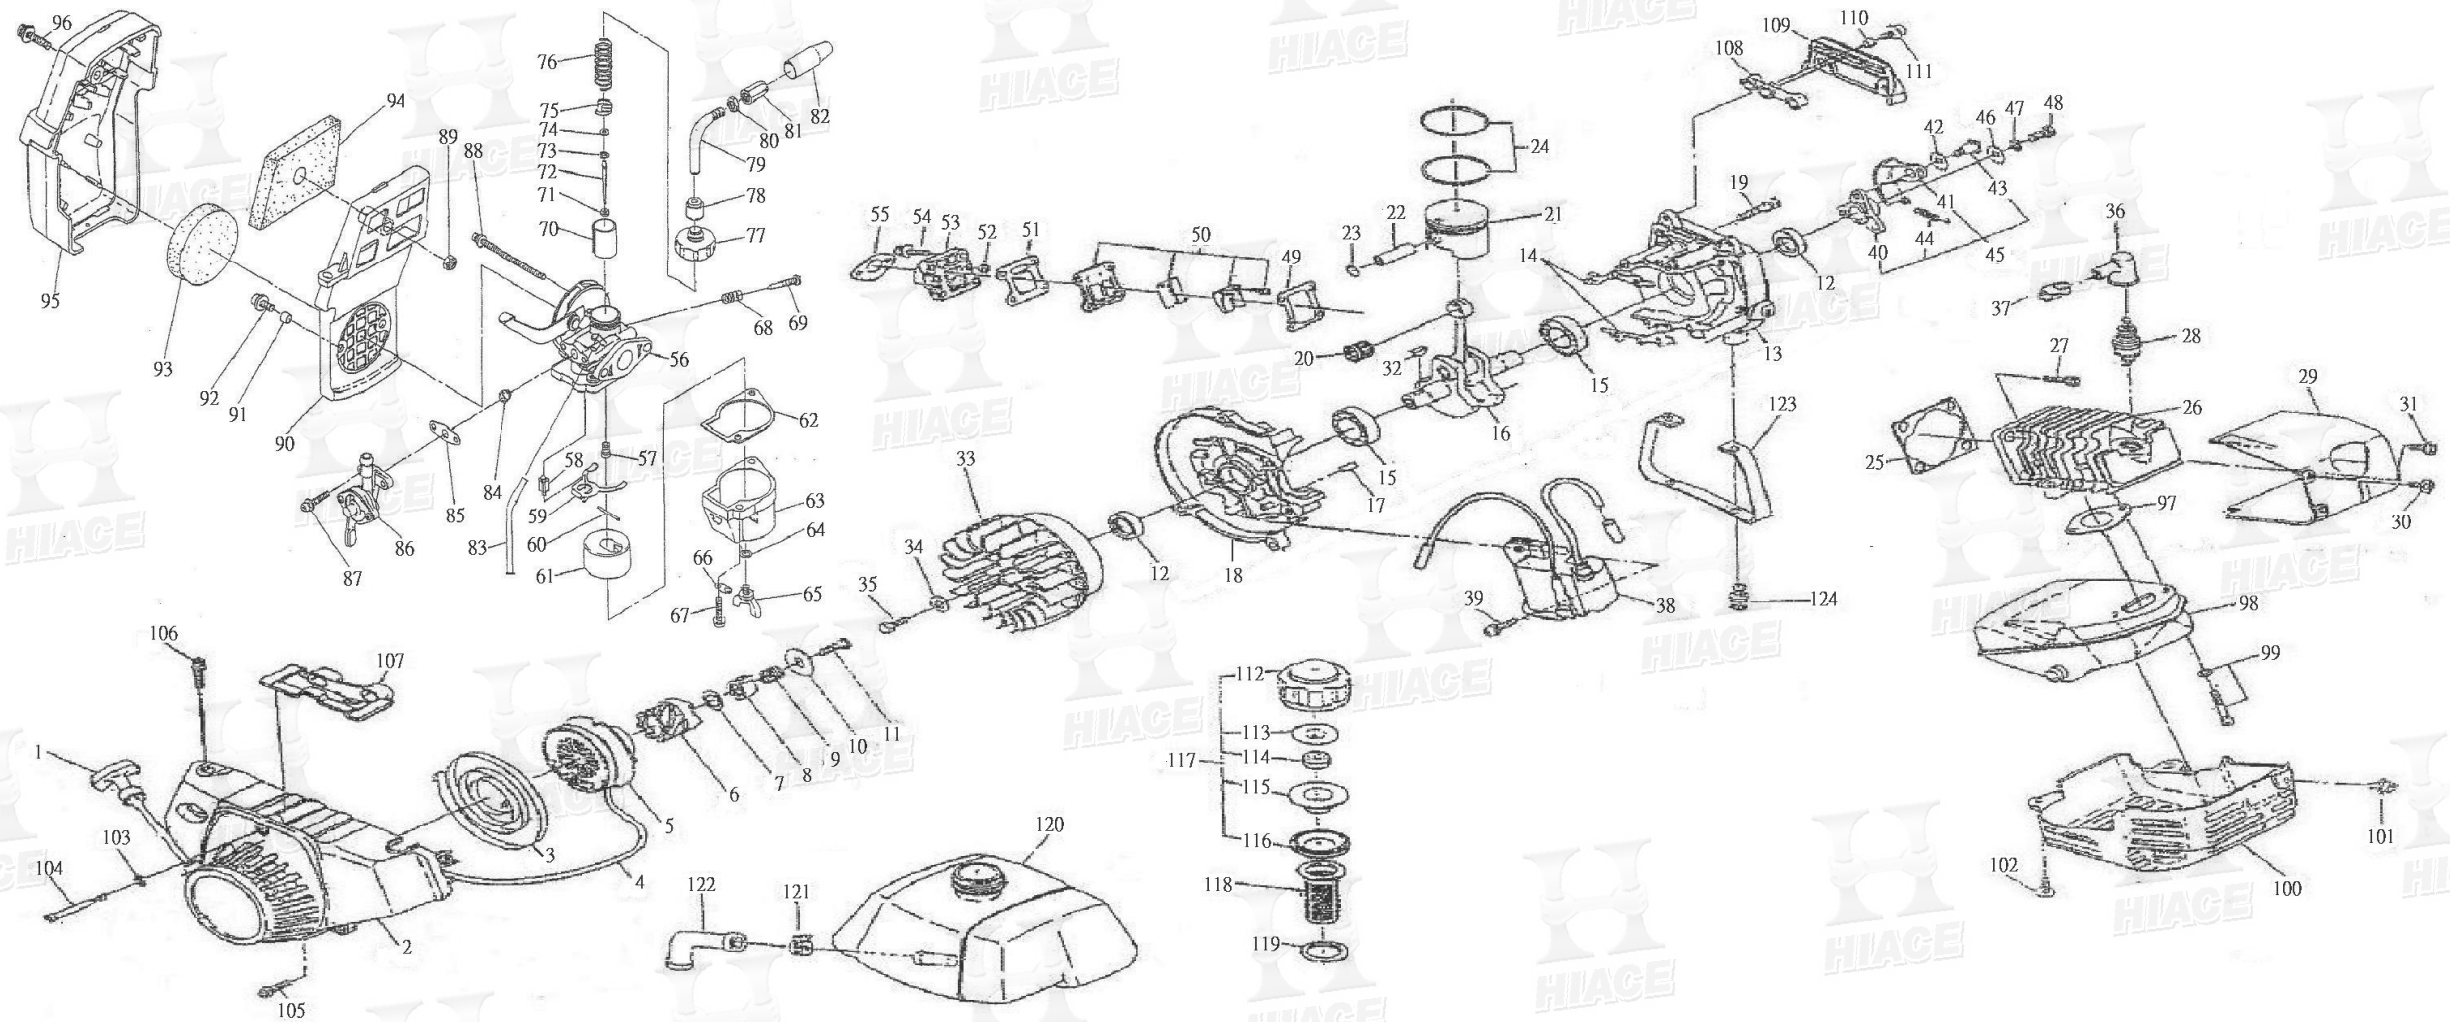


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	NB-411-001	Starter Handle	1	22	NB-411-022	Piston Ass'y	1	43	NB-411-043	Clutch Step Bolt	3	64	NB-411-064	O-Ring	1	85	NB-411-085	Fuel Cock Gasket	1	106	NB-411-106	Screw	1
2	NB-411-002	Recoil Starter Body	1	23	NB-411-023		2	44	NB-411-044	Clutch Spring	3	65	NB-411-065	Wing Screw	1	86	NB-411-086	Fuel Cock Ass'y	1	107	NB-411-107	Damper	1
3	NB-411-003	Recoil Spring	1	24	NB-411-024	Piston Ring	2	45	NB-411-045	Clutch Ass'y	1	66	NB-411-066	Plate	1	87	NB-411-087	Screw	2	108	NB-411-108	Damper	1
4	NB-411-004	Starter Rope	1	25	NB-411-025	Cylinder Gasket	1	46	NB-411-046	Washer	1	67	NB-411-067	Screw	2	88	NB-411-088	Screw	2	109	NB-411-109	Fuel Tank Bracket	1
5	NB-411-005	Starter Rope Reel	1	26	NB-411-026	Cylinder	1	47	NB-411-047	Spring Washer	1	68	NB-411-068	Spring	1	89	NB-411-089	Nut	1	110	NB-411-110	Spacer	2
6	NB-411-006	Ratchet	1	27	NB-411-027	Screw	4	48	NB-411-048	Screw	1	69	NB-411-069	Adjust Screw	1	90	NB-411-090	Air Cleaner Case	1	111	NB-411-111	Screw	2
7	NB-411-007	Washer	1	28	NB-411-028	Spark Plug	1	49	NB-411-049	Lead Valve Gasket	1	70	NB-411-070	Piston Valve	1	91	NB-411-091	Spacer	2	112	NB-411-112	Fuel Tank Cap	1
8	NB-411-008	Ratchet Guide	1	29	NB-411-029	Engine Cover	1	50	NB-411-050	Lead Valve Ass'y	1	71	NB-411-071	Packing	1	92	NB-411-092	Screw	2	113	NB-411-113	Cap Inner Plate	1
9	NB-411-009	Friction Spring	1	30	NB-411-030	Screw	1	51	NB-411-051	Insulator Gasket	1	72	NB-411-072	Jet Needle	1	93	NB-411-093	Circle Sponge	1	114	NB-411-114	Cap Sponge	1
10	NB-411-010	Washer	1	31	NB-411-031	Screw	1	52	NB-411-052	Nut	2	73	NB-411-073	E-Ring	1	94	NB-411-094	Trapezoid Sponge	1	115	NB-411-115	Cap Inner	1
11	NB-411-011	Bind Screw	1	32	NB-411-032	Wood-Ruff Key	1	53	NB-411-053	Insulator	1	74	NB-411-074	Packing	1	95	NB-411-095	Air Cleaner Cover	1	116	NB-411-116	Cap Inner Packing	1
12	NB-411-012	Oil Seal	2	33	NB-411-033	Magneto Rotor	1	54	NB-411-054	Screw	2	75	NB-411-075	Spring Plate	1	96	NB-411-096	Screw	1	117	NB-411-117	Fuel Tank Cap Ass'y	1
13	NB-411-013	Crank Case (A)	1	34	NB-411-034	Washer	1	55	NB-411-055	Carburetor Gasket	1	76	NB-411-076	Throttle Valve Spring	1	97	NB-411-097	Muffler Gasket	1	118	NB-411-118	Fuel Filter	1
14	NB-411-014	Crank Case Gasket	1	35	NB-411-035	Screw	1	56	NB-411-056	Carburetor Body	1	77	NB-411-077	Mixing Cap	1	98	NB-411-098	Muffler	1	119	NB-411-119	Fuel Fileter Gasket	1
15	NB-411-015	6202 C3 Ball Bearing	2	36	NB-411-036	Spark Plug Cap	1	57	NB-411-057	Main Jet	1	78	NB-411-078	Cap	1	99	NB-411-099	Screw	2	120	NB-411-120	Fuel Tank	1
16	NB-411-016	Crank Shaft	1	37	NB-411-037	Spark Plug Cap Spring	1	58	NB-411-058	Needle Ass'y	1	79	NB-411-079	Cable Guide	1	100	NB-411-100	Muffler Cover	1	121	NB-411-121	Hose Clamp	1
17	NB-411-017	Pin	2	38	NB-411-038	Ignition Coil	1	59	NB-411-059	Float Arm	1	80	NB-411-080	Nut	1	101	NB-411-101	Screw	1	122	NB-411-122	Tube Fuel	1
18	NB-411-018	Crank Case (B)	1	39	NB-411-039	Screw	2	60	NB-411-060	Straight Pin	1	81	NB-411-081	Cable Adjuster	1	102	NB-411-102	Screw	1	123	NB-411-123	Stand	1
19	NB-411-019	Screw	4	40	NB-411-040	Clutch Seat	1	61	NB-411-061	Float	1	82	NB-411-082	Cap	1	103	NB-411-103	Washer	1	124	NB-411-124	Screw	2
20	NB-411-020	Needle Bearing	1	41	NB-411-041	Clutch Shoe	3	62	NB-411-062	Float Body Gasket	1	83	NB-411-083	Hose	1	104	NB-411-104	Screw	1	125			
21	NB-411-021	Piston Ass'y	1	42	NB-411-042	Bow Washer	3	63	NB-411-063	Float Body	1	84	NB-411-084	Filter	1	105	NB-411-105	Screw	1	126			



PARTS INFORMATION

RBC-4800

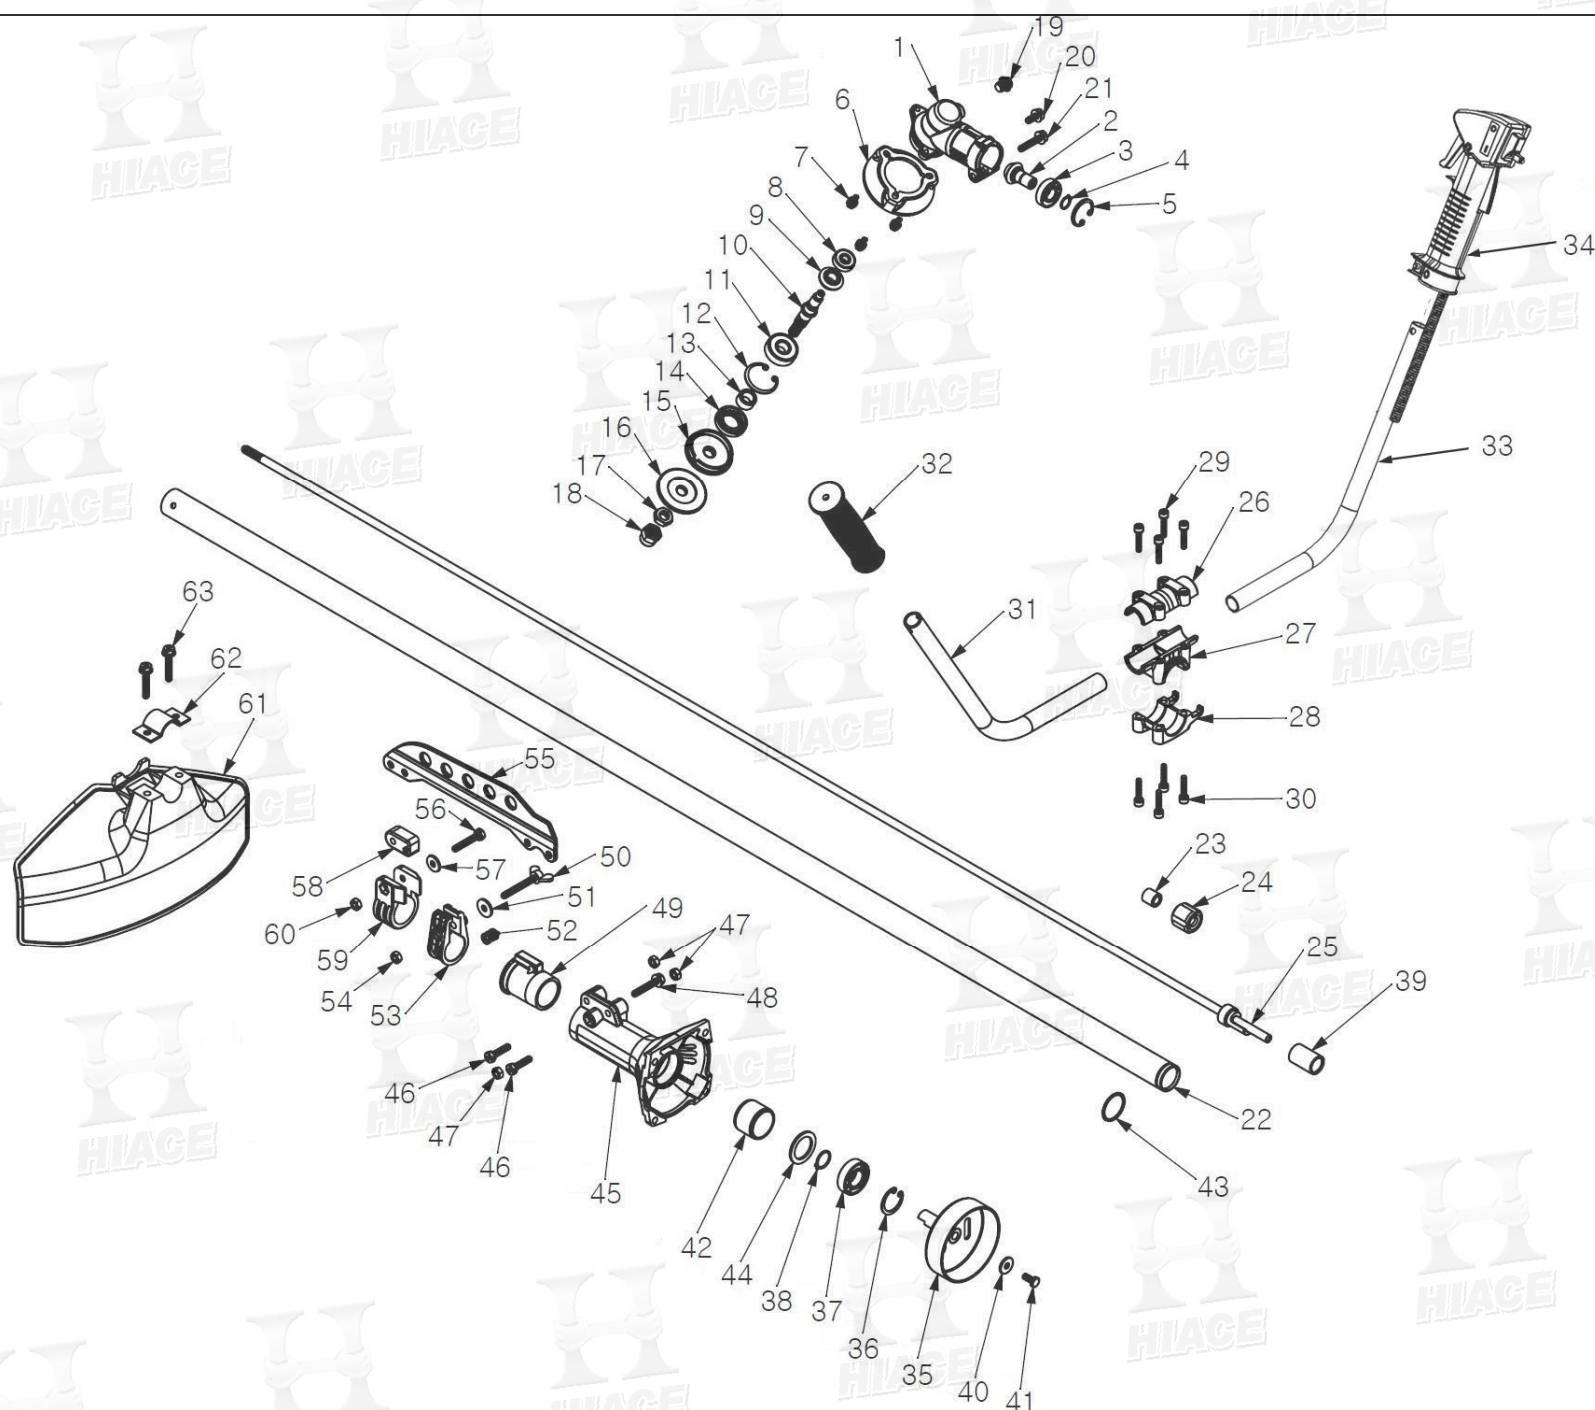

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	RBC-4800-BA-01	28MM 28B Gear Case	1	29	RBC-4800-BA-29	Screw	4	58	RBC-4800-BA-58	Hanger Fixer Inner Body	1
2	RBC-4800-BA-02	9T*14T Gear Pinion	1	30	RBC-4800-BA-30	Screw	4	59	RBC-4800-BA-59	Hanger Fixer	1
3	RBC-4800-BA-03	6001-RS Bearing	1	31	RBC-4800-BA-31	18*375 L Handle Tube	1	60	RBC-4800-BA-60	6MM Nut	1
4	RBC-4800-BA-04	S-12 Stop Ring	1	32	RBC-4800-BA-32	Handle Rubber Cover	1	61	RBC-4800-BA-61	Safety Guard	1
5	RBC-4800-BA-05	R-28 Stop Ring	1	33	RBC-4800-BA-33	18*375 L Handle Tube	1	62	RBC-4800-BA-62	Cover Bracket	1
6	RBC-4800-BA-06	Gear Case Cap	1	34	RBC-4800-BA-34	A Type Throttle Lever	1	63	RBC-4800-BA-63	Screw	2
7	RBC-4800-BA-07	Screw	1	35	RBC-4800-BA-35	9T Clutch Drum	1				
8	RBC-4800-BA-08	627-2RS Bearing	1	36	RBC-4800-BA-36	R-35 Stop Ring	1				
9	RBC-4800-BR-09	Φ10T*17T Gear Pinion	1	37	RBC-4800-BA-37	6003 ZZ C3 Bearing	1				
10	RBC-4800-BA-10	Gear Shaft	1	38	RBC-4800-BA-38	S-17 Stop Ring	1				
11	RBC-4800-BA-11	6201 2RS Bearing	1	39	RBC-4800-BA-39	Damper	1				
12	RBC-4800-BA-12	R-32 Stop Ring	1	40	RBC-4800-BA-40	Washer	1				
13	RBC-4800-BA-13	12*18*10 Bushing	1	41	RBC-4800-BA-41	Screw	1				
14	RBC-4800-BA-14	TC18 32 7 Oil Seal	3	42	RBC-4800-BA-42	Pipe Holder	1				
15	RBC-4800-BA-15	Cutter Holder	1	43	RBC-4800-BA-43	Stop Ring	1				
16	RBC-4800-BA-16	Cutter Holder Washer	1	44	RBC-4800-BA-44	Washer	1				
17	RBC-4800-BA-17	10MM Nut (L.)	1	45	RBC-4800-BA-45	R4 Clutch Case	1				
18	RBC-4800-BA-18	10MM Cutting Nut (L.)	1	46	RBC-4800-BA-46	Screw	2				
19	RBC-4800-BA-19	Screw	1	47	RBC-4800-BA-47	6MM Nut	1				
20	RBC-4800-BA-20	Screw	1	48	RBC-4800-BA-48	Screw	1				
21	RBC-4800-BA-21	Screw	1	49	RBC-4800-BA-49	28MM Stopper	1				
	#1~21	28B Gear Case Ass'y	1		#42,45~49	R4 Clutch Case Ass'y	1				
22	RBC-4800-BA-22	28*1400*2.0t Tube	2	50	RBC-4800-BA-50	M6 Wing Screw	1				
23	RBC-4800-BA-23	8*14*14 Bushing	1	51	RBC-4800-BA-51	Washer	1				
24	RBC-4800-BA-24	24MM Cushion Rubber	4	52	RBC-4800-BA-52	Fixer Spring	1				
	#23~24	24MM Bushing Ass'y	1	53	RBC-4800-BA-53	28 MM Fixer	1				
25	RBC-4800-BA-25	8MM*9T*1435mm Driving Shaft	1	54	RBC-4800-BA-54	6MM Nut	1				
26	RBC-4800-BA-26	Handle Holder (A)	1	55	RBC-4800-BA-55	Hanger	1				
27	RBC-4800-BA-27	Handle Holder (B)	1	56	RBC-4800-BA-56	Screw	1				
28	RBC-4800-BA-28	Handle Holder (C)	1	57	RBC-4800-BA-57	Washer	1				