





PARTS INFORMATION

G-45L

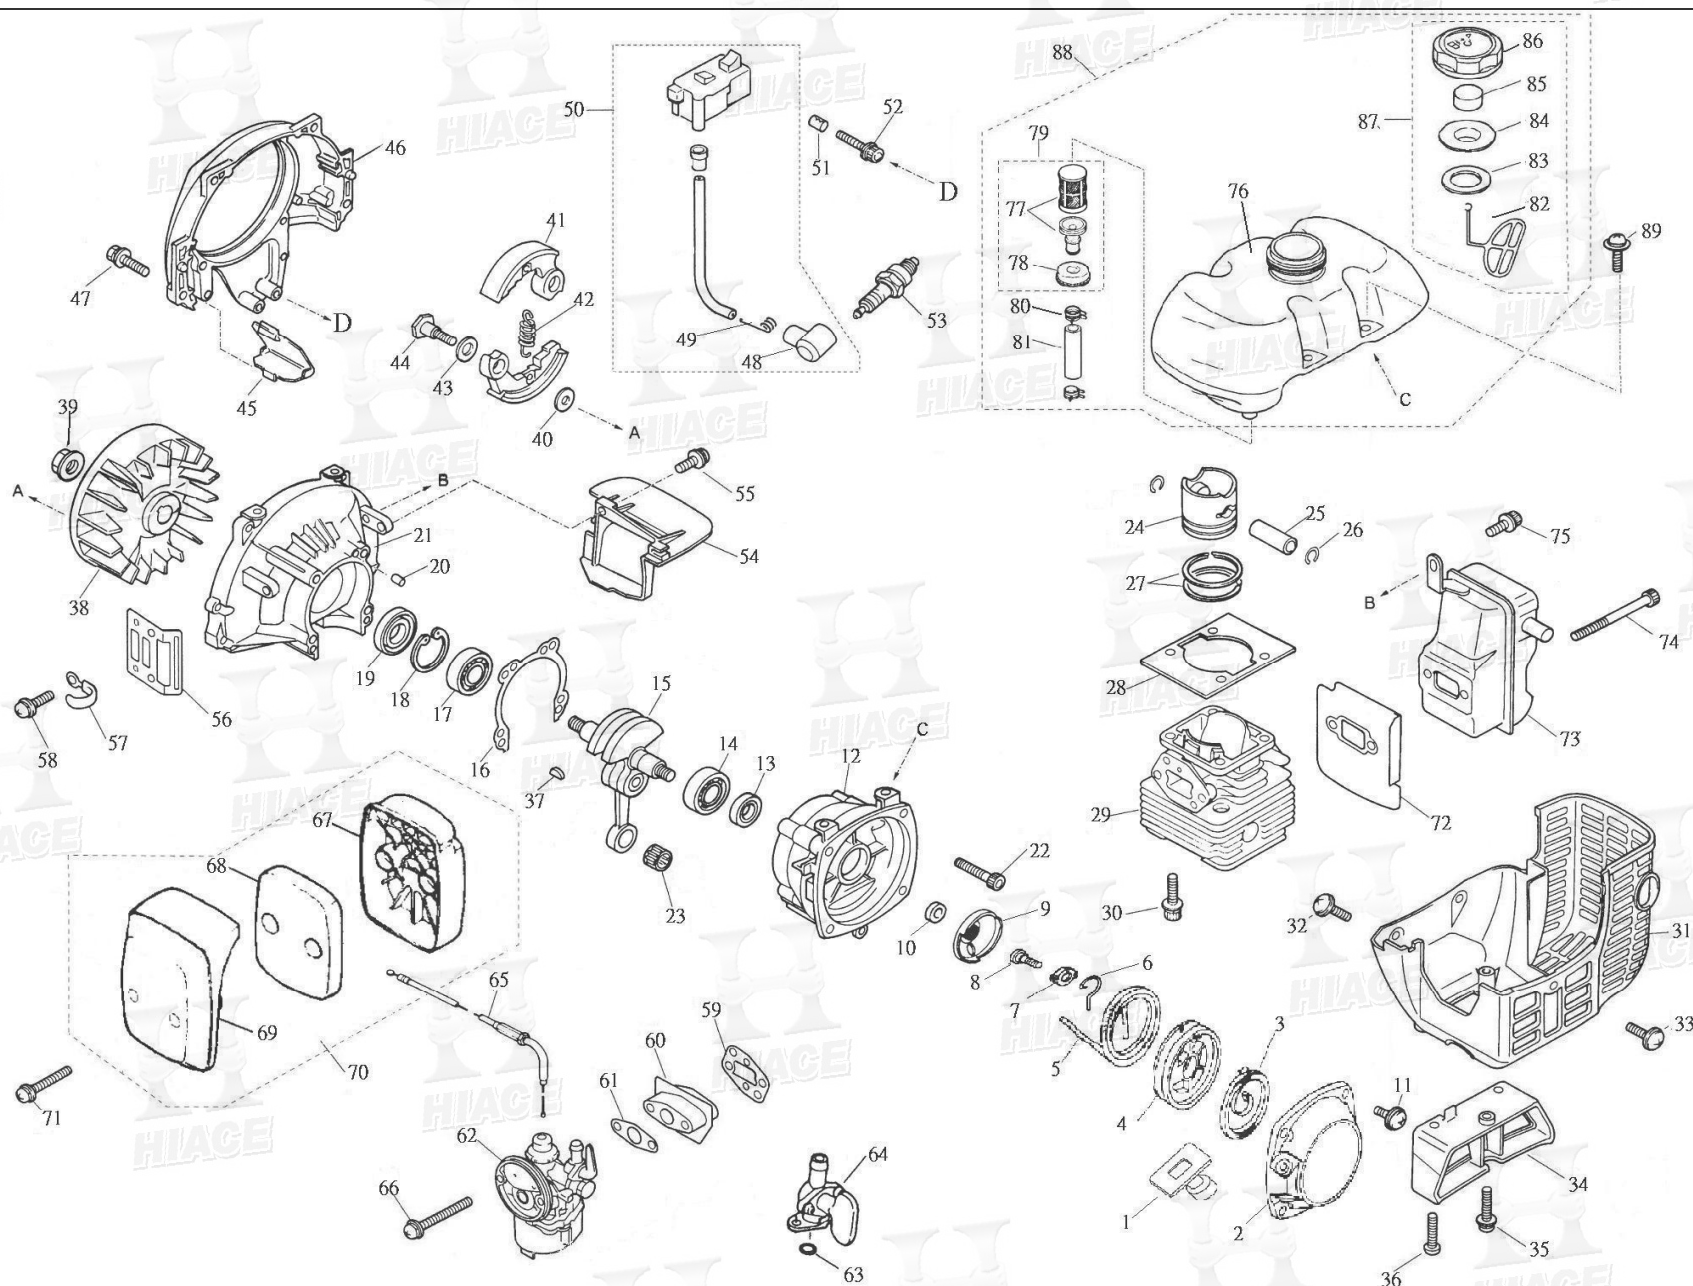

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	G-45L-001	Starter Handle	1	31	G-45L-031	Engine Cover	1	61	G-45L-061	Carburetor Gasket	1
2	G-45L-002	Recoil Starter Body	1	32	G-45L-032	Screw	2	62	G-45L-062	Carburetor	1
3	G-45L-003	Recoil Spring	1	33	G-45L-033	Screw	1	63	G-45L-063	O-Ring	1
4	G-45L-004	Starter Rope Reel	1	34	G-45L-034	Stand	1	64	G-45L-064	Fuel Cock Ass'y	1
5	G-45L-005	Starter Rope	1	35	G-45L-035	Screw	1	65	G-45L-065	Cable Line	1
6	G-45L-006	Swing Arm	1	36	G-45L-036	Screw	2	66	G-45L-066	Screw	2
7	G-45L-007	Collar	1	37	G-45L-037	Wood-Ruff Key	1	67	G-45L-067	Air Cleaner Body	1
8	G-45L-008	Starter Screw	1	38	G-45L-038	Magneto Rotor	1	68	G-45L-068	Air Cleaner Sponge	1
9	G-45L-009	Starter Pulley	1	39	G-45L-039	Nut M8	1	69	G-45L-069	Air Cleaner Cover	1
10	G-45L-010	Collar	1	40	G-45L-040	Washer	2	70	G-45L-070	Air Cleaner Ass'y	1
11	G-45L-011	Screw	4	41	G-45L-041	Clutch Shoe	2	71	G-45L-071	Screw	2
12	G-45L-012	Crank Case (B)	1	42	G-45L-042	Clutch Spring	1	72	G-45L-072	Muffler Gasket	1
13	G-45L-013	Oil Seal	1	43	G-45L-043	Wavy Washer	2	73	G-45L-073	Muffler	1
14	G-45L-014	6201 C3 Ball Bearing	1	44	G-45L-044	Clutch Step Bolt	2	74	G-45L-074	Screw	2
15	G-45L-015	Crank Shaft	1	45	G-45L-045	Plate	1	75	G-45L-075	Screw	1
16	G-45L-016	Crank Case Gasket	1	46	G-45L-046	Fan Case	1	76	G-45L-076	Fuel Tank	1
17	G-45L-017	6201 C3 Ball Bearing	1	47	G-45L-047	Screw	4	77	G-45L-077	Fuel Filter1	1
18	G-45L-018	Snap Ring	1	48	G-45L-048	Spark Plug Cap	1	78	G-45L-078	Hose Seat	1
19	G-45L-019	Oil Seal	1	49	G-45L-049	Spark Plug Spring	1	79	G-45L-079	Fuel Filter Ass'y	1
20	G-45L-020	Pin	2	50	G-45L-050	Ignition Coil	1	80	G-45L-080	Clip	2
21	G-45L-021	Crank Case (A)	1	51	G-45L-051	Pin	2	81	G-45L-081	Fuel Tube	1
22	G-45L-022	Screw	4	52	G-45L-052	Screw	2	82	G-45L-082	Fuel Cap Stopper	1
23	G-45L-023	Needle Bearing	1	53	G-45L-053	Spark Plug	1	83	G-45L-083	Cap Inner Packing	1
24	G-45L-024	Piston Ass'y	1	54	G-45L-054	Muffler Protector	1	84	G-45L-084	Cap Inner	1
25	G-45L-025		1	55	G-45L-055	Screw	1	85	G-45L-085	Cap Sponge	1
26	G-45L-026	Piston Ring (Set)	2	56	G-45L-056	Clip for Crank Case	1	86	G-45L-086	Tank Cap	1
27	G-45L-027		2	57	G-45L-057	Clamp	1	87	G-45L-087	Tank Cap Ass'y	1
28	G-45L-028	Cylinder Gasket	1	58	G-45L-058	Screw	1	88	G-45L-088	Tank Ass'y	1
29	G-45L-029	Cylinder	1	59	G-45L-059	Insulator Gasket	1	89	G-45L-089	Screw	4
30	G-45L-030	Screw	4	60	G-45L-060	Insulator	1				

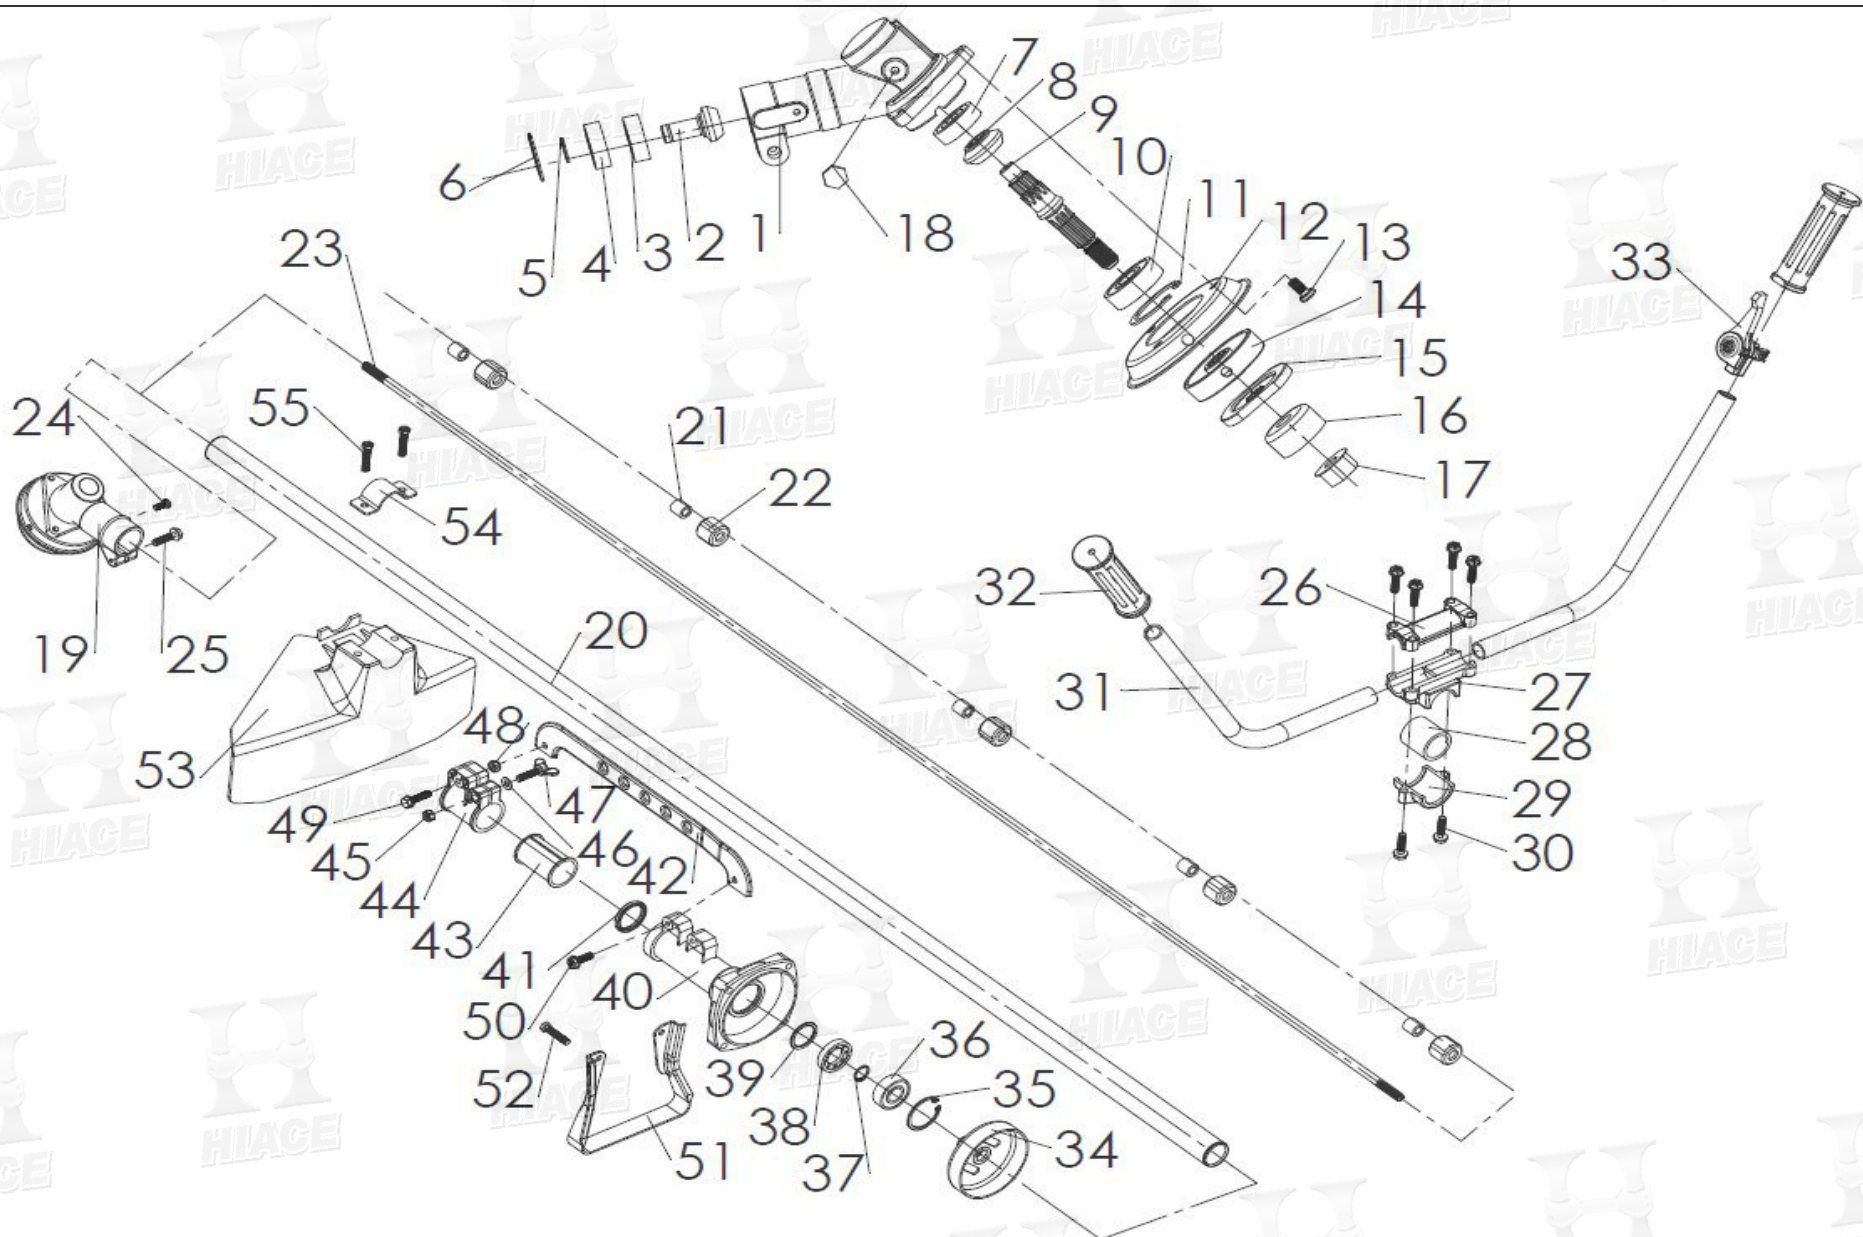

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	RBC-5800-CR4-01	28MM Gear Case	1	31	RBC-5800-CR4-31	18*2.0*375MM L Handle Tube	2
2	RBC-5800-CR4-02	9T*15T Gear Pinion	1	32	RBC-5800-CR4-32	Handle Rubber Cover	2
3	RBC-5800-CR4-03	6001 ZZ Bearing	1	33	RBC-5800-CR4-33	R4 Throttle Lever	1
4	RBC-5800-CR4-04	6001 Bearing	1	34	RBC-5800-CR4-34	9T Clutch Drum	1
5	RBC-5800-CR4-05	S-12 Stop Ring	1	35	RBC-5800-CR4-35	R-35 Stop Ring	1
6	RBC-5800-CR4-06	R-28 Stop Ring	1	36	RBC-5800-CR4-36	6202 ZZ Bearing	1
7	RBC-5800-CR4-07	6001 Bearing	1	37	RBC-5800-CR4-37	S-15 Stop Ring	1
8	RBC-5800-CR4-08	13T*20T Gear Pinion	1	38	RBC-5800-CR4-38	6202 Cushion Rubber	1
9	RBC-5800-CR4-09	13T Gear Shaft	1	39	RBC-5800-CR4-39	28MM Stop Ring	1
10	RBC-5800-CR4-10	6202 2V Bearing	1	40	RBC-5800-CR4-40	28MM Clutch Case	1
11	RBC-5800-CR4-11	R-35 Stop Ring	1	41	RBC-5800-CR4-41	28MM Oil Seal	1
12	RBC-5800-CR4-12	Gear Case Cap	1	42	RBC-5800-CR4-42	5 Holes Hanger	1
13	RBC-5800-CR4-13	5x10 S/W Screw	3	43	RBC-5800-CR4-43	28MM Fixer Pipe	1
14	RBC-5800-CR4-14	13T Cutter Holder	1	44	RBC-5800-CR4-44	Fixer Body	1
15	RBC-5800-CR4-15	13T Cutter Holder Cap	1	45	RBC-5800-CR4-45	6MM Nut	1
16	RBC-5800-CR4-16	Nut Holder Cap	1	46	RBC-5800-CR4-46	6x13x1 Washer	1
17	RBC-5800-CR4-17	10MM Nut (L.)	1	47	RBC-5800-CR4-47	6x45 Wing Screw	1
18	RBC-5800-CR4-18	10x12 Screw	1	48	RBC-5800-CR4-48	6MM Nut	1
19	RBC-5800-CR4-19	28mm 13T Gear Case Assy	1	49	RBC-5800-CR4-49	6x20 Screw	1
20	RBC-5800-CR4-20	28*2.0*1500MM Tube	1	50	RBC-5800-CR4-50	6x20 S/W Screw	1
21	RBC-5800-CR4-21	8*14*14MM Bushing Assy	5	51	RBC-5800-CR4-51	Stander	1
22	RBC-5800-CR4-22	24MM Cushion Rubber	5	52	RBC-5800-CR4-52	6x30 S/W Screw	4
23	RBC-5800-CR4-23	8MM*9T*1545MM Driving Shaft	1	53	RBC-5800-CR4-53	Safety Guard	1
24	RBC-5800-CR4-24	5x12 S/W Screw	1	54	RBC-5800-CR4-54	Cover Bracket	1
25	RBC-5800-CR4-25	6x25 S/W Screw	1	55	RBC-5800-CR4-55	6x30 S/W Screw	2
26	RBC-5800-CR4-26	Handle Holder (A)	1				
27	RBC-5800-CR4-27	Handle Holder (B)	1				
28	RBC-5800-CR4-28	28MM Rubber Cover	1				
29	RBC-5800-CR4-29	Handle Holder (C)	1				
30	RBC-5800-CR4-30	6x25 S/W Screw	6				