


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	TH-23VL-001	Starter Handle	1	31	TH-23VL-031	Needle Bearing	1	61	TH-23VL-061	Insulator, Carburetor	1
2	TH-23VL-002	Handle Insulator	1	32	TH-23VL-032		1	62	TH-23VL-062	Screw	1
3	TH-23VL-003	Recoil Starter Body	1	33	TH-23VL-033	Piston(#32~#34)	2	63	TH-23VL-063	Carburetor Gasket	1
4	TH-23VL-004	Recoil Spring	1	34	TH-23VL-034		1	64	TH-23VL-064	Carburetor	1
5	TH-23VL-005	Starter Rope Reel	1	35	TH-23VL-035	Piston Ring	2	65	TH-23VL-065	Screw	2
6	TH-23VL-006	Starter Rope	1	36	TH-23VL-036	Cylinder Gasket	1	66	TH-23VL-066	Air Cleaner Body	1
7	TH-23VL-007	Washer	1	37	TH-23VL-037	Cylinder	1	67	TH-23VL-067	Collar	2
8	TH-23VL-008	Screw	1	38	TH-23VL-038	Screw	4	68	TH-23VL-068	Air Cleaner Holder	1
9	TH-23VL-009	Screw	4	39	TH-23VL-039	Clutch Case	1	69	TH-23VL-069	Air Cleaner Element	1
10	TH-23VL-010	Fan Case	1	40	TH-23VL-040	Screw	4	70	TH-23VL-070	Air Cleaner Cap	1
11	TH-23VL-011	Square Nut	2	41	TH-23VL-041	Clutch Basement	1	71	TH-23VL-071	Screw	1
12	TH-23VL-012	Screw	4	42	TH-23VL-042	Washer	1	72	TH-23VL-072	Insulator, Engine Cover	2
13	TH-23VL-013	Screw	1	43	TH-23VL-043	Screw	1	73	TH-23VL-073	Engine Cover	1
14	TH-23VL-014	Stop Ring	1	44	TH-23VL-044	Washer	2	74	TH-23VL-074	Screw	1
15	TH-23VL-015	Starter Pawl	1	45	TH-23VL-045	Clutch Arm Comp.	2	75	TH-23VL-075	Spark Plug	1
16	TH-23VL-016	Starter Pawl Spring	1	46	TH-23VL-046	Clutch Spring	1	76	TH-23VL-076	Fuel Tank Bracket	1
17	TH-23VL-017	Starter Pully	1	47	TH-23VL-047	8mm Wavy Washer	2	77	TH-23VL-077	Screw	1
18	TH-23VL-018	Screw	2	48	TH-23VL-048	Clutch Step Bolt	2	78	TH-23VL-078	Oil Pipe	1
19	TH-23VL-019	Nut	1	49	TH-23VL-049	Ignition Coil Insulator	2	79	TH-23VL-079	Oil Pipe	1
20	TH-23VL-020	Magneto Rotor	2	50	TH-23VL-050	Ignition Coil	1	80	TH-23VL-080	Hose Seat	1
21	TH-23VL-021	Screw	2	51	TH-23VL-051	Terminal	1	81	TH-23VL-081	Fuel Filter	1
22	TH-23VL-022	Screw	1	52	TH-23VL-052	Insulator	2	82	TH-23VL-082	Fuel Tank	1
23	TH-23VL-023	Crank Case (A)	1	53	TH-23VL-053	Screw	2	83	TH-23VL-083	Tank Inner Compressor	1
24	TH-23VL-024	Ball Bearing 6001 C3	2	54	TH-23VL-054	Muffler Gasket	1	84	TH-23VL-084	Tank Cap Sponge	1
25	TH-23VL-025	12 21 6 Oil Seal	2	55	TH-23VL-055	Muffler	1	85	TH-23VL-085	Tank Inner Cap	1
26	TH-23VL-026	Pipe Pin	2	56	TH-23VL-056	Screw	2	86	TH-23VL-086	Tank Inner Cap Sponge	1
27	TH-23VL-027	Crank Case Gasket	1	57	TH-23VL-057	Muffler Plate	1	87	TH-23VL-087	Tank Cap	1
28	TH-23VL-028	Crank Shaft	1	58	TH-23VL-058	Screw	1	88	TH-23VL-088	Tank Cap Holder	1
29	TH-23VL-029	Crank Case (B)	1	59	TH-23VL-059	Gasket	1	89	TH-23VL-089	Collar	3
30	TH-23VL-030	Wood-Ruff Key	1	60	TH-23VL-060	M5 Nut	2	90	TH-23VL-090	Screw	3

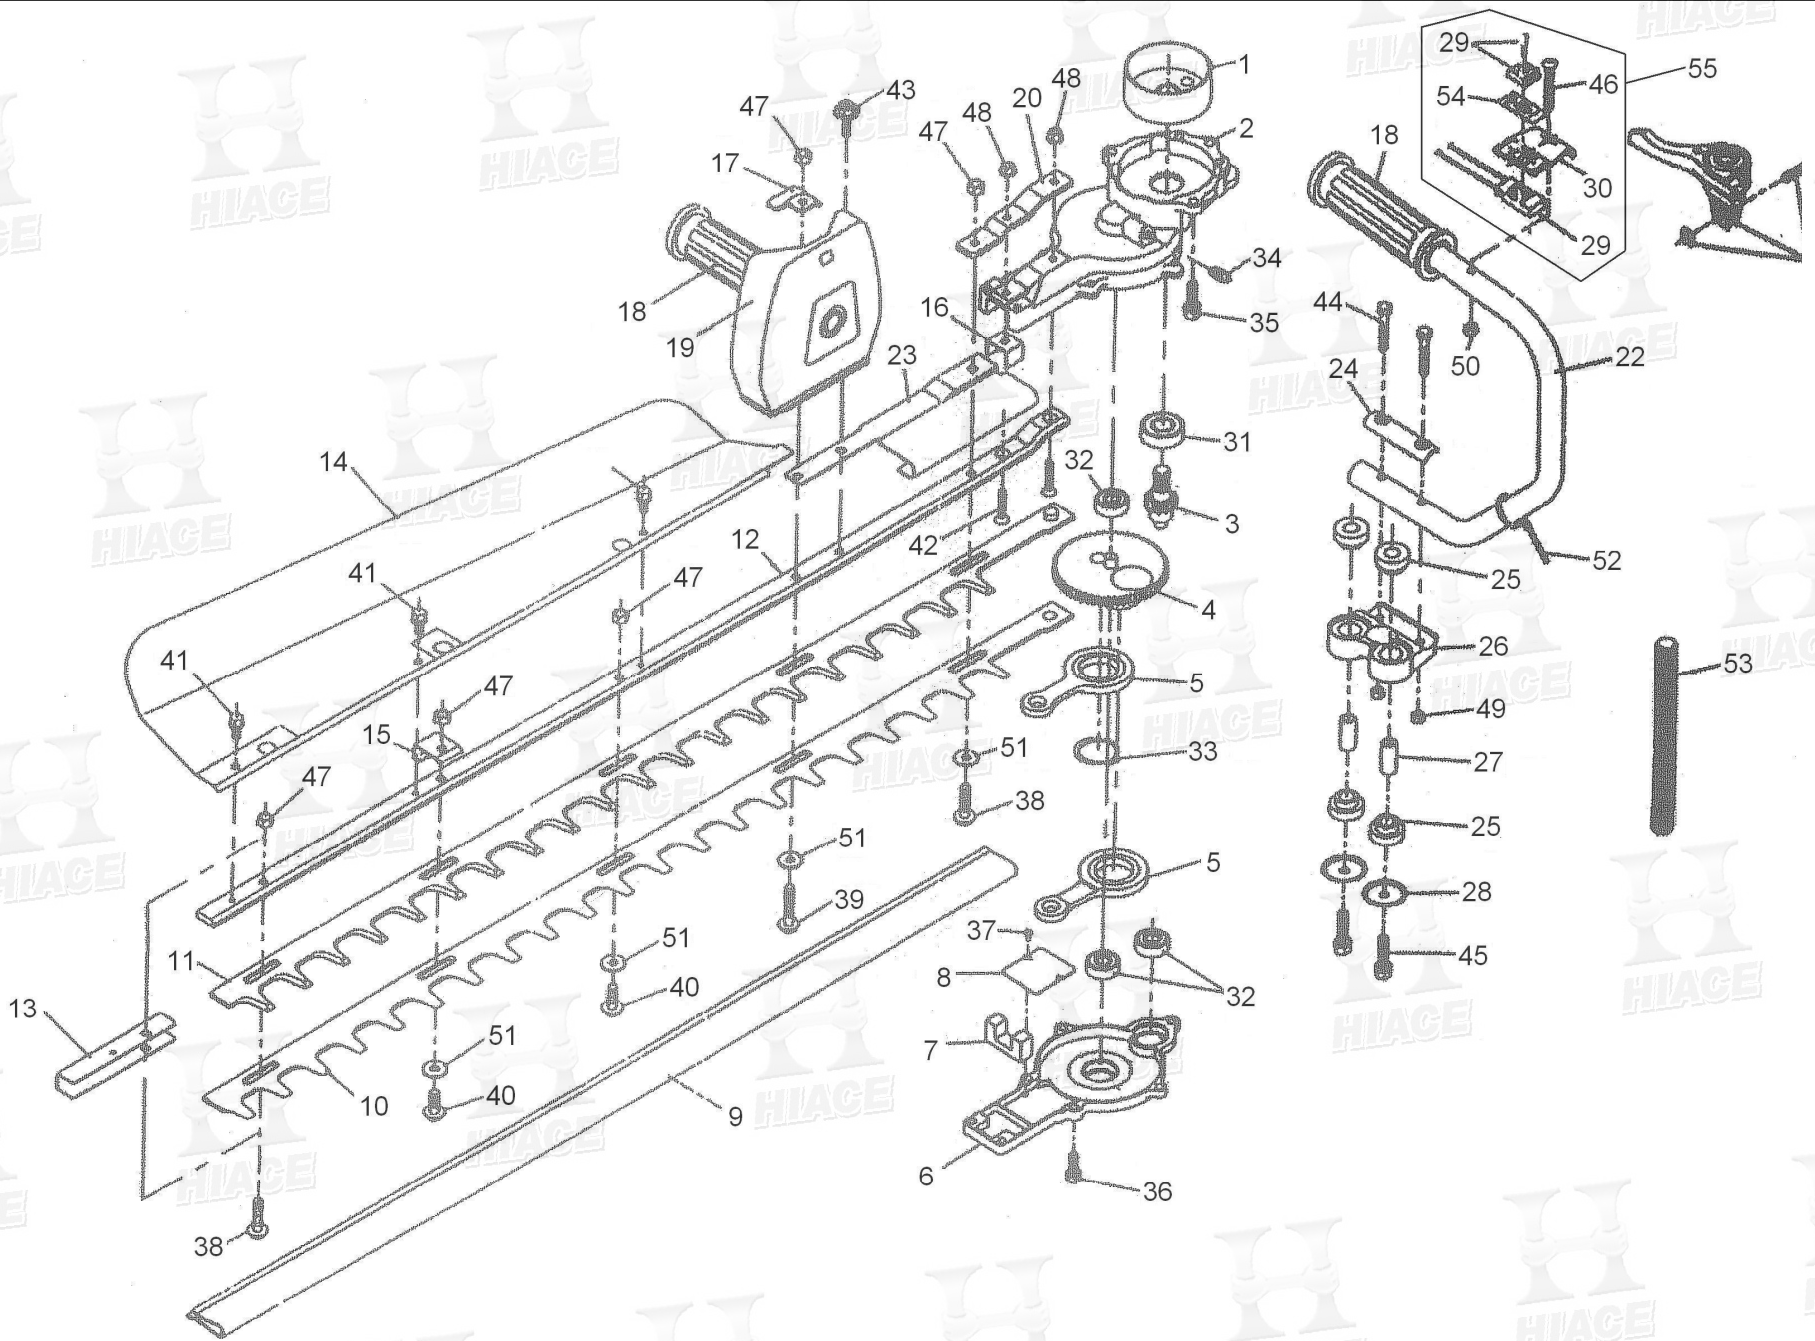

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	HT-750S-001L	Clutch Drum-L(26)	1	24	HT-750S-024	Handle Hold Plate	1	49	HT-750S-049	Nut	2
1	HT-750S-001R	Clutch Drum-R(23)	1	25	HT-750S-025	Damper	4	50	HT-750S-050	Nut	1
2	HT-750S-002	Upper case	1	26	HT-750S-026	Mount	1	51	HT-750S-051	Washer	4
3	HT-750S-003L	Pinion-L(26)	1	27	HT-750S-027	Collar	2	52	HT-750S-052	Bind	1
3	HT-750S-003R	Pinion-R(23)	1	28	HT-750S-028	Rubber Hold Plate	2	53	HT-750S-053	Wire Pipe	1
4	HT-750S-004	Gear comp.	1	29	HT-750S-029	Stop Switch	1	54	HT-750S-054	Label	1
5	HT-750S-005	Rod	2	30	HT-750S-030	Plate, Stop Switch	1	55	HT-750S-055	Stop Switch Ass'y	1
6	HT-750S-006	Lower case	1	31	HT-750S-031	Bearing 6001	1				
7	HT-750S-007	Felt	1	32	HT-750S-032	Bearing 608	3				
8	HT-750S-008	Plate	1	33	HT-750S-033	Snap ring STW-26	1				
9	HT-750S-009	Cover	1	34	HT-750S-034	Grease Nipple	1				
10	HT-750S-010	Blade Ass'y	1	35	HT-750S-035	Screw	3				
11	HT-750S-011			36	HT-750S-036	Screw M5*16	6				
12	HT-750S-012	Guide plate	1	37	HT-750S-037	Screw	2				
13	HT-750S-013	Reinforce Plate	1	38	HT-750S-038	Screw, L=22	2				
14	HT-750S-014	Leaf Receive Plate	1	39	HT-750S-039	Screw, L=29	1				
15	HT-750S-015	Steady, Guide plate	1	40	HT-750S-040	Screw, L=19	2				
16	HT-750S-016	Shake Stopper	1	41	HT-750S-041	Screw M5*18	3				
17	HT-750S-017	Steady, Handle	1	42	HT-750S-042	Screw	2				
18	HT-750S-018	Grip	1	43	HT-750S-043	Screw M6*18	1				
19	HT-750S-019	Right Handle	1	44	HT-750S-044	Screw M5*30	2				
20	HT-750S-020	Reinforce Plate	1	45	HT-750S-045	Screw	2				
21	HT-750S-021	Throttle Lever	1	46	HT-750S-046	Screw	1				
22	HT-750S-022	Handle Pipe	1	47	HT-750S-047	Nut	5				
23	HT-750S-023	Safety Plate	1	48	HT-750S-048	Nut	2				