



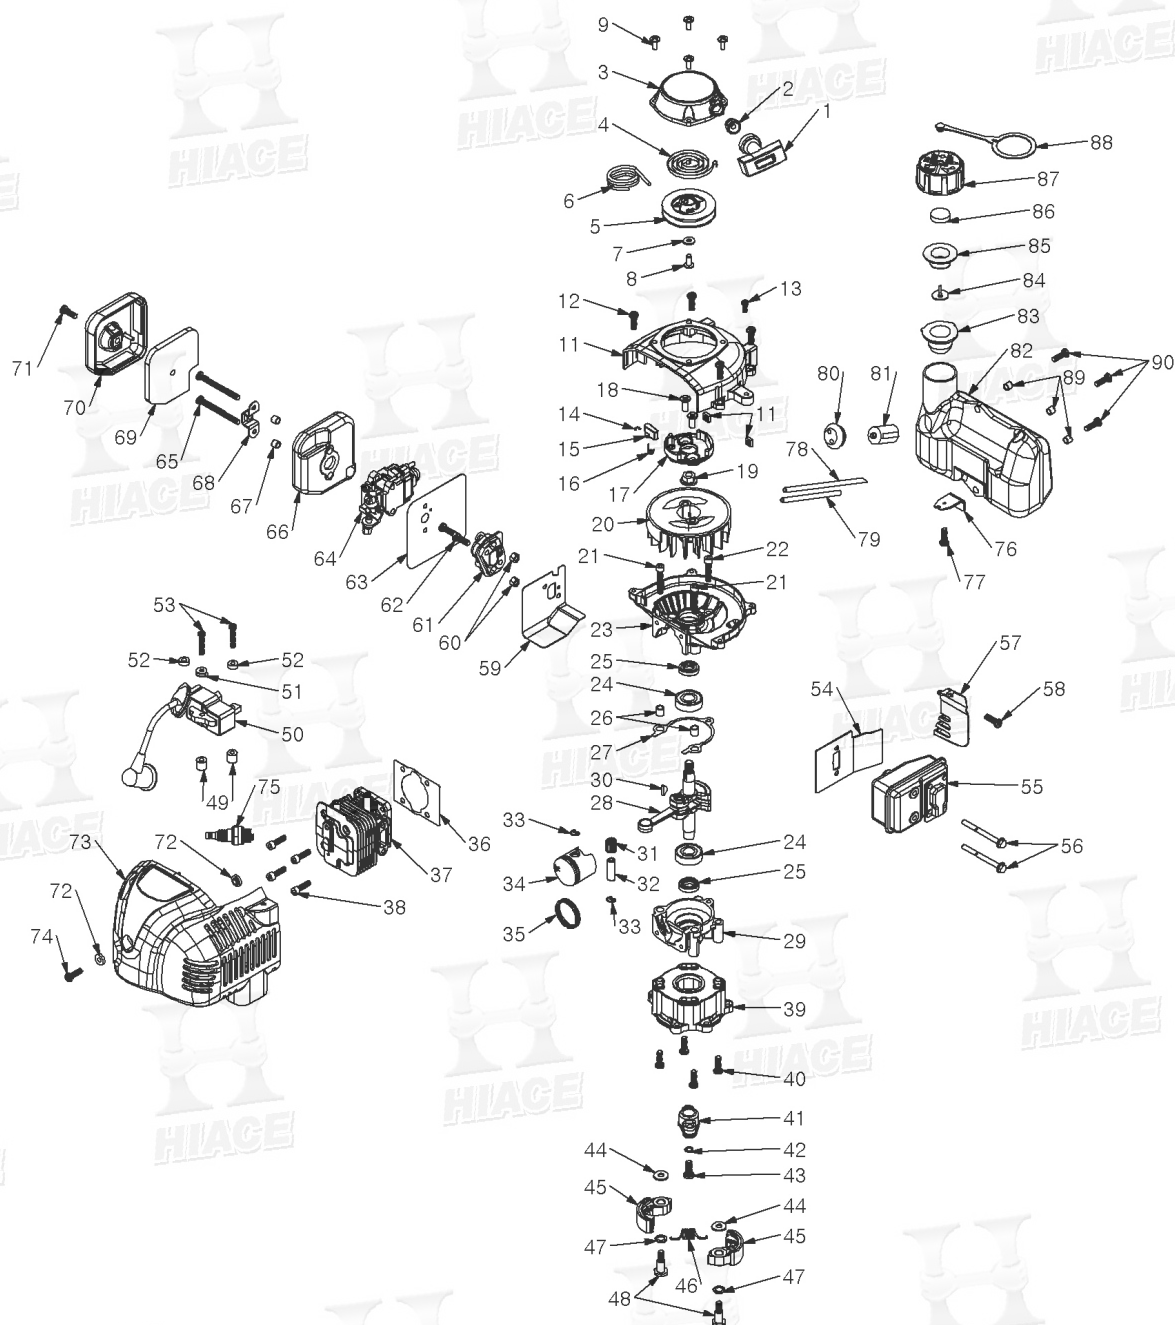

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	TH-23VL-001	Starter Handle	1	31	TH-23VL-031	Needle Bearing	1	61	TH-23VL-061	Insulator, Carburetor	1
2	TH-23VL-002	Handle Insulator	1	32	TH-23VL-032	Piston(#32~#34)	1	62	TH-23VL-062	Screw	1
3	TH-23VL-003	Recoil Starter Body	1	33	TH-23VL-033		2	63	TH-23VL-063	Carburetor Gasket	1
4	TH-23VL-004	Recoil Spring	1	34	TH-23VL-034	Piston Ring	1	64	TH-23VL-064	Carburetor	1
5	TH-23VL-005	Starter Rope Reel	1	35	TH-23VL-035		2	65	TH-23VL-065	Screw	2
6	TH-23VL-006	Starter Rope	1	36	TH-23VL-036	Cylinder Gasket	1	66	TH-23VL-066	Air Cleaner Body	1
7	TH-23VL-007	Washer	1	37	TH-23VL-037	Cylinder	1	67	TH-23VL-067	Collar	2
8	TH-23VL-008	Screw	1	38	TH-23VL-038	Screw	4	68	TH-23VL-068	Air Cleaner Holder	1
9	TH-23VL-009	Screw	4	39	TH-23VL-039	Clutch Case	1	69	TH-23VL-069	Air Cleaner Element	1
10	TH-23VL-010	Fan Case	1	40	TH-23VL-040	Screw	4	70	TH-23VL-070	Air Cleaner Cap	1
11	TH-23VL-011	Square Nut	2	41	TH-23VL-041	Clutch Basement	1	71	TH-23VL-071	Screw	1
12	TH-23VL-012	Screw	4	42	TH-23VL-042	Washer	1	72	TH-23VL-072	Insulator, Engine Cover	2
13	TH-23VL-013	Screw	1	43	TH-23VL-043	Screw	1	73	TH-23VL-073	Engine Cover	1
14	TH-23VL-014	Stop Ring	1	44	TH-23VL-044	Washer	2	74	TH-23VL-074	Screw	1
15	TH-23VL-015	Starter Pawl	1	45	TH-23VL-045	Clutch Arm Comp.	2	75	TH-23VL-075	Spark Plug	1
16	TH-23VL-016	Starter Pawl Spring	1	46	TH-23VL-046	Clutch Spring	1	76	TH-23VL-076	Fuel Tank Bracket	1
17	TH-23VL-017	Starter Pully	1	47	TH-23VL-047	8mm Wavy Washer	2	77	TH-23VL-077	Screw	1
18	TH-23VL-018	Screw	2	48	TH-23VL-048	Clutch Step Bolt	2	78	TH-23VL-078	Oil Pipe	1
19	TH-23VL-019	Nut	1	49	TH-23VL-049	Ignition Coil Insulator	2	79	TH-23VL-079	Oil Pipe	1
20	TH-23VL-020	Magneto Rotor	2	50	TH-23VL-050	Ignition Coil	1	80	TH-23VL-080	Hose Seat	1
21	TH-23VL-021	Screw	2	51	TH-23VL-051	Terminal	1	81	TH-23VL-081	Fuel Filter	1
22	TH-23VL-022	Screw	1	52	TH-23VL-052	Insulator	2	82	TH-23VL-082	Fuel Tank	1
23	TH-23VL-023	Crank Case (A)	1	53	TH-23VL-053	Screw	2	83	TH-23VL-083	Tank Inner Compressor	1
24	TH-23VL-024	Ball Bearing 6001 C3	2	54	TH-23VL-054	Muffler Gasket	1	84	TH-23VL-084	Tank Cap Sponge	1
25	TH-23VL-025	12 21 6 Oil Seal	2	55	TH-23VL-055	Muffler	1	85	TH-23VL-085	Tank Inner Cap	1
26	TH-23VL-026	Pipe Pin	2	56	TH-23VL-056	Screw	2	86	TH-23VL-086	Tank Inner Cap Sponge	1
27	TH-23VL-027	Crank Case Gasket	1	57	TH-23VL-057	Muffler Plate	1	87	TH-23VL-087	Tank Cap	1
28	TH-23VL-028	Crank Shaft	1	58	TH-23VL-058	Screw	1	88	TH-23VL-088	Tank Cap Holder	1
29	TH-23VL-029	Crank Case (B)	1	59	TH-23VL-059	Gasket	1	89	TH-23VL-089	Collar	3
30	TH-23VL-030	Wood-Ruff Key	1	60	TH-23VL-060	M5 Nut	2	90	TH-23VL-090	Screw	3

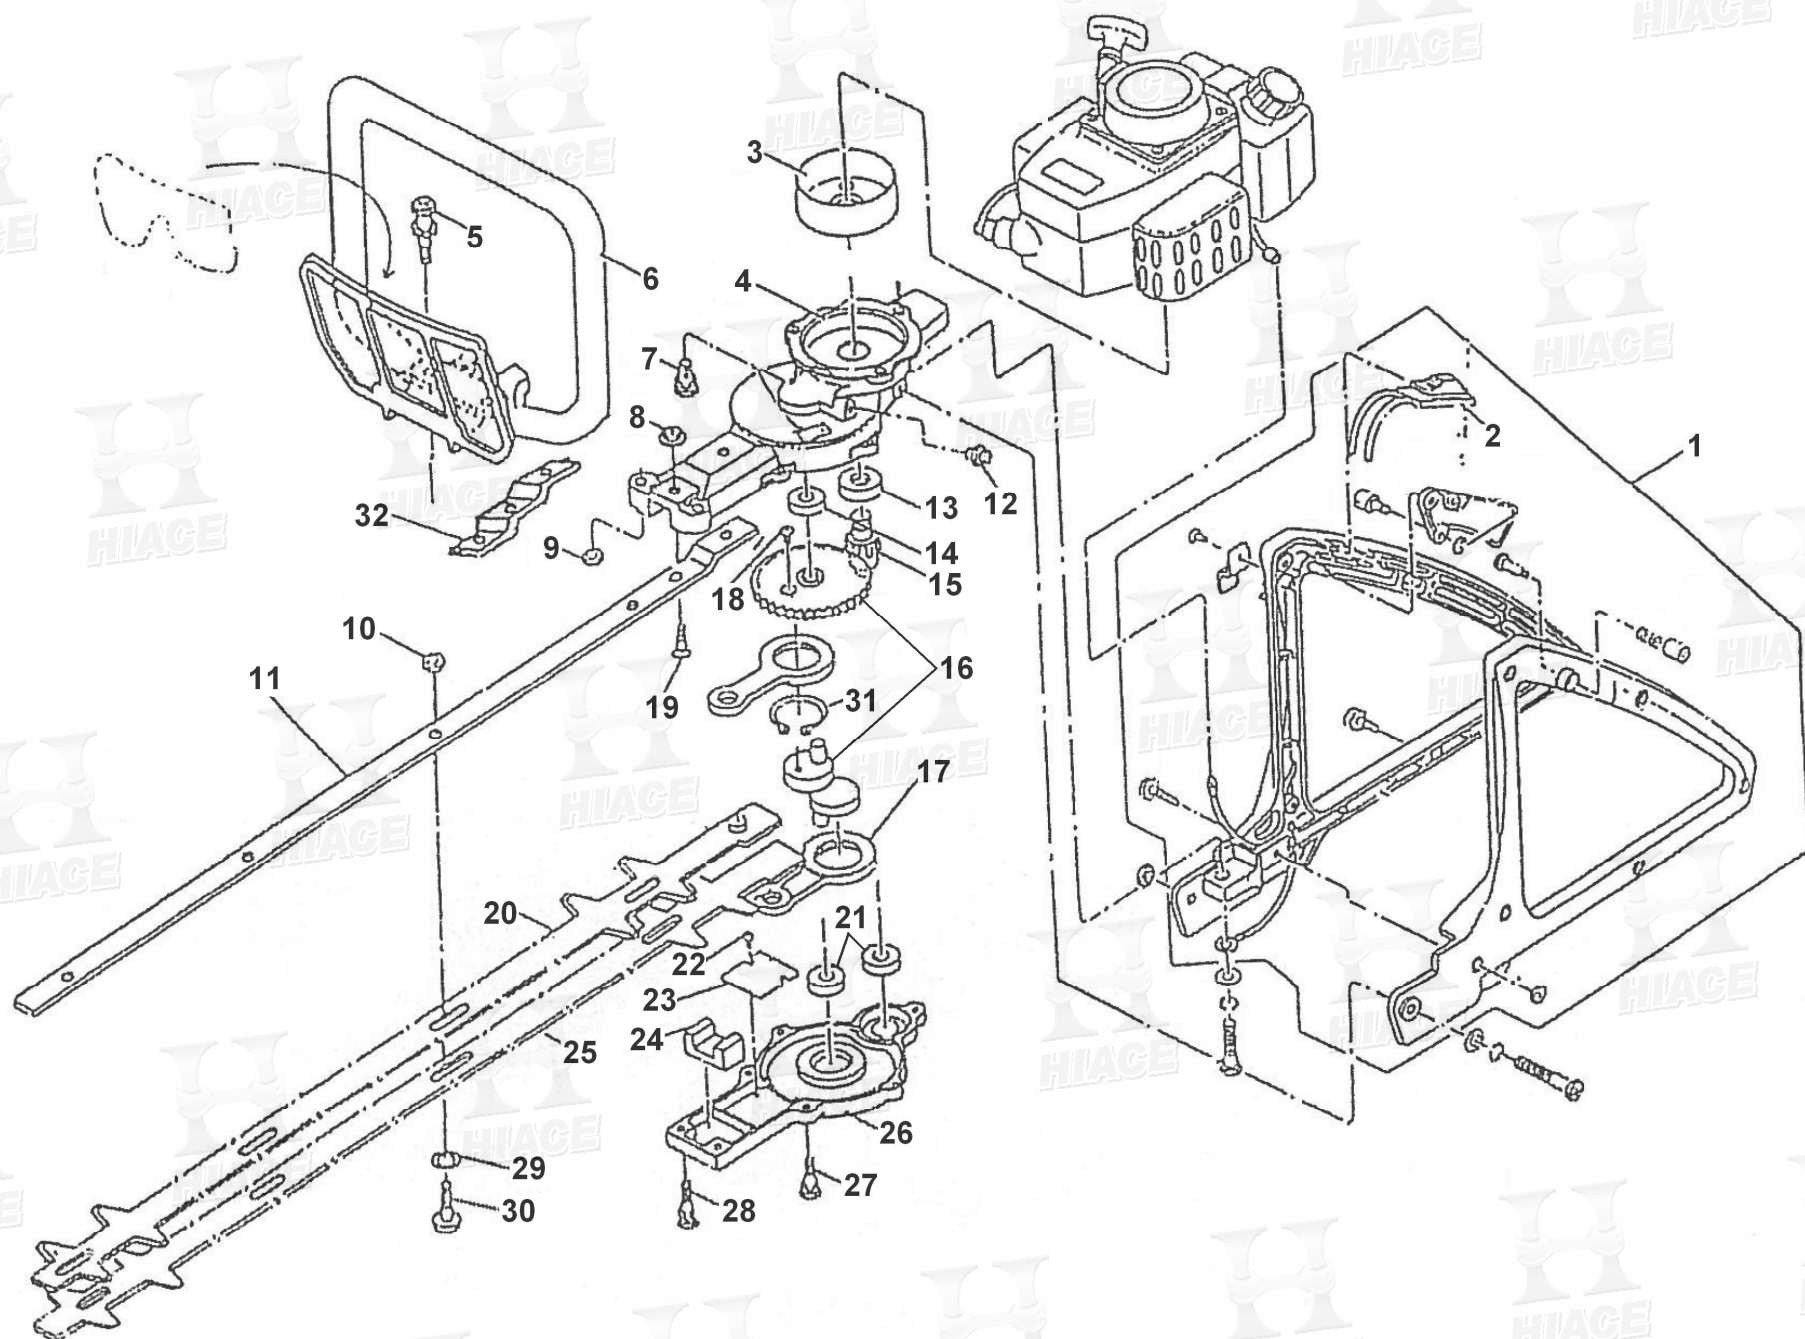

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	HT-600D-001	Throttle Lever	1	21	HT-600D-021	Bearing 608	2
2	HT-600D-002	Stop Switch	1	22	HT-600D-022	Screw M3*5	1
3	HT-600D-003L	Clutch Drum-L(26)	1	23	HT-600D-023	Plate	1
3	HT-600D-003R	Clutch Drum-R(23)	1	24	HT-600D-024	Felt	1
4	HT-600D-004	Upper case	1	25	HT-600D-025	Blade, Lower	1
5	HT-600D-005	Screw M6*35	1	26	HT-600D-026	Lower case	1
6	HT-600D-006	Handle	1	27	HT-600D-027	Screw M5*16	1
7	HT-600D-007	Screw M6*15	1	28	HT-600D-028	Screw M5*20	1
8	HT-600D-008	Nut M5	1	29	HT-600D-029	Washer	1
9	HT-600D-009	Nut M6	1	30	HT-600D-030	Screw, L=19	1
10	HT-600D-010	Nut M6	1	31	HT-600D-031	Snap ring STW-26	1
11	HT-600D-011	Guide plate	1	32	HT-600D-032	Reinforce Plate	1
12	HT-600D-012	Grease Nipple M6	1				
13	HT-600D-013	Bearing 6001	1				
14	HT-600D-014	Bearing 608	1				
15	HT-600D-015L	Pinion-L(26)	1				
15	HT-600D-015R	Pinion-R(23)	1				
16	HT-600D-016	Gear comp.	1				
17	HT-600D-017	Rod	1				
18	HT-600D-018	Screw M5*10	1				
19	HT-600D-019	Screw M5*20	1				
20	HT-600D-020	Blade, Upper	1				