




PARTS INFORMATION

HU-26LT

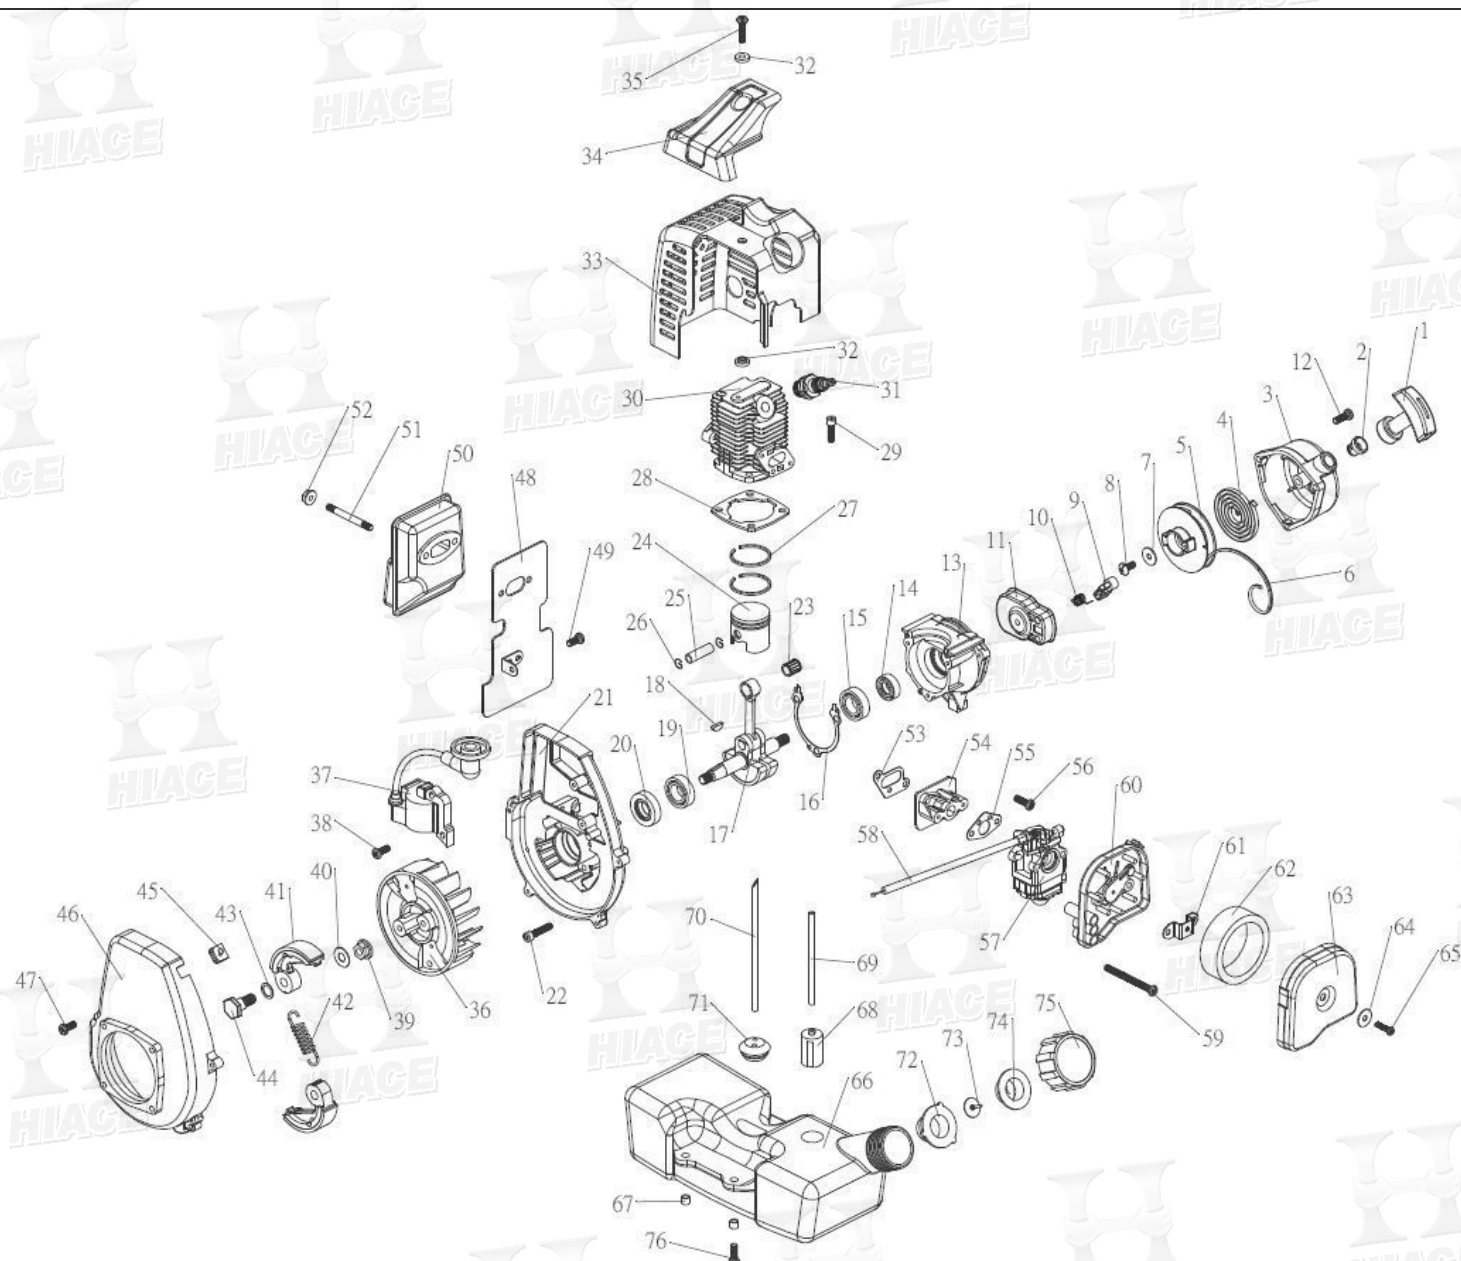


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	HU-26LT-001	Starter Holder	1	31	HU-26LT-031	Spark Plug	1	61	HU-26LT-061	Air Cleaner Holder	1
2	HU-26LT-002	Insulator	1	32	HU-26LT-032	Cylinder Protector	2	62	HU-26LT-062	Air Cleaner Sponge	1
3	HU-26LT-003	Recoil Starter Body	1	33	HU-26LT-033	Cylinder Protector Cap	1	63	HU-26LT-063	Air Cleaner Cap	1
4	HU-26LT-004	Recoil Spring	1	34	HU-26LT-034	Space, Cylinder Protector Cap	1	64	HU-26LT-064	Washer	1
5	HU-26LT-005	Starter Rope Reel	1	35	HU-26LT-035	Screw	1	65	HU-26LT-065	Screw	1
6	HU-26LT-006	Starter Rope	1	36	HU-26LT-036	Magneto Rotor	1	66	HU-26LT-066	Fuel Tank	1
7	HU-26LT-007	Washer		37	HU-26LT-037	Ignition Coil	1	67	HU-26LT-067	Collar	2
8	HU-26LT-008	Screw	1	38	HU-26LT-038	Screw	2	68	HU-26LT-068	Fuel Filter	1
9	HU-26LT-009	Starter Pawl	1	39	HU-26LT-039	Nut	1	69	HU-26LT-069	Fuel Hose	1
10	HU-26LT-010	Starter Pawl Spring	1	40	HU-26LT-040	Washer	2	70	HU-26LT-070	Fuel Hose	1
11	HU-26LT-011	Starter Pulley	1	41	HU-26LT-041	Clutch Arm Comp.	2	71	HU-26LT-071	Hose Seat	1
12	HU-26LT-012	Screw	3	42	HU-26LT-042	Clutch Spring	1	72	HU-26LT-072	Tank Inner Compressor	1
13	HU-26LT-013	Crank Case (B)	1	43	HU-26LT-043	Wavy Washer	2	73	HU-26LT-073	Tank Cap Sponge	1
14	HU-26LT-014	12 22 7 Oil Seal	1	44	HU-26LT-044	Clutch Step Bolt	2	74	HU-26LT-074	Tank Inner Cap	1
15	HU-26LT-015	Ball Bearing 6001 C3	1	45	HU-26LT-045	Clamp, Coil	1	75	HU-26LT-075	Tank Cap	1
16	HU-26LT-016	Crank Case Gasket	1	46	HU-26LT-046	Fan Case	1	76	HU-26LT-076	Screw	2
17	HU-26LT-017	Crank Shaft	1	47	HU-26LT-047	Screw	4	77	#1-8	Starter Ass'y	
18	HU-26LT-018	Wood-Ruff Key	1	48	HU-26LT-048	Muffler Gasket	1	78	#9-10	Starter Pawl Ass'y	
19	HU-26LT-019	Ball Bearing 6001 C3	1	49	HU-26LT-049	Screw	1	79	#9-11	Starter Pulley Ass'y	
20	HU-26LT-020	12 30 9 oil Seal	1	50	HU-26LT-050	Muffler	1	80	#24-27	Piston Ass'y	
21	HU-26LT-021	Crank Case (A)	1	51	HU-26LT-051	Screw Bolt	2	81	#24-27+30	Cylinder Ass'y	
22	HU-26LT-022	Screw	4	52	HU-26LT-052	Nut	2	82	#41*2+42	Clutch Ass'y	
23	HU-26LT-023	Needle Bearing	1	53	HU-26LT-053	Inlet Mainifold Gasket	1	83	#60-64	Air Cleaner Ass'y	
24	HU-26LT-024	Piston	1	54	HU-26LT-054	Inlet Mainifold	1	84	#66-67	Fuel Tank	
25	HU-26LT-025		1	55	HU-26LT-055	Diaphragm Carburetor Gasket	1	85	#68-71	Fuel Filter Ass'y	
26	HU-26LT-026		2	56	HU-26LT-056	Screw	2	86	#69-71	Hose Seat Ass'y	
27	HU-26LT-027	Piston Ring	2	57	HU-26LT-057	Diaphragm Carburetor	1	87	#72-75	Tank Cap Ass'y	
28	HU-26LT-028	Cylinder Gasket	1	58	HU-26LT-058	Throttle Wire	1				
29	HU-26LT-029	Screw	4	59	HU-26LT-059	Screw	1				
30	HU-26LT-030	Cylinder	1	60	HU-26LT-060	Air Cleaner Body	1				



PARTS INFORMATION

WATER PUMP-WPL

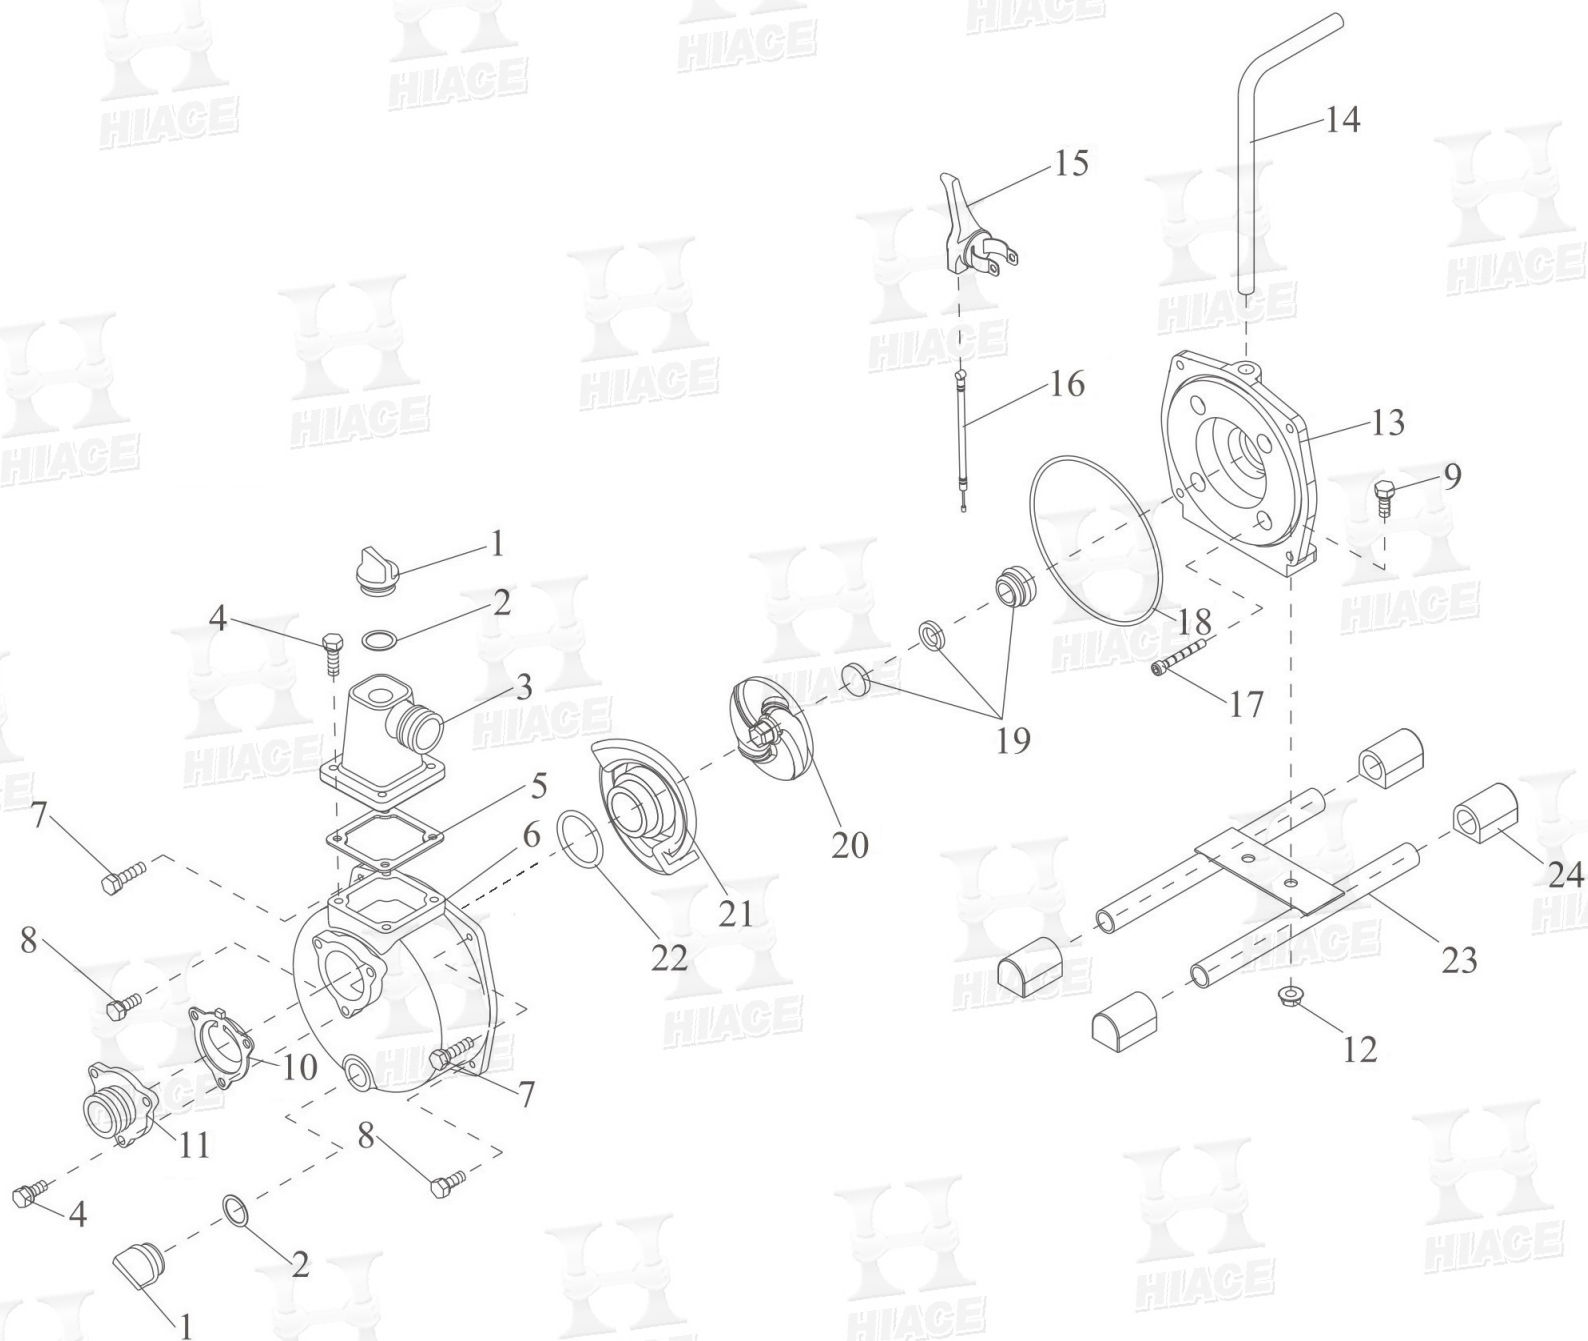

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	WPL-01	PLUG SET	2	21	WPL-21	VOLUTE CASING	1
2	WPL-02	O-RING	2	22	WPL-22	O-RING	1
3	WPL-03	DELIVERY FLANGE	1	23	WPL-23	H BASE	1
4	WPL-04	HEXAGON BOLT	7	24	WPL-24	RUBBER MAT	4
5	WPL-05	DELIVERY FLANGE PACKING	1				
6	WPL-06	PUMP CASING	1				
7	WPL-07	HEXAGON BOLT	2				
8	WPL-08	HEXAGON BOLT	2				
9	WPL-09	HEXAGON BOLT	2				
10	WPL-10	CHECK VALVE	1				
11	WPL-11	SUCTION FLANGE	1				
12	WPL-12	FLANGE NUT	4				
13	WPL-13	FLANGE BRACKET	1				
14	WPL-14	HANDLE SET	1				
15	WPL-15	THROTTLE LEVER	1				
16	WPL-16	THROTTLE WIRE COMP.	1				
17	WPL-17	HEXAGON SOCKETBOLT AND SEAL WASHER	4				
18	WPL-18	O-RING	1				
19	WPL-19	MECHANICAL SEAL	1				
20	WPL-20	IMPELLER	1				