



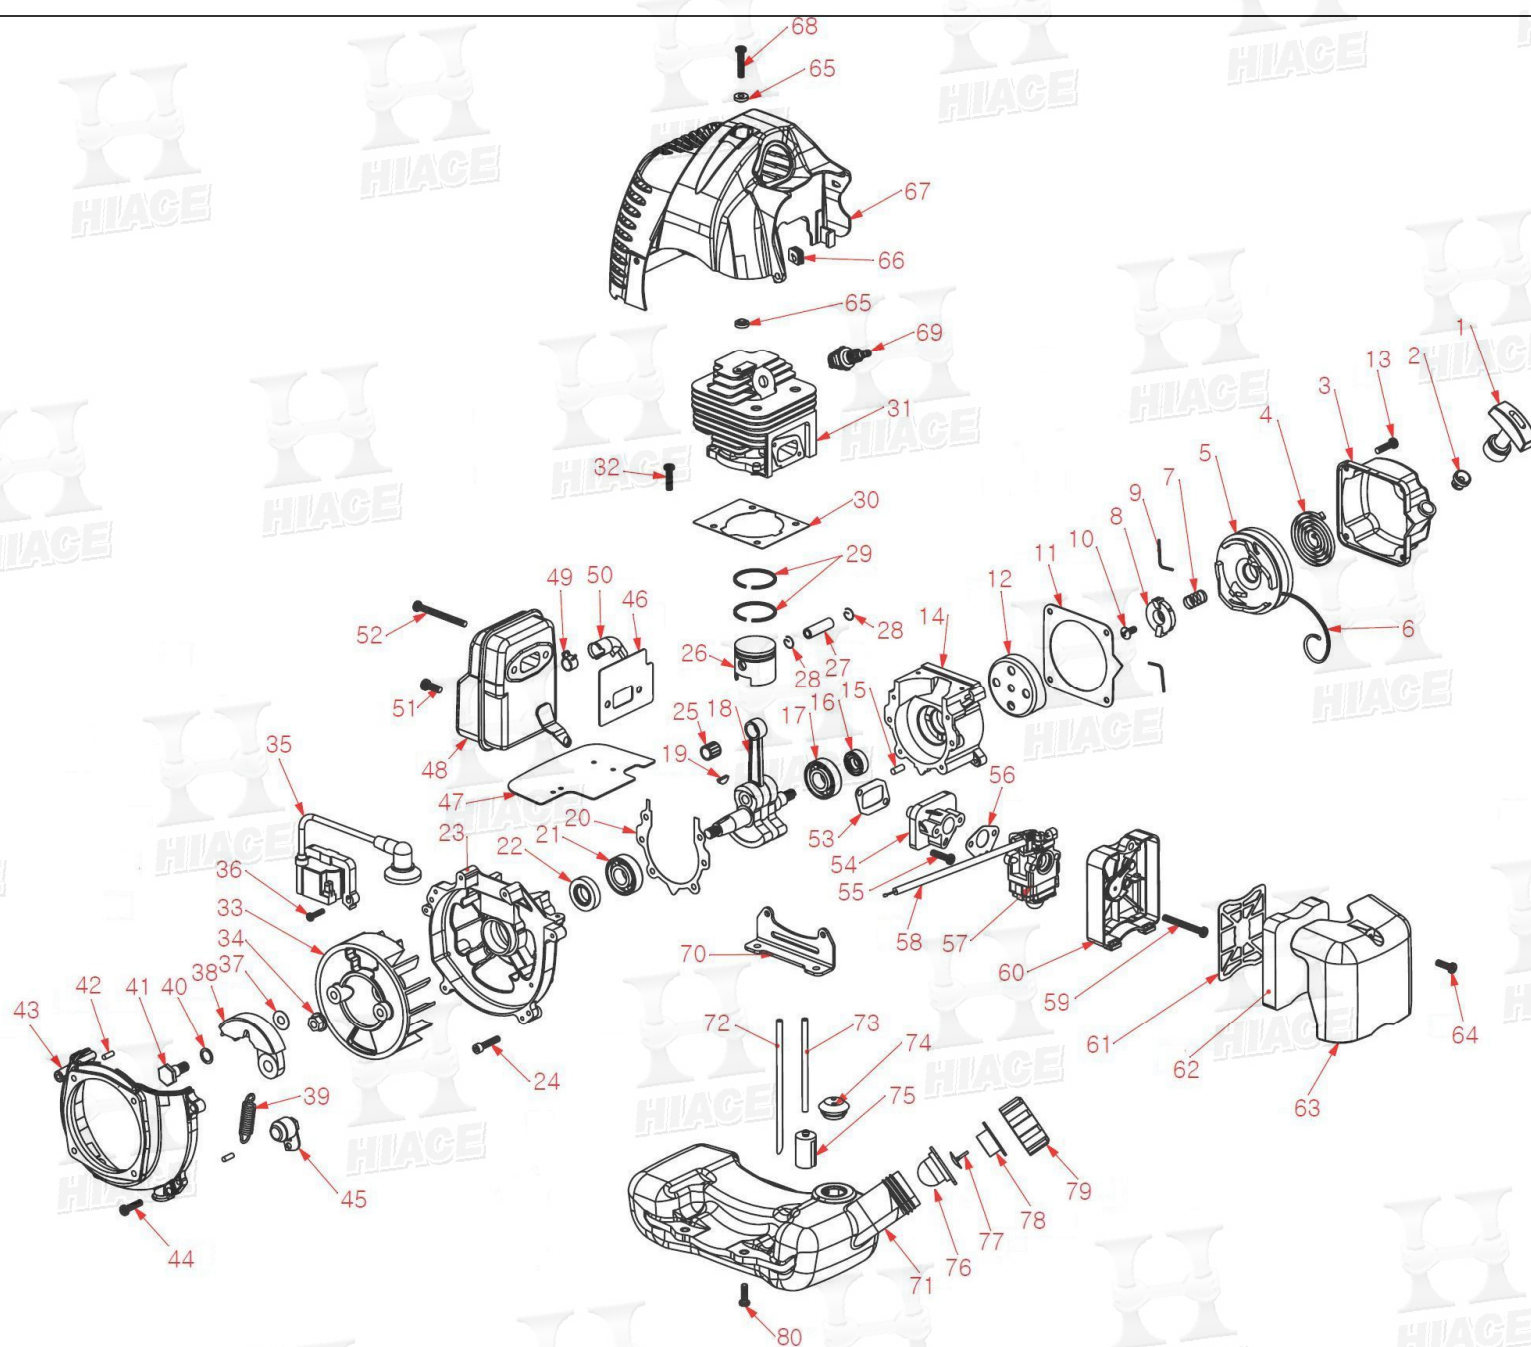

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	TB-43L-001	Starter Handle	1	31	TB-43L-031	Cylinder	1	61	TB-43L-061	Air Cleaner Plate	1
2	TB-43L-002	Insulator	1	32	TB-43L-032	Screw	4	62	TB-43L-062	Air Cleaner Sponge	1
3	TB-43L-003	Recoil Starter Body	1	33	TB-43L-033	Magneto Rotor	1	63	TB-43L-063	Air Cleaner Cap	1
4	TB-43L-004	Recoil Spring	1	34	TB-43L-034	Nut	1	64	TB-43L-064	Screw	1
5	TB-43L-005	Starter Rope Reel	1	35	TB-43L-035	Ignition Coil	1	65	TB-43L-065	Space, Cylinder Protector Cap	2
6	TB-43L-006	Starter Rope	1	36	TB-43L-036	Screw	2	66	TB-43L-066	Clamp, Coil	1
7	TB-43L-007	Starter Pawl	1	37	TB-43L-037	Washer	2	67	TB-43L-067	Engine Cover	1
8	TB-43L-008	Pawl Holder	1	38	TB-43L-038	Clutch Arm Comp.	2	68	TB-43L-068	Screw	1
9	TB-43L-009	Clip	2	39	TB-43L-039	Clutch Spring	1	69	TB-43L-069	Spark Plug	1
10	TB-43L-010	Starter Screw	1	40	TB-43L-040	10MM Wavy Washer	2	70	TB-43L-070	Fuel Tank Holder	1
11	TB-43L-011	Starter Gasket	1	41	TB-43L-041	Clutch Step Bolt	2	71	TB-43L-071	Fuel Tank	1
12	TB-43L-012	Starter Pulley	1	42	TB-43L-042	Pin	2	72	TB-43L-072	Oil Pipe	1
13	TB-43L-013	Screw	4	43	TB-43L-043	Fan Case	1	73	TB-43L-073	Oil Pipe	1
14	TB-43L-014	Crank Case (B)	1	44	TB-43L-044	Screw	3	74	TB-43L-074	Hose Seat	1
15	TB-43L-015	Pin	2	45	TB-43L-045	Stop Switch (S)	1	75	TB-43L-075	Oil Cleaner	1
16	TB-43L-016	12 22 7 Oil Seal	1	46	TB-43L-046	Muffler Gasket	1	76	TB-43L-076	Tank Inner Compressor	1
17	TB-43L-017	Ball Bearing 6202 C3	1	47	TB-43L-047	Muffler Heat Gasket	1	77	TB-43L-077	Tank Cap Sponge	1
18	TB-43L-018	Crank Shaft	1	48	TB-43L-048	Muffler	1	78	TB-43L-078	Tank Inner Cap	1
19	TB-43L-019	Wood-Ruff Key	1	49	TB-43L-049			79	TB-43L-079	Tank Cap	1
20	TB-43L-020	Crank Case Gasket	1	50	TB-43L-050			80	TB-43L-080	Screw	4
21	TB-43L-021	Ball Bearing 6202 C3	1	51	TB-43L-051	Screw	1				
22	TB-43L-022	Oil Seal 15 30 7	1	52	TB-43L-052	Screw	2				
23	TB-43L-023	Crank Case (A)	1	53	TB-43L-053	Inlet Mainfold Gasket	1				
24	TB-43L-024	Screw	4	54	TB-43L-054	Inlet Mainfold	1				
25	TB-43L-025	Needle Bearing	1	55	TB-43L-055	Screw	1				
26	TB-43L-026	Piston	1	56	TB-43L-056	Diaphragm Carburetor	1				
27	TB-43L-027			57	TB-43L-057	Diaphragm Carburetor	1				
28	TB-43L-028			58	TB-43L-058	Throttle Wire	1				
29	TB-43L-029	Piston Ring	2	59	TB-43L-059	Screw	2				
30	TB-43L-030	Cylinder Gasket	1	60	TB-43L-060	Air Cleaner Body	1				

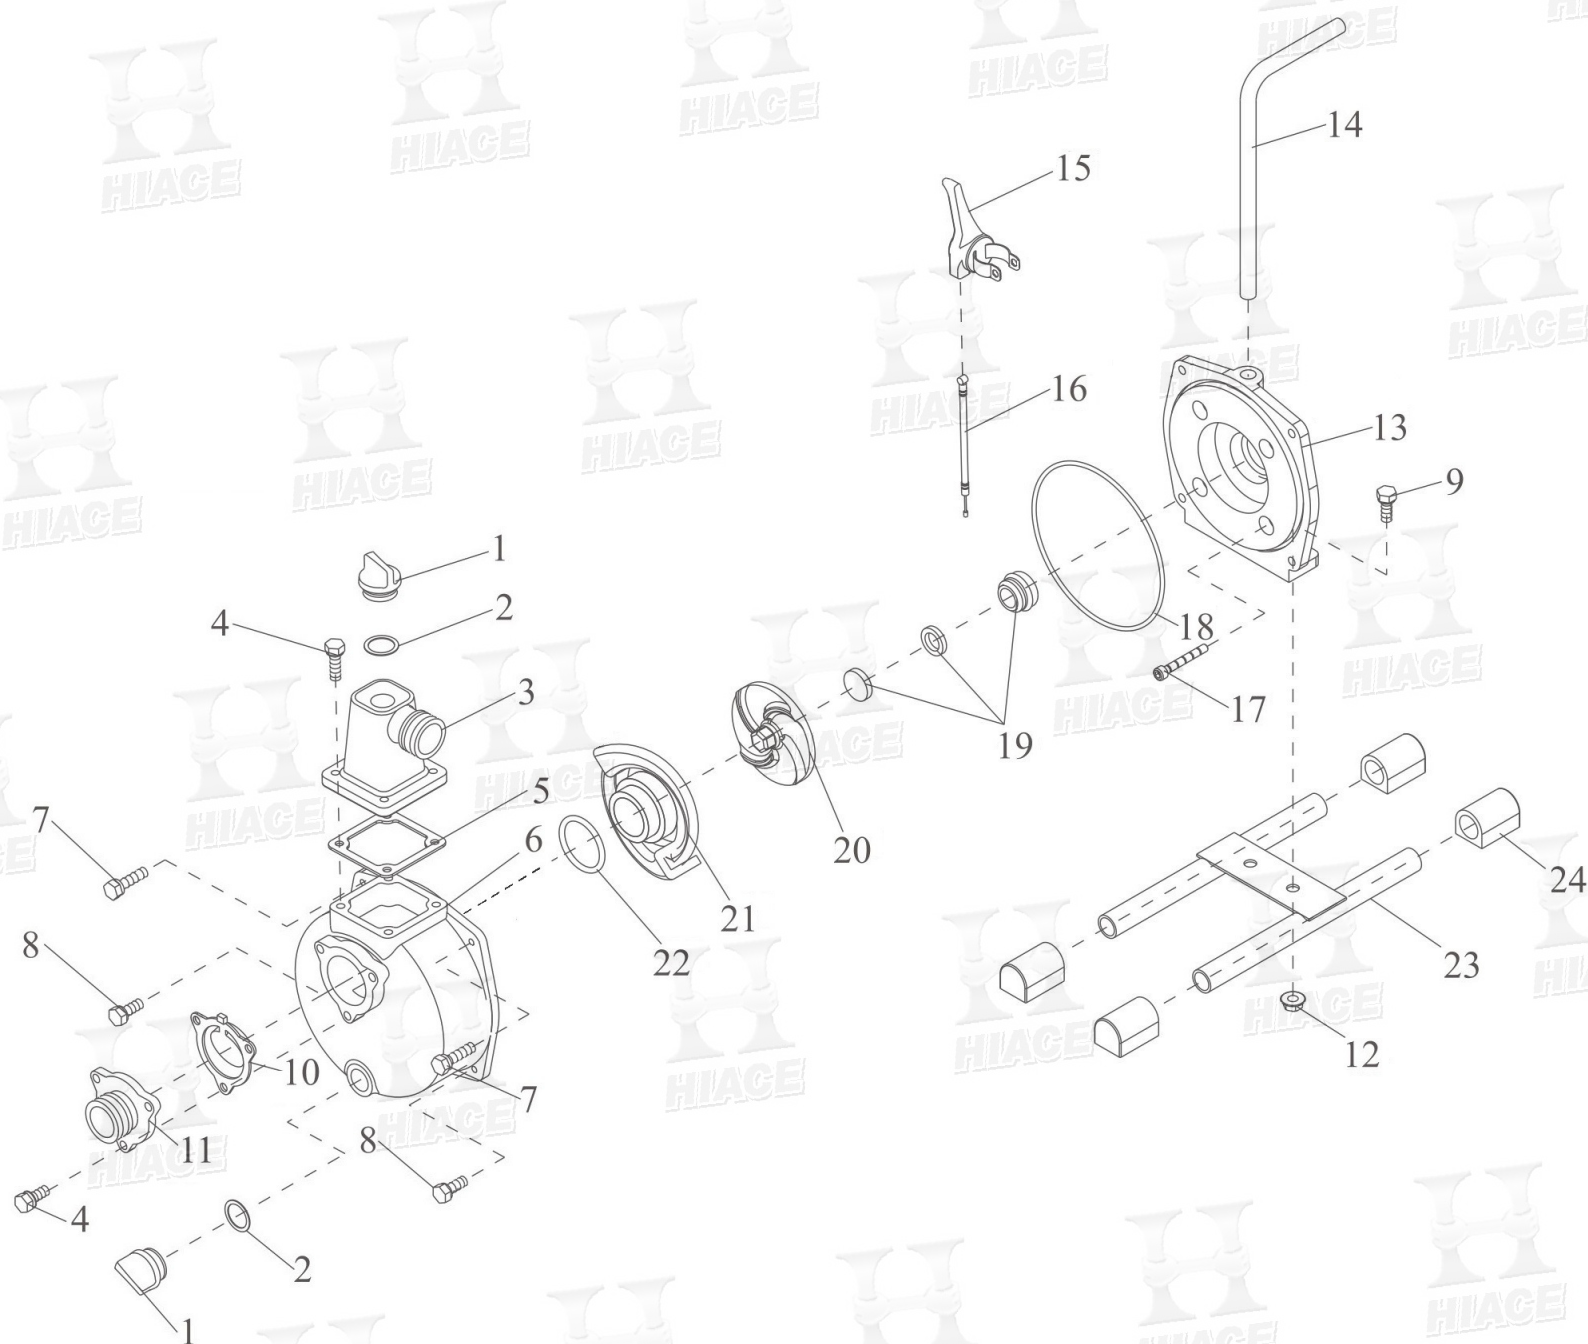

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	WPL-01	PLUG SET	2	21	WPL-21	VOLUTE CASING	1
2	WPL-02	O-RING	2	22	WPL-22	O-RING	1
3	WPL-03	DELIVERY FLANGE	1	23	WPL-23	H BASE	1
4	WPL-04	HEXAGON BOLT	7	24	WPL-24	RUBBER MAT	4
5	WPL-05	DELIVERY FLANGE PACKING	1				
6	WPL-06	PUMP CASING	1				
7	WPL-07	HEXAGON BOLT	2				
8	WPL-08	HEXAGON BOLT	2				
9	WPL-09	HEXAGON BOLT	2				
10	WPL-10	CHECK VALVE	1				
11	WPL-11	SUCTION FLANGE	1				
12	WPL-12	FLANGE NUT	4				
13	WPL-13	FLANGE BRACKET	1				
14	WPL-14	HANDLE SET	1				
15	WPL-15	THROTTLE LEVER	1				
16	WPL-16	THROTTLE WIRE COMP.	1				
17	WPL-17	HEXAGON SOCKETBOLT AND SEAL WASHER	4				
18	WPL-18	O-RING	1				
19	WPL-19	MECHANICAL SEAL	1				
20	WPL-20	IMPELLER	1				