




PARTS INFORMATION

TL-43L

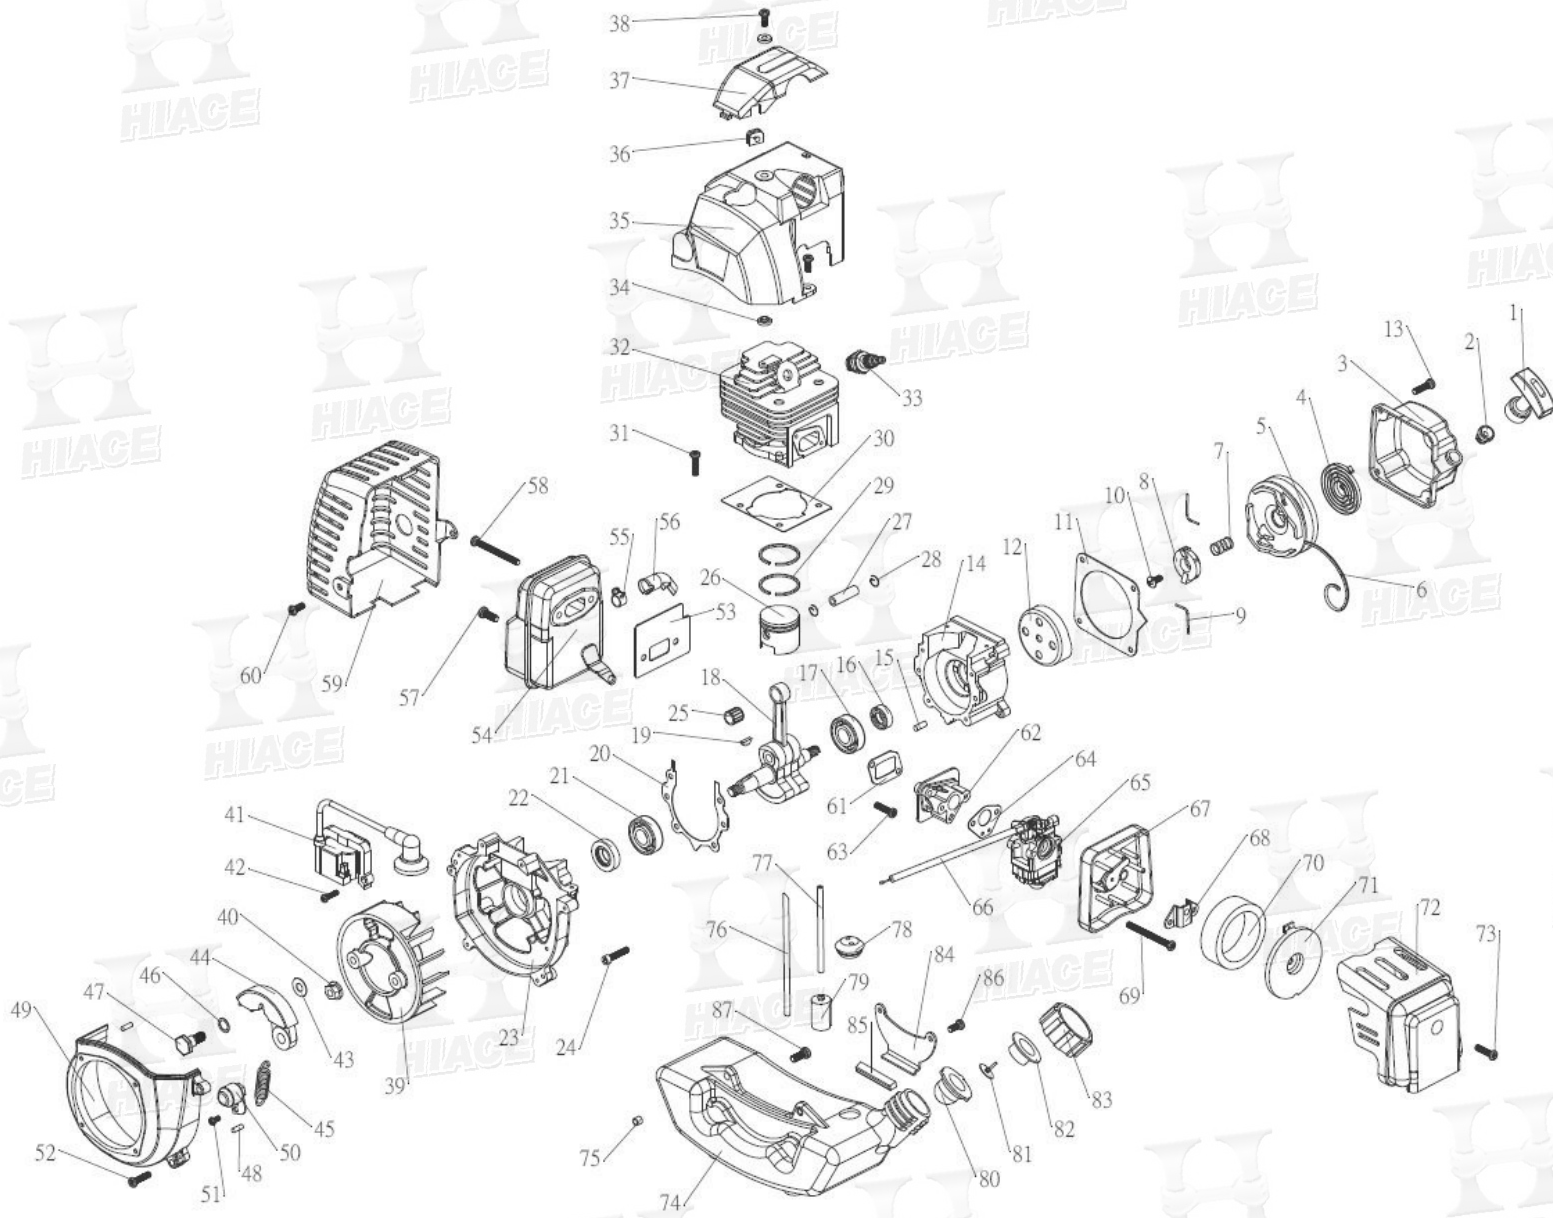


Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	TL-43L-001	Starter Handle	1	31	TL-43L-031	Screw	4	61	TL-43L-061	Inlet Mainifold Gasket	1
2	TL-43L-002	Insulator	1	32	TL-43L-032	Cylinder	1	62	TL-43L-062	Inlet Mainifold	1
3	TL-43L-003	Recoil Starter Body	1	33	TL-43L-033	Spark Plug	1	63	TL-43L-063	Screw	1
4	TL-43L-004	Recoil Spring	1	34	TL-43L-034	Space, Cylinder Protector Cap	2	64	TL-43L-064	Diaphragm Carburetor Gasket	1
5	TL-43L-005	Starter Rope Reel	1	35	TL-43L-035	Cylinder Protector	1	65	TL-43L-065	Diaphragm Carburetor	1
6	TL-43L-006	Starter Rope	1	36	TL-43L-036	Clamp, Coil	1	66	TL-43L-066	Throttle Wire	1
7	TL-43L-007	Starter Pawl	1	37	TL-43L-037	Cylinder Protector Cap	1	67	TL-43L-067	Air Cleaner Body	1
8	TL-43L-008	Pawl Holder	1	38	TL-43L-038	Screw	1	68	TL-43L-068	Air Cleaner Holder	1
9	TL-43L-009	Clip	2	39	TL-43L-039	Magneto Rotor	1	69	TL-43L-069	Screw	2
10	TL-43L-010	Starter Screw	1	40	TL-43L-040	Nut	1	70	TL-43L-070	Air Cleaner Sponge	1
11	TL-43L-011	Starter Gasket	1	41	TL-43L-041	Ignition Coil	1	71	TL-43L-071	Air Cleaner Middle Cap	1
12	TL-43L-012	Starter Pulley	1	42	TL-43L-042	Screw	2	72	TL-43L-072	Air Cleaner Cap	1
13	TL-43L-013	Screw	4	43	TL-43L-043	Washer	2	73	TL-43L-073	Screw	1
14	TL-43L-014	Crank Case (B)	1	44	TL-43L-044	Clutch Arm Comp.	2	74	TL-43L-074	Fuel Tank	1
15	TL-43L-015	Pin	2	45	TL-43L-045	Clutch Spring	1	75	TL-43L-075	Collar	2
16	TL-43L-016	12 22 7 Oil Seal	1	46	TL-43L-046	10MM Wavy Washer	2	76	TL-43L-076	Oil Pipe	1
17	TL-43L-017	Ball Bearing 6202 C3	1	47	TL-43L-047	Clutch Step Bolt	2	77	TL-43L-077	Oil Pipe	1
18	TL-43L-018	Crank Shaft	1	48	TL-43L-048	Pin	2	78	TL-43L-078	Hose Seat	1
19	TL-43L-019	Wood-Ruff Key	1	49	TL-43L-049	Fan Case	1	79	TL-43L-079	Oil Cleaner	1
20	TL-43L-020	Crank Case Gasket	1	50	TL-43L-050	Stop Switch	1	80	TL-43L-080	Tank Inner Compressor	1
21	TL-43L-021	Ball Bearing 6202 C3	1	51	TL-43L-051	Screw	1	81	TL-43L-081	Tank Cap Sponge	1
22	TL-43L-022	Oil Seal 15 30 7	1	52	TL-43L-052	Screw	3	82	TL-43L-082	Tank Inner Cap	1
23	TL-43L-023	Crank Case (A)	1	53	TL-43L-053	Muffler Gasket	1	83	TL-43L-083	Tank Cap	1
24	TL-43L-024	Screw	4	54	TL-43L-054			84	TL-43L-084	Fuel Tank Holder	1
25	TL-43L-025	Needle Bearing	1	55	TL-43L-055	Muffler	1	85	TL-43L-085		
26	TL-43L-026			56	TL-43L-056			86	TL-43L-086	Screw	2
27	TL-43L-027	Piston	1	57	TL-43L-057	Screw	1				
28	TL-43L-028			58	TL-43L-058	Screw	2				
29	TL-43L-029	Piston Ring	2	59	TL-43L-059	Muffler Protector	1				
30	TL-43L-030	Cylinder Gasket	1	60	TL-43L-060	Screw	1				



PARTS INFORMATION

WATER PUMP-WPL

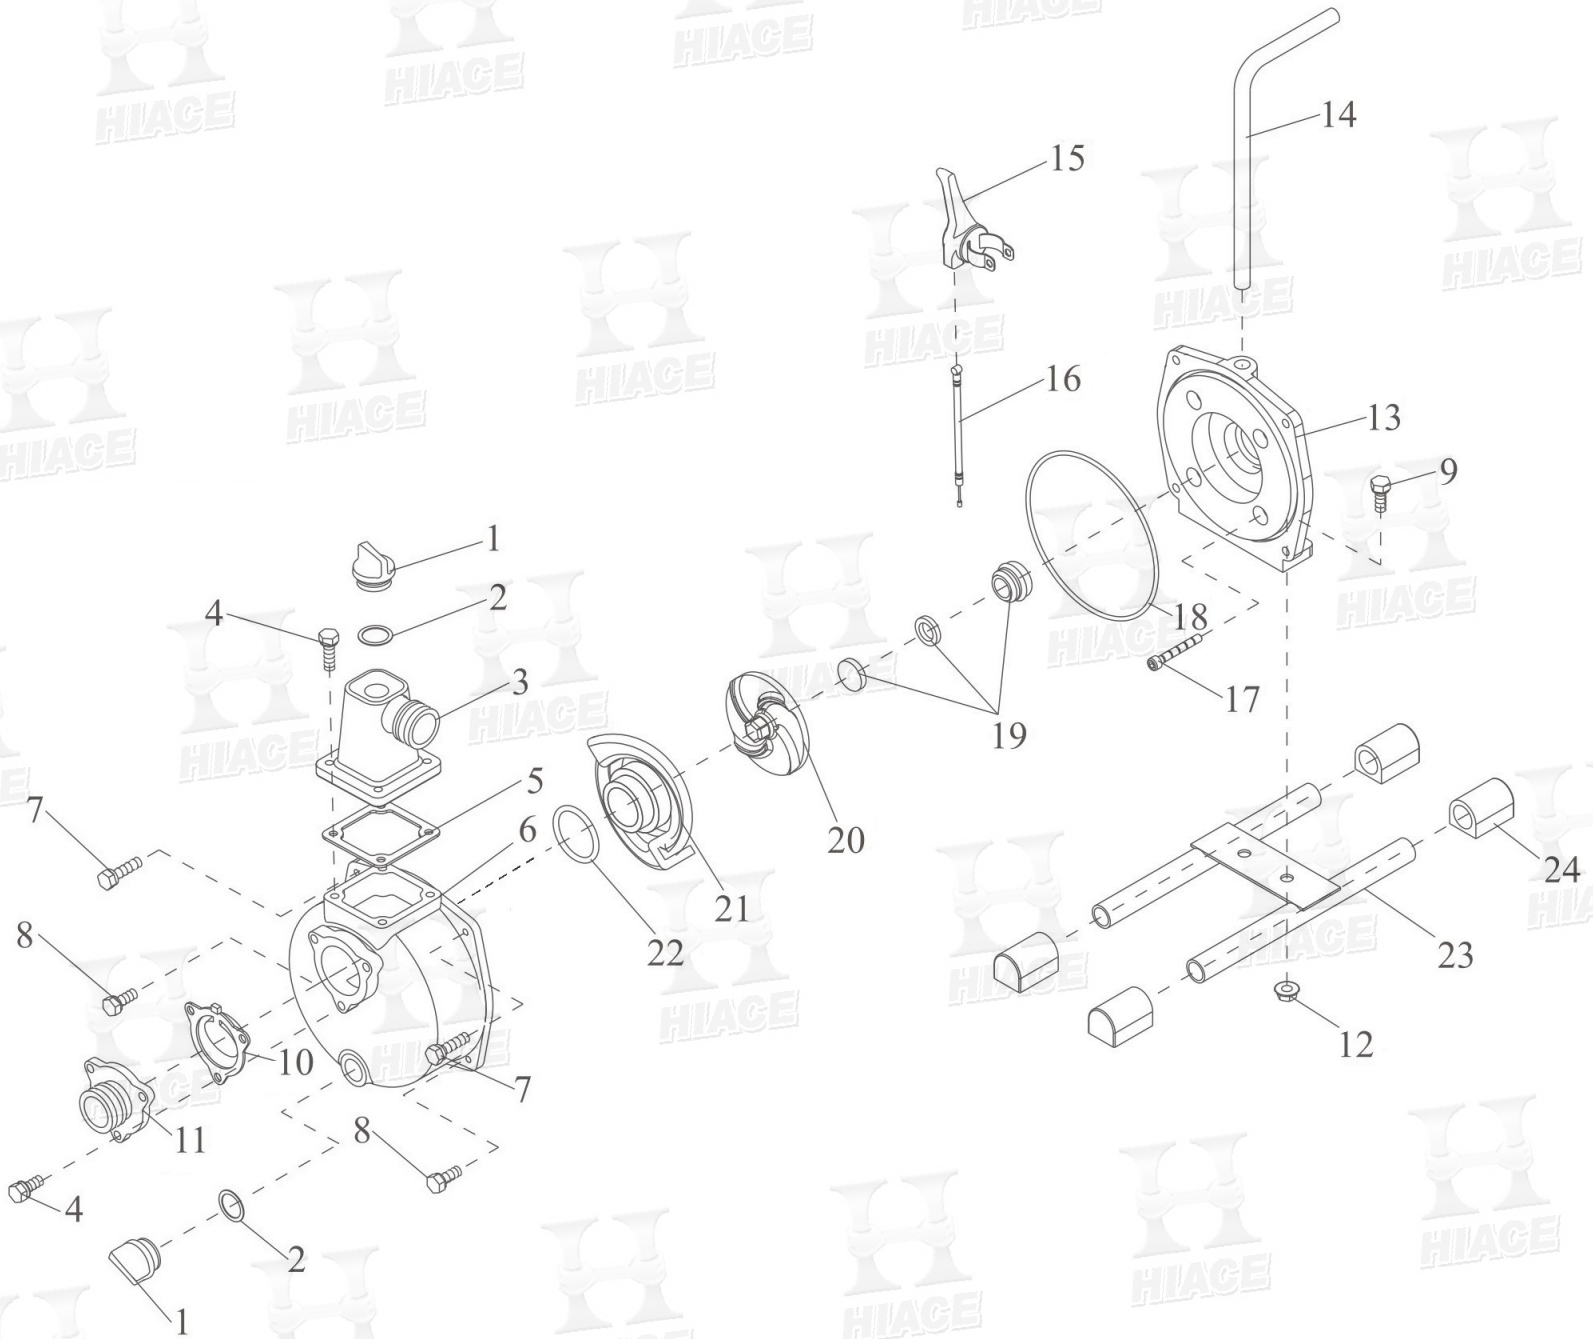

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	WPL-01	PLUG SET	2	21	WPL-21	VOLUTE CASING	1
2	WPL-02	O-RING	2	22	WPL-22	O-RING	1
3	WPL-03	DELIVERY FLANGE	1	23	WPL-23	H BASE	1
4	WPL-04	HEXAGON BOLT	7	24	WPL-24	RUBBER MAT	4
5	WPL-05	DELIVERY FLANGE PACKING	1				
6	WPL-06	PUMP CASING	1				
7	WPL-07	HEXAGON BOLT	2				
8	WPL-08	HEXAGON BOLT	2				
9	WPL-09	HEXAGON BOLT	2				
10	WPL-10	CHECK VALVE	1				
11	WPL-11	SUCTION FLANGE	1				
12	WPL-12	FLANGE NUT	4				
13	WPL-13	FLANGE BRACKET	1				
14	WPL-14	HANDLE SET	1				
15	WPL-15	THROTTLE LEVER	1				
16	WPL-16	THROTTLE WIRE COMP.	1				
17	WPL-17	HEXAGON SOCKETBOLT AND SEAL WASHER	4				
18	WPL-18	O-RING	1				
19	WPL-19	MECHANICAL SEAL	1				
20	WPL-20	IMPELLER	1				