PARTS INFORMATION HT-200

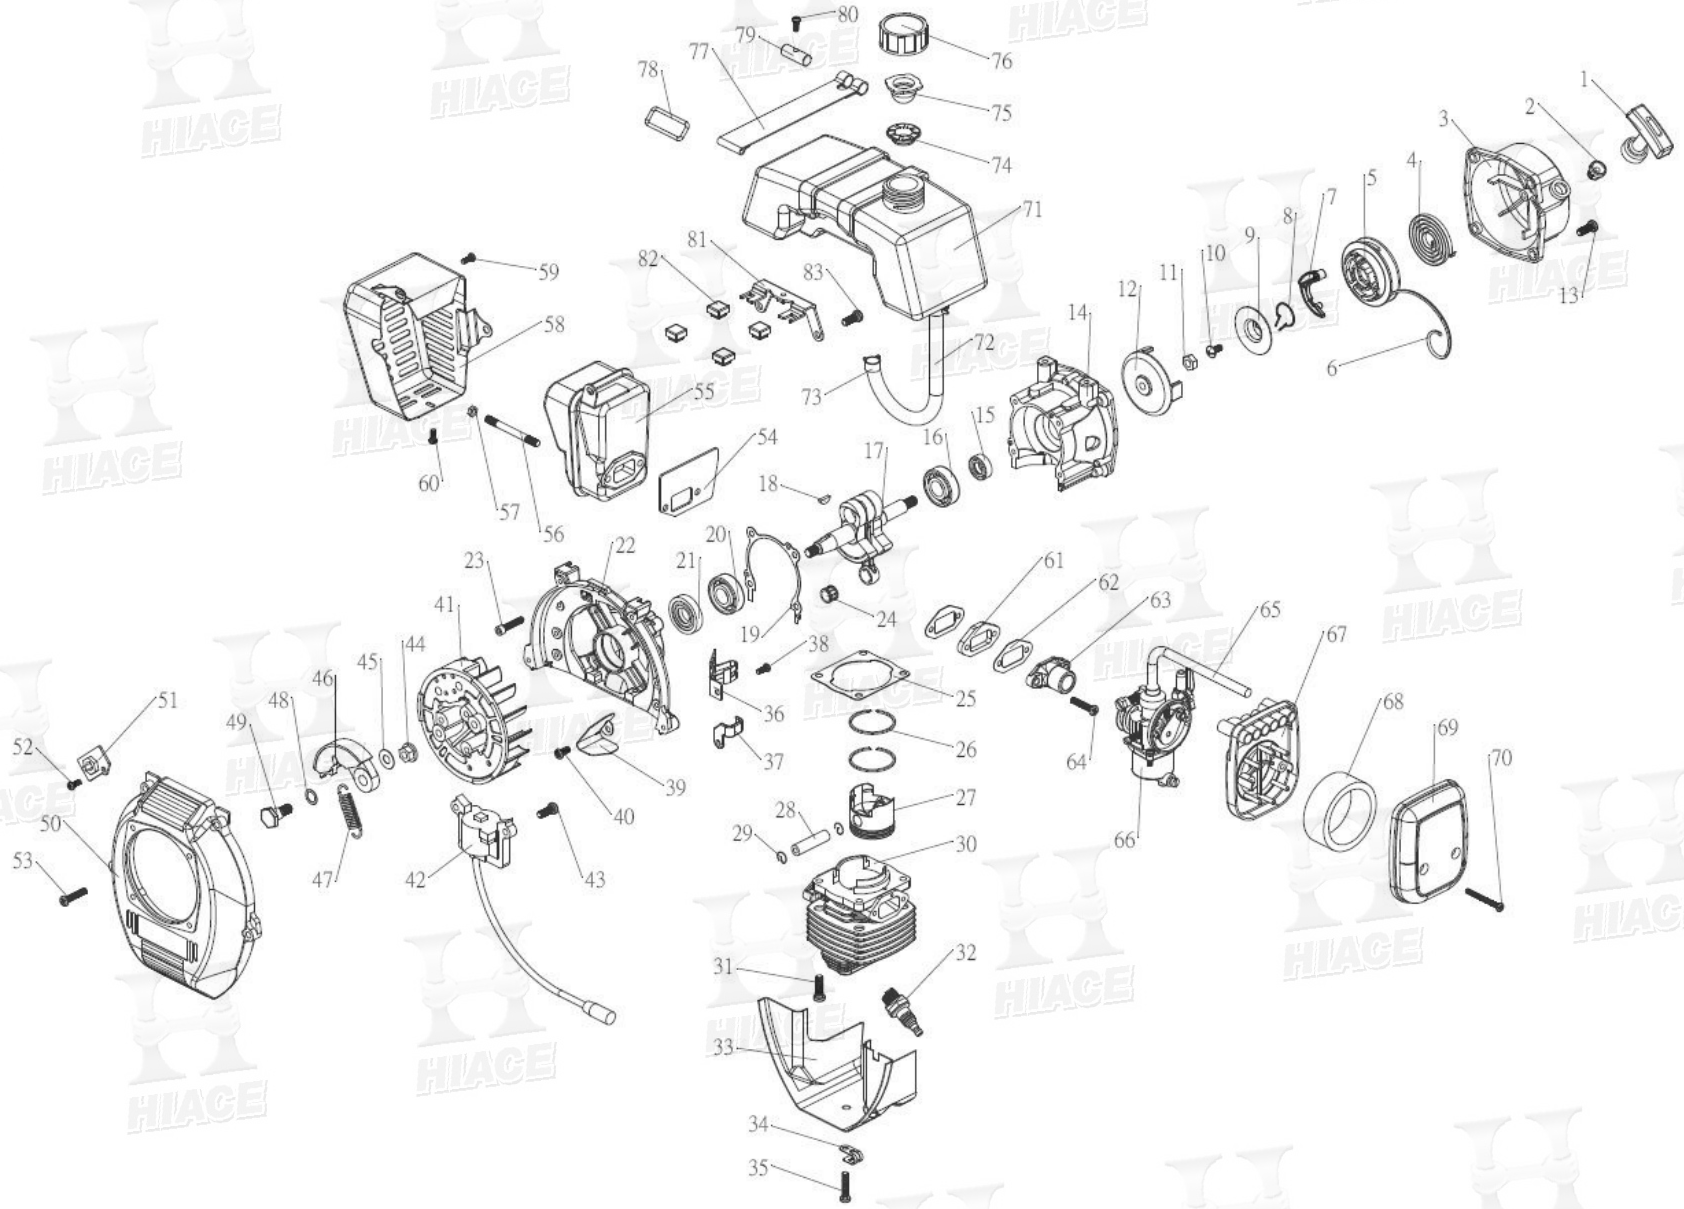

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	HT-200-001	Starter Handle	1	31	HT-200-031	Screw 5*18/S	4	61	HT-200-061	Space, Carburetor	1
2	HT-200-002	Handle Insulator	1	32	HT-200-032	Spark Plug	1	62	HT-200-062	Gasket, Carburetor Space	2
3	HT-200-003	Recoil Starter Case.	1	33	HT-200-033	Engine Shroud	1	63	HT-200-063	Inlet Manifold	1
4	HT-200-004	Recoil Spring	1	34	HT-200-034	Clamp	1	64	HT-200-064	Screw 5*25/SW	2
5	HT-200-005	Starter Rope Reel	1	35	HT-200-035	Screw 5*20/SW	2	65	HT-200-065	Throttle Wire	1
6	HT-200-006	Starter Rope	1	36	HT-200-036	Clip for Crank Case	1	66	HT-200-066	Carburetor	1
7	HT-200-007	Starter Pawl	1	37	HT-200-037	Clamp	1	67	HT-200-067	Air Cleaner Body	1
8	HT-200-008	Clip	1	38	HT-200-038	Screw	1	68	HT-200-068	Sponge	1
9	HT-200-009	Starter Retainer	1	39	HT-200-039	Plate	1	69	HT-200-069	Air Cleaner Cap	1
10	HT-200-010	5*12 Screw	1	40	HT-200-040	Screw 5*10/SW	1	70	HT-200-070	Screw 4*40/SW	2
11	HT-200-011	M8 Nut	1	41	HT-200-041	Magneto Rotor	1	71	HT-200-071	Fuel Tank	1
12	HT-200-012	Starter Pulley	1	42	HT-200-042	Ignition Coil	1	72	HT-200-072	Oil Hose	1
13	HT-200-013	Screw	4	43	HT-200-043	Screw 5*20/SW	2	73	HT-200-073	Oil Hose Clip	2
14	HT-200-014	Crank Case Assy' 1	1	44	HT-200-044	Nut M8	1	74	HT-200-074	Tank Inner Cap	1
15	HT-200-015	Oil Seal 12 22 7	1	45	HT-200-045	Washer M8	1	75	HT-200-075	Tank Cap Compressor	1
16	HT-200-016	Ball Bearing 6202 C3	1	46	HT-200-046	Clutch Arm Comp.	2	76	HT-200-076	Tank Cap	1
17	HT-200-017	Crank Shaft	1	47	HT-200-047	Clutch Spring	1	77	HT-200-077	Fuel Tank Band	1
18	HT-200-018	Semicircle Key	1	48	HT-200-048	Wavy Washer	2	78	HT-200-078		
19	HT-200-019	Crank Case Gasket	1	49	HT-200-049	Clutch Step Bolt	2	79	HT-200-079		
20	HT-200-020	Ball Bearing 6202 C3	1	50	HT-200-050	Fan Case	1	80	HT-200-080		
21	HT-200-021	Oil Seal 15 35 7	1	51	HT-200-051	Stop Switch	1	81	HT-200-081	Fuel Tank Holder	1
22	HT-200-022	Crank Case Assy' 2	1	52	HT-200-052	Screw	1	82	HT-200-082	Fuel Tank Rubber	4
23	HT-200-023	Screw 5*30/S	4	53	HT-200-053	Screw 5*25/SW	3	83	HT-200-083	Screw	2
24	HT-200-024	Needle Bearing	1	54	HT-200-054	Gasket, Muffler	1				
25	HT-200-025	Cylinder Gasket	1	55	HT-200-055	Muffler Comp.	1				
26	HT-200-026	Piston Ring	2	56	HT-200-056	Muffler Bolt	2				
27	HT-200-027	Psiton	1	57	HT-200-057	Nut M5	2				
28	HT-200-028			58	HT-200-058	Muffler Protector	1				
29	HT-200-029			59	HT-200-059	Screw 5*10/SW	1				
30	HT-200-030	Cylinder	1	60	HT-200-060	Screw 4*12/SW	1				

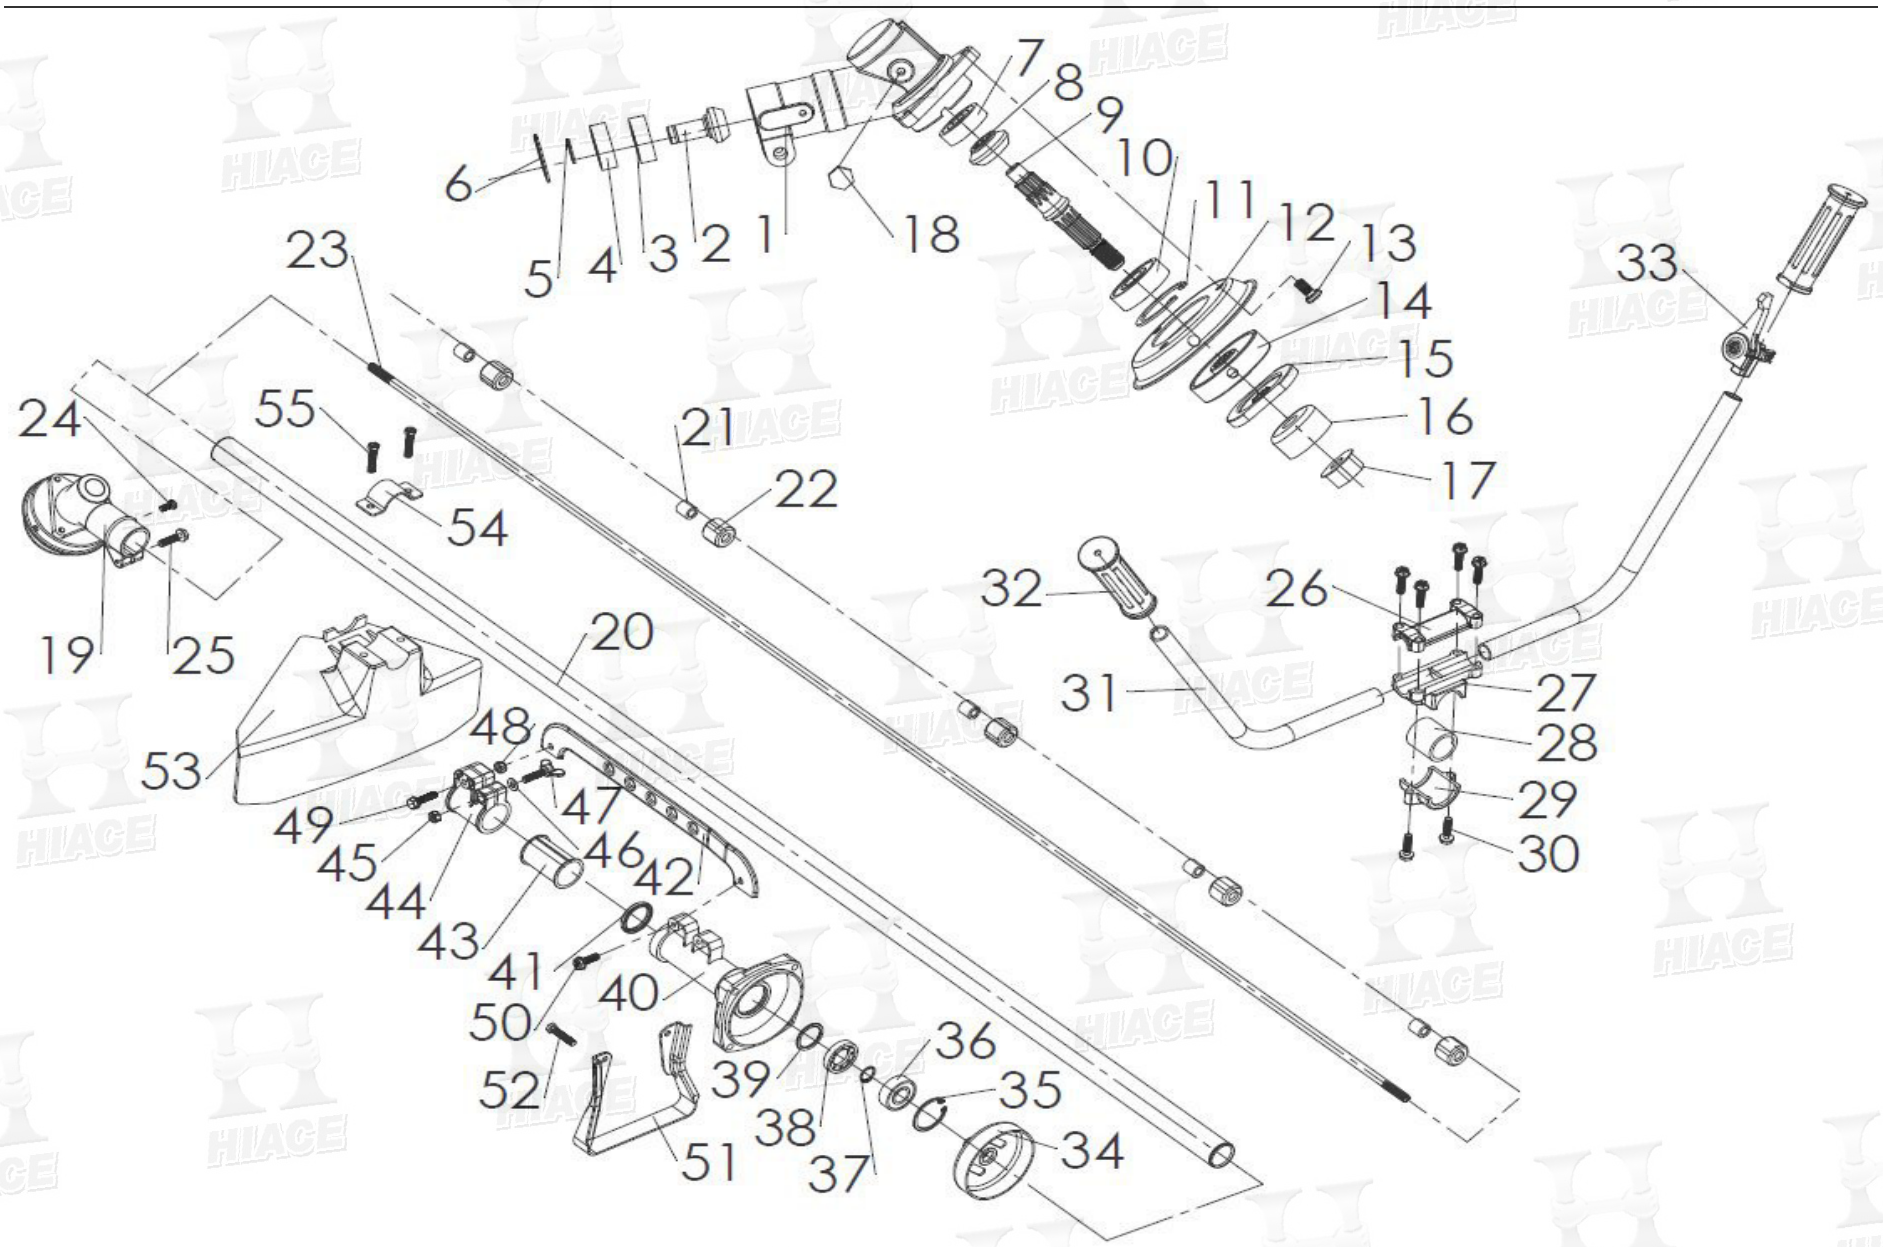

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	RBC-5800-CR4-01	28MM Gear Case	1	31	RBC-5800-CR4-31	18*2.0*375MM L Handle Tube	2
2	RBC-5800-CR4-02	9T*15T Gear Pinion	1	32	RBC-5800-CR4-32	Handle Rubber Cover	2
3	RBC-5800-CR4-03	6001 ZZ Bearing	1	33	RBC-5800-CR4-33	R4 Throttle Lever	1
4	RBC-5800-CR4-04	6001 Bearing	1	34	RBC-5800-CR4-34	9T Clutch Drum	1
5	RBC-5800-CR4-05	S-12 Stop Ring	1	35	RBC-5800-CR4-35	R-35 Stop Ring	1
6	RBC-5800-CR4-06	R-28 Stop Ring	1	36	RBC-5800-CR4-36	6202 ZZ Bearing	1
7	RBC-5800-CR4-07	6001 Bearing	1	37	RBC-5800-CR4-37	S-15 Stop Ring	1
8	RBC-5800-CR4-08	13T*20T Gear Pinion	1	38	RBC-5800-CR4-38	6202 Cushion Rubber	1
9	RBC-5800-CR4-09	13T Gear Shaft	1	39	RBC-5800-CR4-39	28MM Stop Ring	1
10	RBC-5800-CR4-10	6202 2V Bearing	1	40	RBC-5800-CR4-40	28MM Clutch Case	1
11	RBC-5800-CR4-11	R-35 Stop Ring	1	41	RBC-5800-CR4-41	28MM Oil Seal	1
12	RBC-5800-CR4-12	Gear Case Cap	1	42	RBC-5800-CR4-42	5 Holes Hanger	1
13	RBC-5800-CR4-13	5x10 S/W Screw	3	43	RBC-5800-CR4-43	28MM Fixer Pipe	1
14	RBC-5800-CR4-14	13T Cutter Holder	1	44	RBC-5800-CR4-44	Fixer Body	1
15	RBC-5800-CR4-15	13T Cutter Holder Cap	1	45	RBC-5800-CR4-45	6MM Nut	1
16	RBC-5800-CR4-16	Nut Holder Cap	1	46	RBC-5800-CR4-46	6x13x1 Washer	1
17	RBC-5800-CR4-17	10MM Nut (L.)	1	47	RBC-5800-CR4-47	6x45 Wing Screw	1
18	RBC-5800-CR4-18	10x12 Screw	1	48	RBC-5800-CR4-48	6MM Nut	1
19	RBC-5800-CR4-19	28mm 13T Gear Case Assy	1	49	RBC-5800-CR4-49	6x20 Screw	1
20	RBC-5800-CR4-20	28*2.0*1500MM Tube	1	50	RBC-5800-CR4-50	6x20 S/W Screw	1
21	RBC-5800-CR4-21	8*14*14MM Bushing Assy	5	51	RBC-5800-CR4-51	Stander	1
22	RBC-5800-CR4-22	24MM Cushion Rubber	5	52	RBC-5800-CR4-52	6x30 S/W Screw	4
23	RBC-5800-CR4-23	8MM*9T*1545MM Driving Shaft	1	53	RBC-5800-CR4-53	Safety Guard	1
24	RBC-5800-CR4-24	5x12 S/W Screw	1	54	RBC-5800-CR4-54	Cover Bracket	1
25	RBC-5800-CR4-25	6x25 S/W Screw	1	55	RBC-5800-CR4-55	6x30 S/W Screw	2
26	RBC-5800-CR4-26	Handle Holder (A)	1				
27	RBC-5800-CR4-27	Handle Holder (B)	1				
28	RBC-5800-CR4-28	28MM Rubber Cover	1				
29	RBC-5800-CR4-29	Handle Holder (C)	1				
30	RBC-5800-CR4-30	6x25 S/W Screw	6				