PARTS INFORMATION HT-328L

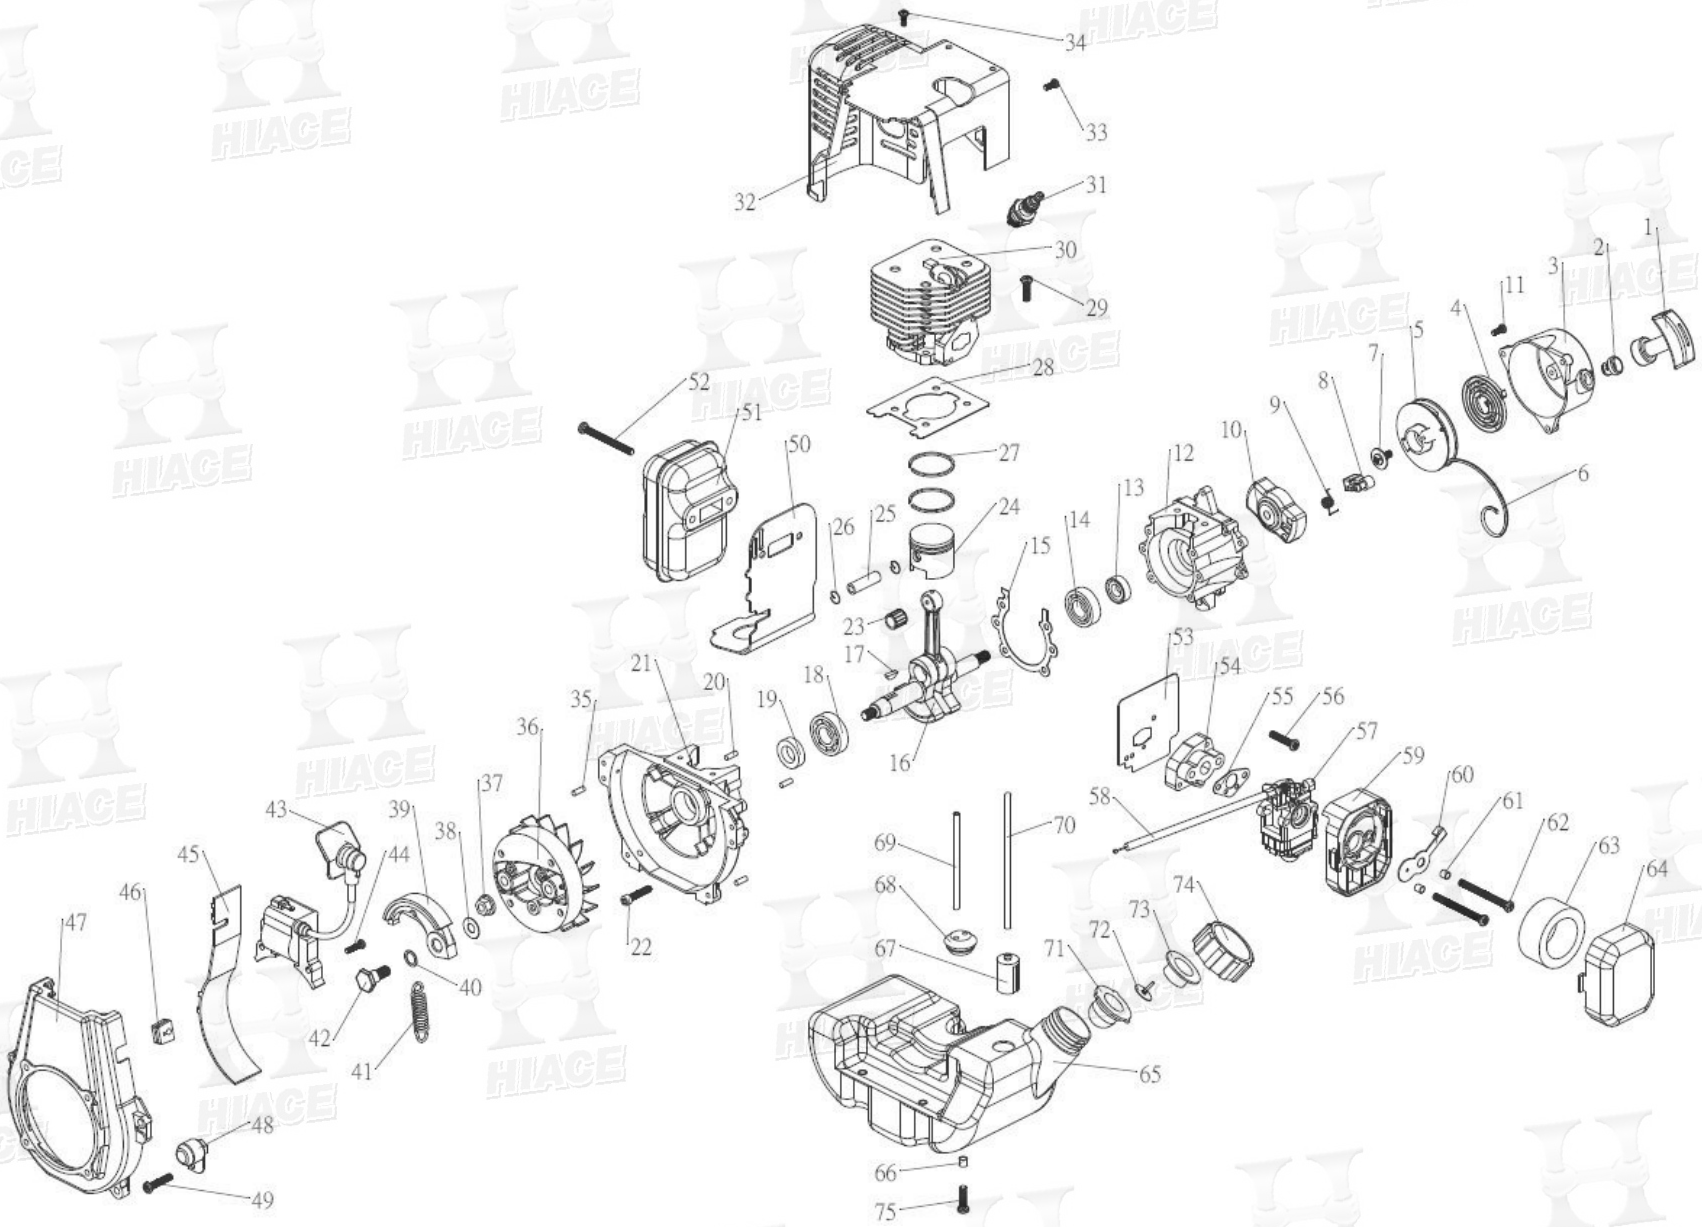

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	HT-328L-001	Starter Handle	1	31	HT-328L-031	Spark Plug	1	61	HT-328L-061	Collar	2
2	HT-328L-002	Insulator	1	32	HT-328L-032	Cylinder Protector	1	62	HT-328L-062	Screw	
3	HT-328L-003	Recoil Starter Body	1	33	HT-328L-033	Screw		63	HT-328L-063	Cleaner Sponge	1
4	HT-328L-004	Recoil Spring	1	34	HT-328L-034	Screw		64	HT-328L-064	Air Cleaner Cap	1
5	HT-328L-005	Starter Rope Reel	1	35	HT-328L-035	4*11.8 Pin	2	65	HT-328L-065	Fuel Tank	1
6	HT-328L-006	Starter Rope	1	36	HT-328L-036	Magneto Rotor	1	66	HT-328L-066	Collar	3
7	HT-328L-007	Starter Screw	1	37	HT-328L-037	M8 Nut	1	67	HT-328L-067	Gasoline Cleaner	1
8	HT-328L-008	Starter Pawl	1	38	HT-328L-038	M8 Washer	1	68	HT-328L-068	Hose Seat	1
9	HT-328L-009	Starter Pawl Spring	1	39	HT-328L-039	Clutch Arm Comp.	2	69	HT-328L-069	Oil Pipe	1
10	HT-328L-010	Starter Pulley	1	40	HT-328L-040	Wave Washer	2	70	HT-328L-070	Oil Pipe	1
11	HT-328L-011	Screw	3	41	HT-328L-041	Clutch Spring	1	71	HT-328L-071	Tank Inner Compressor	1
12	HT-328L-012	Crank Case (B)	1	42	HT-328L-042	Clutch Step Bolt	2	72	HT-328L-072	Tank Cap Sponge	1
13	HT-328L-013	12 22 7 Oil Seal	1	43	HT-328L-043	Ignition Coil	1	73	HT-328L-073	Tank Inner Cap	1
14	HT-328L-014	Ball Bearing 6002 C3	1	44	HT-328L-044	Screw		74	HT-328L-074	Tank Cap	1
15	HT-328L-015	Crank Case Gasket	1	45	HT-328L-045	Flash Pan	1	75	HT-328L-075	Screw	
16	HT-328L-016	Crank Shaft	1	46	HT-328L-046	Clamp, Coil	1				
17	HT-328L-017	Wood-Ruff Key	1	47	HT-328L-047	Fan Case	1				
18	HT-328L-018	Ball Bearing 6202 C3	1	48	HT-328L-048	Stop Switch	1				
19	HT-328L-019	15 25 7 Oil Seal	1	49	HT-328L-049	Screw					
20	HT-328L-020	4*11.8 Pin	2	50	HT-328L-050	Muffler Gasket	1				
21	HT-328L-021	Crank Case (A)	1	51	HT-328L-051	Muffler	1				
22	HT-328L-022	Screw		52	HT-328L-052	Muffler Screw	2				
23	HT-328L-023	Needle Bearing	1	53	HT-328L-053	Space Gasket	1				
24	HT-328L-024	Piston	1	54	HT-328L-054	Space	1				
25	HT-328L-025			55	HT-328L-055	Carburetor Gasket	1				
26	HT-328L-026			56	HT-328L-056	Screw					
27	HT-328L-027	Piston Ring	2	57	HT-328L-057	Diaphragm Carburetor	1				
28	HT-328L-028	Cylinder Gasket	1	58	HT-328L-058	Throttle Wire	1				
29	HT-328L-029	Screw		59	HT-328L-059	Air Cleaner Body	1				
30	HT-328L-030	Cylinder	1	60	HT-328L-060	Choke Lever	1				

PARTS INFORMATION

RBC-5600-26C-R4

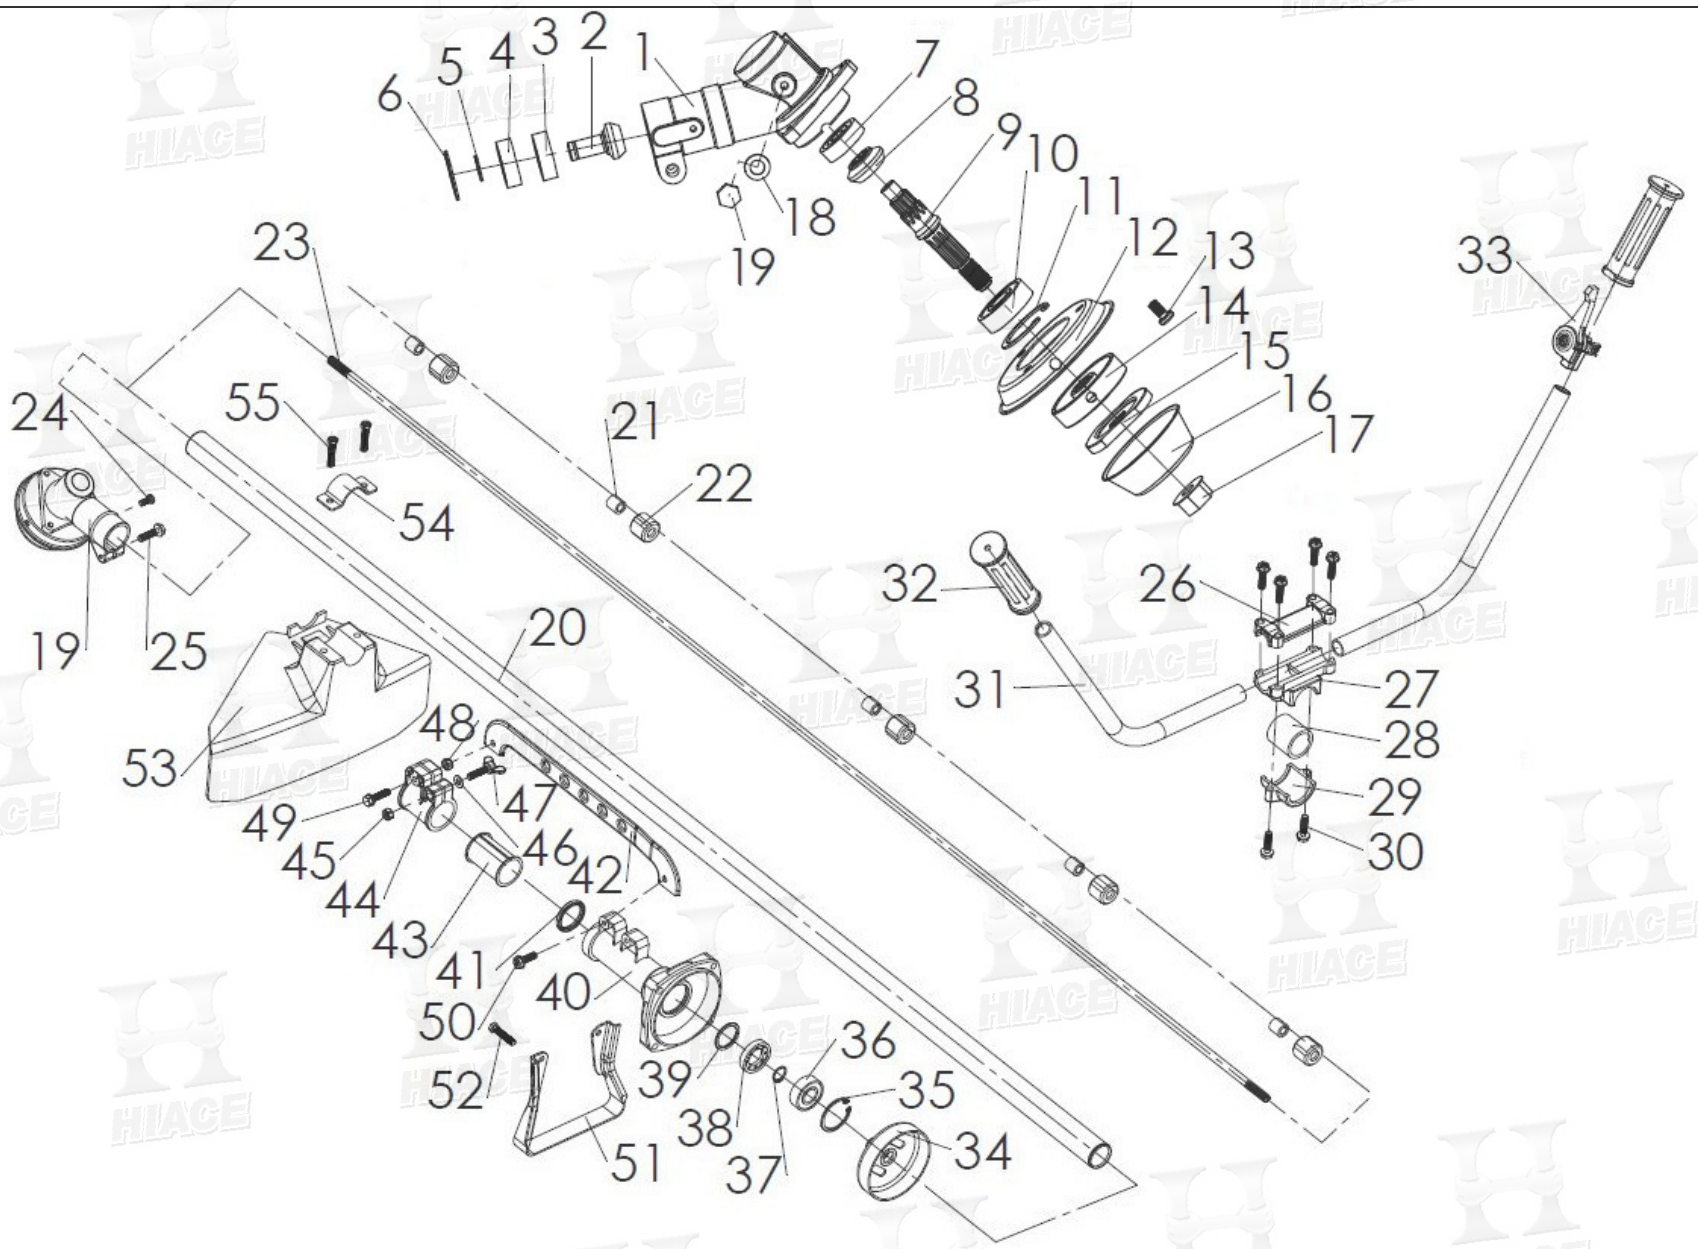

Item	Part No.	Description	QTY.	Item	Part No.	Description	QTY.
1	RBC-5600-CR4-01	26MM Gear Case	1	31	RBC-5600-CR4-31	18*2.0*375MM L Handle Tube	2
2	RBC-5600-CR4-02	7*16T Gear Pinion	1	32	RBC-5600-CR4-32	Handle Rubber Cover	2
3	RBC-5600-CR4-03	6000 ZZ Bearing	1	33	RBC-5600-CR4-33	R4 Throttle Lever	1
4	RBC-5600-CR4-04	6000 Bearing	1	34	RBC-5600-CR4-34	7T Clutch Drum	1
5	RBC-5600-CR4-05	Stop Ring	1	35	RBC-5600-CR4-35	R-35 Stop Ring	1
6	RBC-5600-CR4-06	Stop Ring	1	36	RBC-5600-CR4-36	6202 ZZ Bearing	1
7	RBC-5600-CR4-07	629 Bearing	1	37	RBC-5600-CR4-37	S-15 Stop Ring	1
8	RBC-5600-CR4-08	10*20T Gear Pinion	1	38	RBC-5600-CR4-38	6202 Cushion Rubber	1
9	RBC-5600-CR4-09	Gear Shaft	1	39	RBC-5600-CR4-39	Washer	1
10	RBC-5600-CR4-10	6201-2RS Bearing	1	40	RBC-5600-CR4-40	26MM Clutch Case	1
11	RBC-5600-CR4-11	Stop Ring	1	41	RBC-5600-CR4-41	26MM Oil Seal	1
12	RBC-5600-CR4-12	Gear Case Cover	1	42	RBC-5600-CR4-42	5 Holes Hanger	1
13	RBC-5600-CR4-13	Screw	3	43	RBC-5600-CR4-43	26MM Fixer Pipe	1
14	RBC-5600-CR4-14	Cutter Holder	1	44	RBC-5600-CR4-44	Fixer Body	1
15	RBC-5600-CR4-15	Cutter Holder Cap	1	45	RBC-5600-CR4-45	6MM Nut	1
16	RBC-5600-CR4-16	Nut Holder Cap	1	46	RBC-5600-CR4-46	6x13x1 Washer	1
17	RBC-5600-CR4-17	10MM Nut（L.）	1	47	RBC-5600-CR4-47	Wing Screw	1
18	RBC-5600-CR4-18	Washer	1	48	RBC-5600-CR4-48	6MM Nut	1
19	RBC-5600-CR4-19	Screw	1	49	RBC-5600-CR4-49	Screw	1
20	RBC-5600-CR4-20	26*1.75*1500MM Tube	1	50	RBC-5600-CR4-50	Screw	1
21	RBC-5600-CR4-21	7*14*14 Bushing Ass'y	5	51	RBC-5600-CR4-51	Stander	1
22	RBC-5600-CR4-22	23MM Cushion Rubber	5	52	RBC-5600-CR4-52	Screw	4
23	RBC-5600-CR4-23	7MM*7T*1545MM Driving Shaft	1	53	RBC-5600-CR4-53	Safety Guard	1
24	RBC-5600-CR4-24	Screw	1	54	RBC-5600-CR4-54	Cover Bracket	1
25	RBC-5600-CR4-25	Screw	1	55	RBC-5600-CR4-55	Screw	2
26	RBC-5600-CR4-26	Handle Holder (A)	1		1~19	26mm 26C Gear Case Ass'y	
27	RBC-5600-CR4-27	Handle Holder (B)	1				
28	RBC-5600-CR4-28	26MM Rubber Cover	1				
29	RBC-5600-CR4-29	Handle Holder (C)	1				
30	RBC-5600-CR4-30	Screw	6				